








## **3X1 STORAGE FRAME**

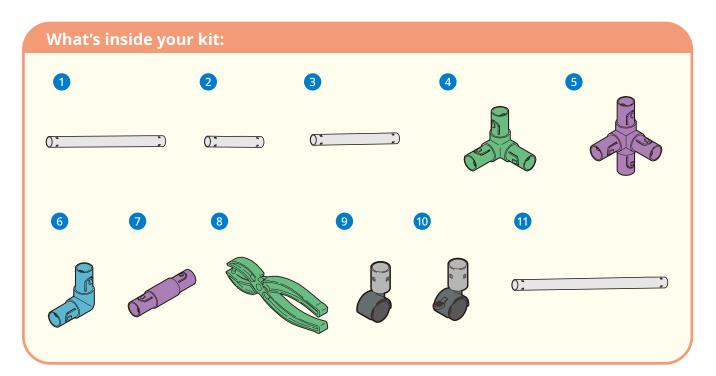

NO.	DESCRIPTION	QTY.	ITEM NO.
1	E-391mm TUBE	8	1060-W17-F8S
2	E-83mm TUBE	14	1060-W17-E3S
3	E-178mm TUBE	6	1061-W17-A6S
4	E-3-WAY CONNECTOR	10	1060-W10-B1G
5	E-4-WAY CONNECTOR	8	1060-W10-D1P
6	E-CORNER CONNECTOR	6	1060-W10-A1B2
7	E-STRAIGHT CONNECTOR	2	1136-W10-A1P
8	E-RELEASE PLIERS	1	1060-W85-M1G
9	E-CASTER	2	1136-W85-F1SR
10	E-CASTER WITH LOCK	2	1136-W85-F2SR
11	E-660mm TUBE	9	1061-W17-B7S

### INSTRUCTION MANUAL

#### Assembled by an adult.

#### **IMPORTANT:**


This set is intended for adult assembly only. Please read all instructions carefully before beginning.

- 1. Keep unused parts in the marked bag(s) until required. Some parts appear similar and may be confused.
- 2. Assemble each section separately as shown in the exploded diagrams.
- 3. If parts need to be loosened, use the included "release pliers" to assist you.
- 4. After each section is complete, assemble the completed sections together into the final unit.

#### **ASSEMBLY & DISASSEMBLY**

· How to Assemble & Disassemble Tubes and Connectors

Note: Do not hold a tube or connector where the insertion takes place, fingers may be pinched.

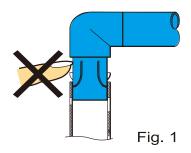

(1) Push the corner connector onto the tube and twist the tube until a "click" is heard.



Fig. 2

- (2) Finish the assembly of both connectors with the tube in between. Then insert the connectors into two separate tubes to complete a panel. (Fig. 3-1) Do not assemble the tubes and
  - connectors one by one. (Fig. 3-2)

 


Fig. 3-1

 


Fig. 3-2

(3) Position the release plier nodes over the holes where the safety lock pins are visible. Squeeze gently to release the tube from the connector.


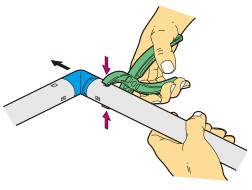


Fig. 4

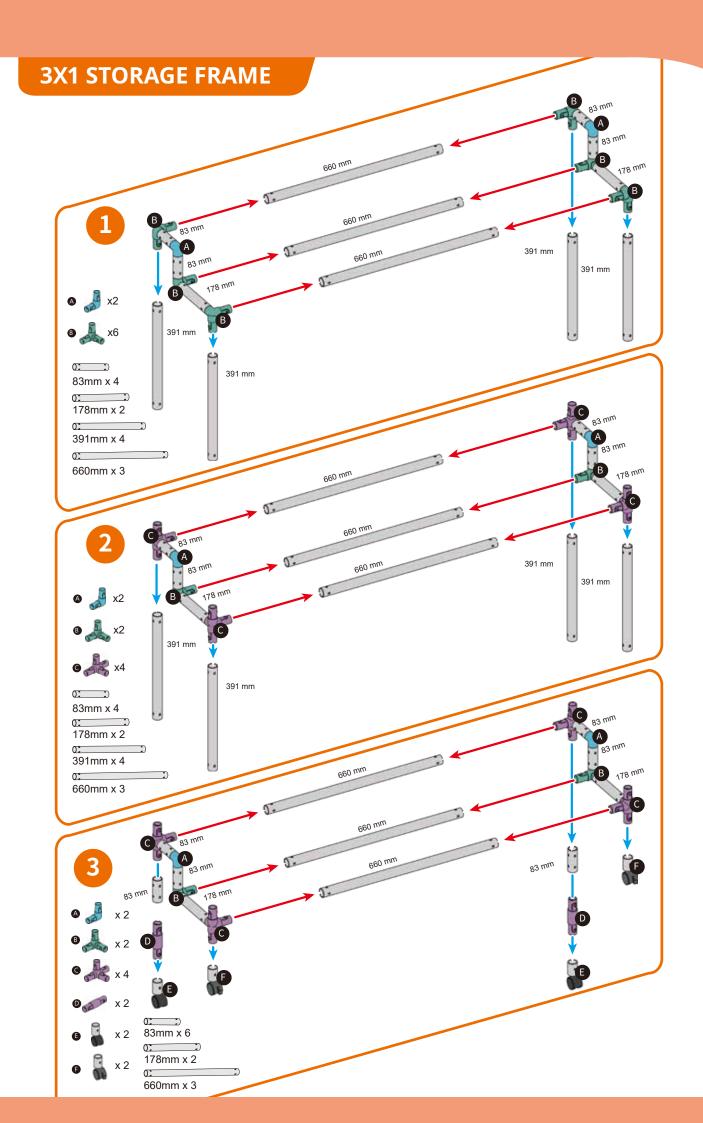

Done! 2 #1142 #T099-1 #T099S

# GENIUS TOY TAIWAN CO., LTD. www.gigotoys.com