



SMART BRICKS

7412R

ROBOTICS

SMART MACHINES

TRACKS & TREADS



8+
AGES

197
PIECES

8
MODELS



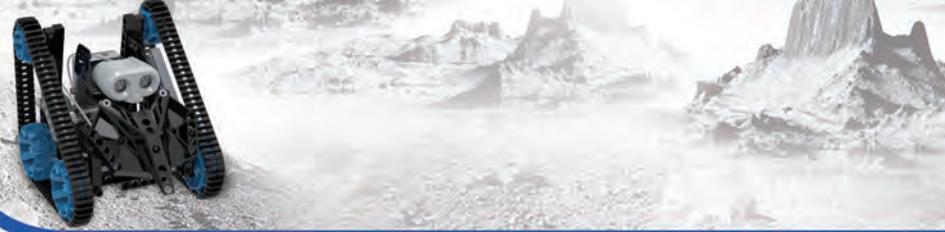


Table Of Contents



Table of Contents	1
Safety Information	2
Kit Contents	3
Tips and Tricks	4
Robots: Sensing, Thinking Machines	
Getting Started	6
About Ultrasound	7
Downloading and Using the App	8
Writing Programs	9
The Models:	
Trackbot	14
Programming the Trackbot	18
Scout Robot	19
Programming the Scout Robot	23
Tracker Bot	24
Programming the Tracker Bot	30
Dozer Bot	31
Programming the Dozer Bot	36
Fire Rescue Robot	37
Programming the Fire Rescue Robot	42
Conveyor Belt	43
Programming the Conveyor Belt	48
Escalator	49
Programming the Escalator	56
Tundra Explorer	57
Programming the Tundra Explorer	61

TIP!

Above each set of assembly instructions, you will find a blue bar:

»» It shows you the difficulty level for the model's assembly:



easy

medium

hard

DOWNLOAD THE PROGRAMMING APP

The app is the "brain" of your robotic models. It uses the feedback from the ultrasonic sensor and program instructions to control the models.

You can download the free app for iOS devices from the iOS App Store, or for Android devices from Google Play.

- iOS devices must support Bluetooth 4.0 and must be running iOS 11.0 or later.
- Android devices must support Bluetooth 4.0 and must be running Android 4.4 or later.



Android app



iOS app



Safety Information

Safety Information

WARNING. Only for use by children aged 8 years and older. Instructions for parents or other supervising adults are included and have to be observed. Keep packaging and instructions as they contain important information.

WARNING. Not suitable for children under 3 years. Choking hazard — small parts may be swallowed or inhaled. Store the experiment material and assembled models out of the reach of small children.

Safety for Experiments with Batteries

- ››› The wires are not to be inserted into socket-outlets. Never perform experiments using household current! The high voltage can be extremely dangerous or fatal!
- ››› To operate the models, you will need three AA batteries (1.5-volt, type AA/LR6) or three AA rechargeable batteries (1.2-volt, type AA, HR6/KR6), which could not be included in the kit due to their limited shelf life.
- ››› The supply terminals are not to be short-circuited. A short circuit can cause the wires to overheat and the batteries to explode.
- ››› Different types of batteries or new and used batteries are not to be mixed.
- ››› Do not mix old and new batteries.
- ››› Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- ››› Batteries are to be inserted with the correct polarity. Press them gently into the battery compartment. See page 4.
- ››› Always close battery compartments with the lid.
- ››› Non-rechargeable batteries are not to be recharged. They could explode!
- ››› Rechargeable batteries are only to be charged under adult supervision.
- ››› Rechargeable batteries are to be removed from the toy before being charged.
- ››› Exhausted batteries are to be removed from the toy.
- ››› Dispose of used batteries in accordance with environmental provisions, not in the household trash.
- ››› Be sure not to bring batteries into contact with coins, keys, or other metal objects.
- ››› Avoid deforming the batteries.

As all of the experiments use batteries, have an adult check the experiments or models before use to make sure they are assembled properly. Always operate the motorized models under adult supervision.

After you are done experimenting, remove the batteries from the battery compartments. Note the safety information accompanying the individual experiments or models!

Notes on Disposal of Electrical and Electronic Components

The electronic components of this product are recyclable. For the sake of the environment, do not throw them into the household trash at the end of their lifespan. They must be delivered to a collection location for electronic waste, as indicated by the following symbol:



Please contact your local authorities for the appropriate disposal location.

Dear Parents,

Before starting the experiments, read through the instruction manual together with your child and discuss the safety information. Check to make sure the models have been assembled correctly, and assist your child with the experiments.

We hope you and your child have a lot of fun with the experiments!

FCC Part 15 Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC RF Exposure Statement

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

For body worn operation, this device has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the device a minimum of 5 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.


Simplified EU Declaration of Conformity

Gigo hereby declares that the radio communication unit "Robotics Smart Machines" Bluetooth battery box, model number 7416-W85-G2, conforms to Directive 2014/53/EU. The complete text of the EU conformity declaration is available at the following Internet address:
https://drive.google.com/file/d/1lq7_R1hF2ltFRDjzli0SczvjwXKo6Fo/view

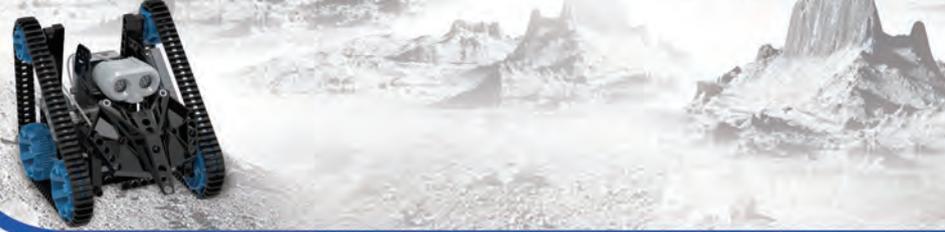

Kit Contents

What's inside your experiment kit:

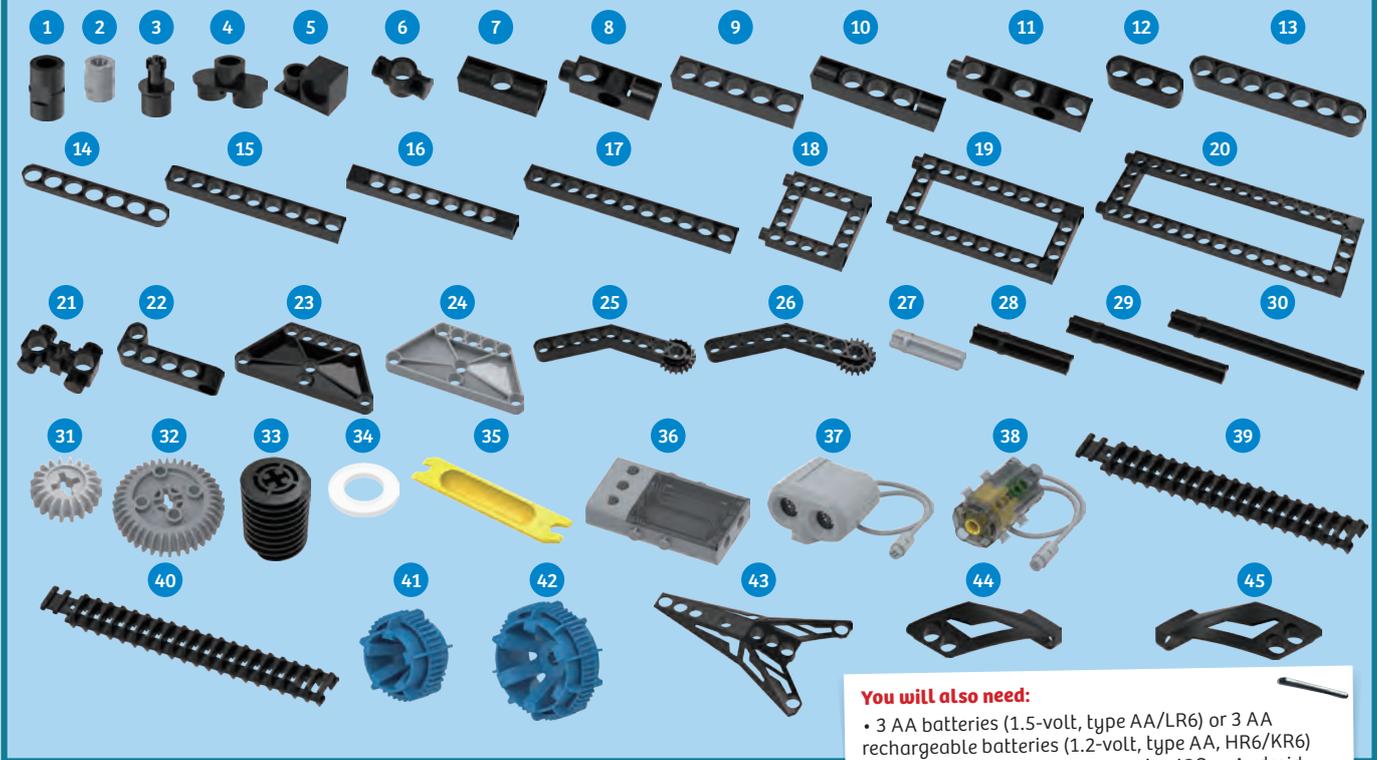

You will also need:

- 3 AA batteries (1.5-volt, type AA/LR6) or 3 AA rechargeable batteries (1.2-volt, type AA, HR6/KR6) and a tablet or smartphone running iOS or Android (see page 8 for hardware requirements)

Checklist: Find – Inspect – Check off

✓	NO.	Description	QTY.	Item No.
<input type="checkbox"/>	1	C-LONG PEG	20	7061-W10-C1D
<input type="checkbox"/>	2	B-SHORT PEG	60	7344-W10-C2S
<input type="checkbox"/>	3	C-AXLE	1	7026-W10-H1D
<input type="checkbox"/>	4	C-TWO-IN-ONE CONVERTER	4	7061-W10-G1D
<input type="checkbox"/>	5	C-LATERAL CONVERTER	1	7061-W10-X1D
<input type="checkbox"/>	6	C-1 HOLE CONNECTOR	10	7430-W10-B1D
<input type="checkbox"/>	7	C-3 HOLE ROD FRONT CLOSED	1	7026-W10-X1D
<input type="checkbox"/>	8	C-3 HOLE DUAL ROD	2	7413-W10-Y1D
<input type="checkbox"/>	9	C-5 HOLE ROD	4	7413-W10-K2D
<input type="checkbox"/>	10	C-5 HOLE ROD FRONT CLOSED	2	7413-W10-R1D
<input type="checkbox"/>	11	C-5 HOLE DUAL ROD BOTTOM CLOSED	2	7413-W10-W1D
<input type="checkbox"/>	12	C-3 HOLE ROUND ROD	4	7404-W10-C1D
<input type="checkbox"/>	13	C-7 HOLE ROUND ROD	4	7404-W10-C2D
<input type="checkbox"/>	14	C-7 HOLE PROLATE ROD	4	7404-W10-C3D
<input type="checkbox"/>	15	C-9 HOLE ROD	2	7407-W10-C1D
<input type="checkbox"/>	16	C-9 HOLE ROD FRONT CLOSED	3	7407-W10-C2D
<input type="checkbox"/>	17	C-11 HOLE ROD	3	7413-W10-P1D
<input type="checkbox"/>	18	C-5X5 FRAME	2	7413-W10-Q1D
<input type="checkbox"/>	19	C-5X10 FRAME	2	7413-W10-I1D
<input type="checkbox"/>	20	C-5X15 FRAME	2	7413-W10-J1D
<input type="checkbox"/>	21	C-BOLT ROD WITH PINS	2	7406-W10-B1D
<input type="checkbox"/>	22	C-5 HOLE L SHAPE ROD	2	7406-W10-B2D
<input type="checkbox"/>	23	C-TRAPEZOID FRAME	2	7408-W10-A1D

✓	NO.	Description	QTY.	Item No.
<input type="checkbox"/>	24	C-TRAPEZOID FRAME	2	7408-W10-A1S
<input type="checkbox"/>	25	C-145° CRANKSHAFT GEAR-A	1	7411-W10-C1D
<input type="checkbox"/>	26	C-145° CRANKSHAFT GEAR-B	1	7411-W10-C2D
<input type="checkbox"/>	27	C-MOTOR AXLE	2	7026-W10-L1S1
<input type="checkbox"/>	28	C-35mm AXLE II	4	7413-W10-O1D
<input type="checkbox"/>	29	C-60mm AXLE II	2	7413-W10-M1D
<input type="checkbox"/>	30	C-70mm AXLE II	2	7061-W10-Q1D
<input type="checkbox"/>	31	C-20T GEAR	2	7026-W10-D2S
<input type="checkbox"/>	32	C-40T GEAR	3	7346-W10-C1S
<input type="checkbox"/>	33	C-WORM GEAR	2	7344-W10-A1D
<input type="checkbox"/>	34	C-WASHER	6	R12#3620
<input type="checkbox"/>	35	B-PEG REMOVER	1	7061-W10-B1Y
<input type="checkbox"/>	36	C-ULTRASONIC BT RECEIVER (DDM)	1	7416-W85-G-2
<input type="checkbox"/>	37	C-ULTRASONIC SENSOR	1	7416-W85-B-2
<input type="checkbox"/>	38	C-50X PLANETARY GEARBOX(DDM)	2	7412-W85-A
<input type="checkbox"/>	39	C-20T BELT	4	7446-W10-C1D
<input type="checkbox"/>	40	C-21T BELT	4	7446-W10-C2D
<input type="checkbox"/>	41	C-40T WHEEL FRAME	2	7446-W10-B1B
<input type="checkbox"/>	42	C-60T WHEEL FRAME	4	7444-W10-A1B
<input type="checkbox"/>	43	C-LARGE BODY PIECE A	4	7446-W10-A1D
<input type="checkbox"/>	44	C-SMALL BODY PIECE LEFT	4	7446-W10-A2D
<input type="checkbox"/>	45	C-SMALL BODY PIECE RIGHT	4	7446-W10-A3D





Tips And Tricks

Here are a few tips for assembling and using the models. Read them carefully before starting.


A. Pay attention to the hole alignment!

It is very important that you pay close attention to the alignment of the holes in the gear wheels. Make sure that you insert the shaft pins into the correct holes and that the gears are oriented exactly as shown in relation to each other and to the model. Otherwise, the robots will not move properly.

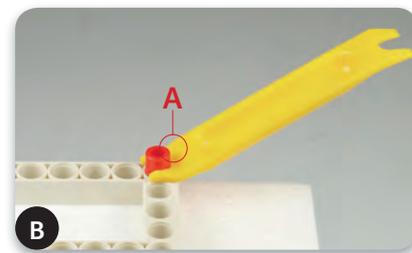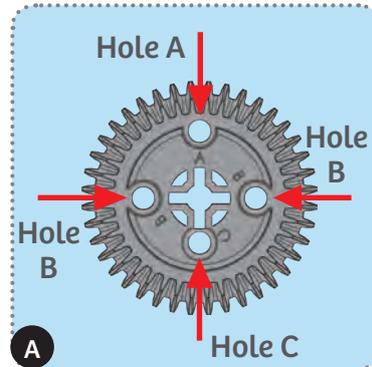

B. The part separator tool

In the box, you will find a little yellow tool called the peg remover. End A of the part separator tool makes it easy to remove pegs from the frames.

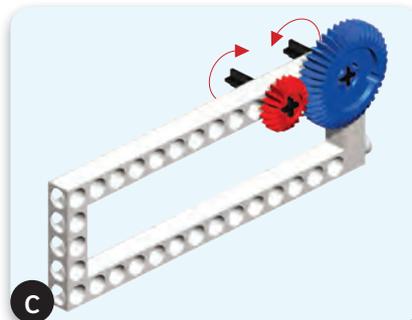


C. Gear wheels

The models will often have several gear wheels installed in a row. In order for the models to work well, these gears will have to mesh well. Otherwise, the force from one gear wheel won't be properly transferred to the next.

D. How to insert batteries into and remove batteries from the Bluetooth battery box




Slide the transparent cover open. Insert or change the batteries according to the indicated plus-minus polarity. Close the compartment by sliding the cover back on.

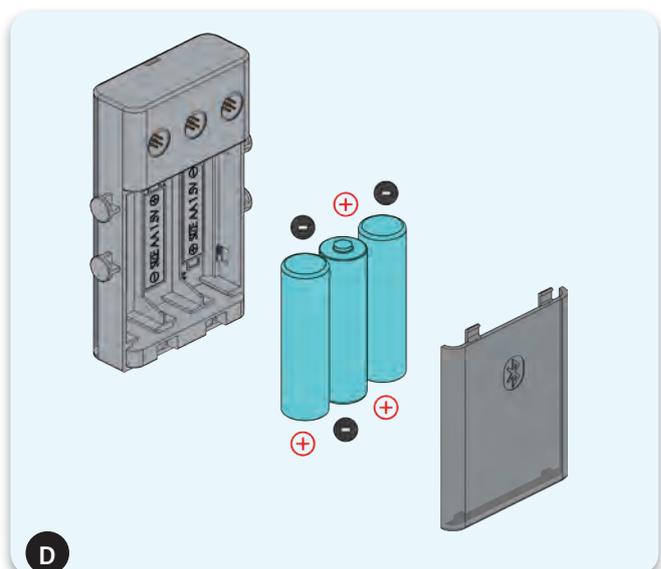



Robots: Sensing, Thinking Machines

Robots are mechanical agents controlled by computer programs. They can be programmed to perform all sorts of tasks and movements. Robots can assemble cars, play soccer, vacuum floors, deliver packages, map terrain, climb mountains, entertain people, cook dinner — the list goes on and on. With this kit, you can build robots that use an ultrasonic sensor to sense their environment. With the app, you can program the robots' motors to behave in different ways depending on the data coming from the ultrasonic sensor. In this way, you can create different robots that perform different tasks!

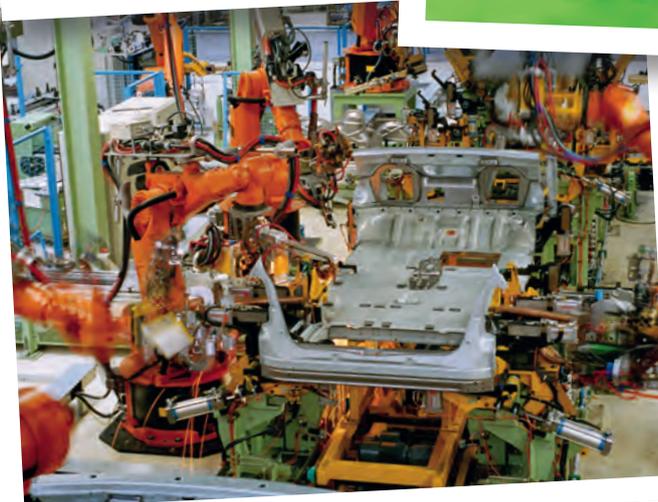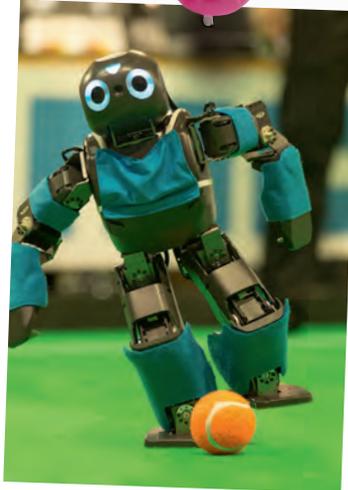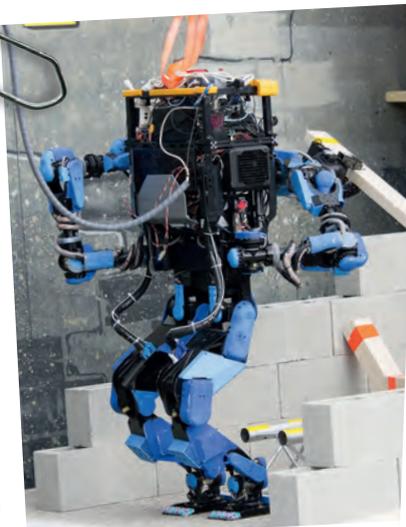



Getting Started

There are four primary types of functional components in this kit that enable the robots to work:

A. The Bluetooth battery box connects to the app on your tablet or smartphone via a wireless Bluetooth connection, and provides power to the motor units via wires.

B. The motor units connect to axles and motor shafts to turn gears and wheels, activating your models. They are powered by the battery box.

C. The ultrasonic sensor sends out ultrasound waves and “listens” for them to bounce off of objects. It gives this information to the app.

D. The app is the “brain” of your robotic models. It uses the feedback from the ultrasonic sensor and program instructions to control the models.

These four elements, in combination with all the mechanical parts — rods, gears, axles, frames, and so on — allow you to build and program mechanical robots that can sense their surrounding using sound waves.

First, follow the assembly instructions starting on page 14 to build one of the models.

Make sure you have inserted the batteries correctly according to the battery information on page 4. Shake the model until the blue light on the Bluetooth battery box turns on, indicating that the module is on. The module automatically turns off after about a minute of inactivity to save battery power. You simply have to jiggle the model when you want to turn it on again. It's a movement-activated on-off switch!

Now you can connect the tablet or smartphone to the model via the free app. Instructions to download and use the app start on page 8.

A



B




C



D



Gigo Smart Machines

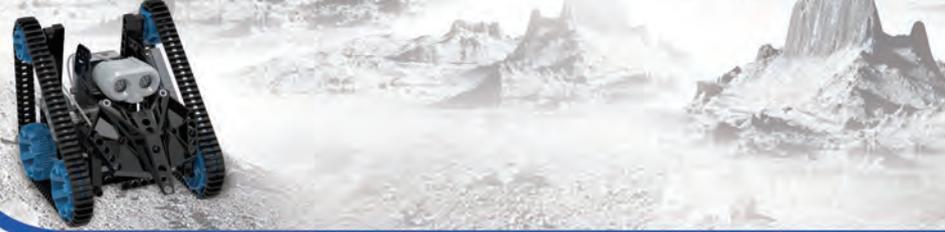

About Ultrasound

ABOUT ULTRASOUND

Ultrasound is a sound pressure wave that moves through substances (gases, liquids, and solids) and has a frequency higher than that which humans can hear.

Frequency is simply the number of waves in a given period of time. Humans can hear sound waves in the frequency range of 20 hertz (which means cycles per second) to 20,000 hertz (20 kilohertz).

ANIMAL SONAR

In the natural world, bats, whales, and some birds use sound waves to detect objects around them. This is especially useful in the darkness of night or underwater, where seeing visible light is difficult or impossible.

This type of sensing is called **echolocation**, or biosonar. It works like this: The animal emits sound waves that move outward in all directions around it. When the sound waves hit an object, they bounce off of it and travel back to the animal's ears. The sound waves reach each of the animal's two ears at slightly different times. The animal can interpret this time difference to perceive the size, direction of movement, and speed of objects.




Animals use echolocation to hunt prey in the dark of night. They can also use it to navigate and find their way around without normal eyesight.

ACTIVE SONAR


Humans have developed a technology to replicate echolocation, which is called **sonar**. Sonar is an acronym for **SOund Navigation And Ranging**. Sonar is used for navigation in submarines, ships, and airplanes. A similar technology using electromagnetic radio waves instead of sound waves is called **radar** (**RA**dio **D**etection **A**nd **R**anging).

With sonar and radar, airplane pilots are able to find their way and avoid collision with other planes, even in complete darkness or in thick clouds. Police use radar to detect speeding cars.

Your ultrasonic sensor also sends out sound waves. You can't hear them because they are ultrasonic! One "eye" on the sensor head is a transmitter and the other is a receiver. The transmitter sends out ultrasonic waves, like a speaker, and the receiver senses the waves that bounce back, like a microphone. In this way, the sensor is able to sense objects in front of it, even in the dark.

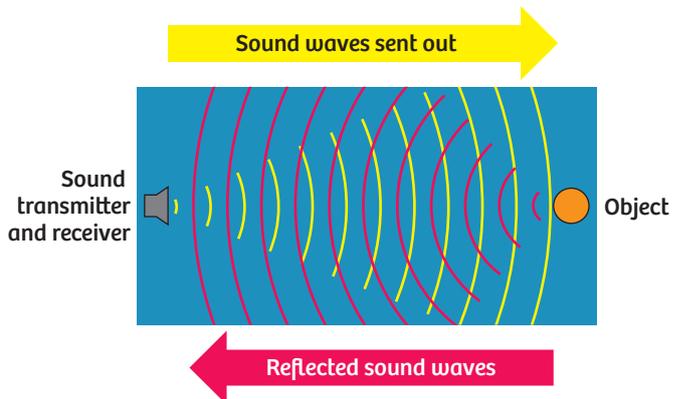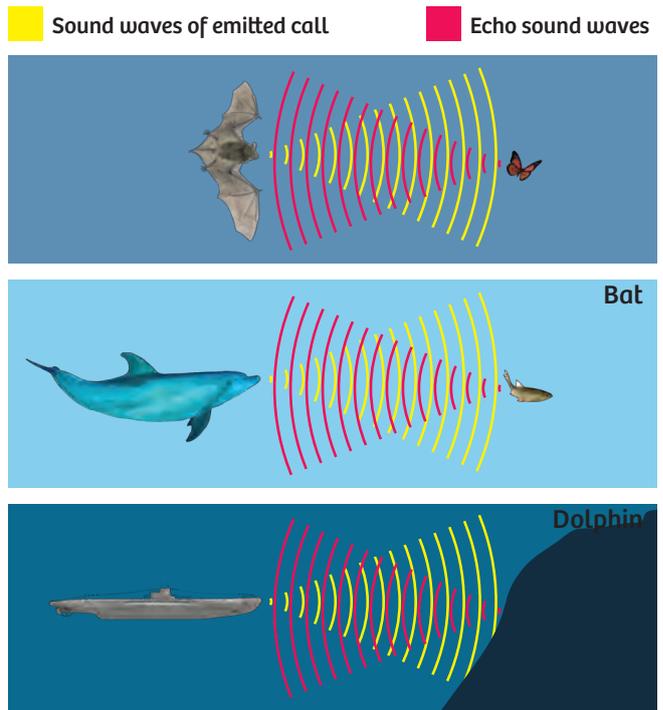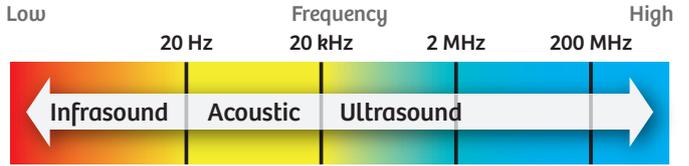

The ultrasonic sensor has one transmitter and one receiver.

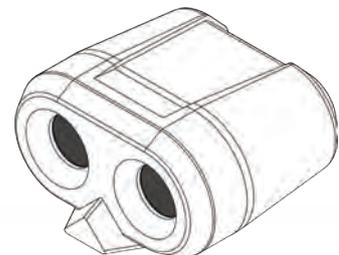



Downloading and Using The App

DOWNLOAD THE PROGRAMMING APP

You can download the free app for iOS devices from the iOS App Store, or for Android devices from Google Play.

- iOS devices must support Bluetooth 4.0 and must be running iOS 11.0 or later.
- Android devices must support Bluetooth 4.0 and must be running Android 4.4 or later.

To get the app:

1. Turn on your tablet or smartphone.
2. If you have a QR code reader installed, you can scan one of the QR codes to take you directly to the app download page for your device.
3. Alternatively, you can search for the “Gigo Smart Machines” app or follow one of these links to the product page:

iOS: <https://build.t2t.io/ur?qr=SkROXnaME>

Android: <https://play.google.com/store/apps/details?id=com.gigotoys.smartmachines>

Then, scroll to the bottom to find links to the app.

4. Follow the steps on the app download page to download and install the app on your device.
5. Open the app and the remote control screen will appear.

REMOTE CONTROL MODE

1. Connect the app to your model by pressing the Bluetooth button in the upper left corner (A).
2. When the connection has been made, the Bluetooth symbol will change color (B) and, if a motor is connected, the motor will drive for a second to indicate the connection has been made.
3. The ultrasonic functionality will now be available if the ultrasonic sensor is connected properly. The concentric circular rings indicate the relative distance to an object in front of the sensor. The ring lights up when an object is detected. Closer objects light up the inner rings; objects that are farther away light up the outer rings.
4. Test it out by moving an object in front of the sensor.
5. You can use the two slider controls (C) to directly control the two motors on your models. Slide the slider up or down with your finger to make the motor spin clockwise or counterclockwise.




Gigo Smart Machines



iOS app




Android app

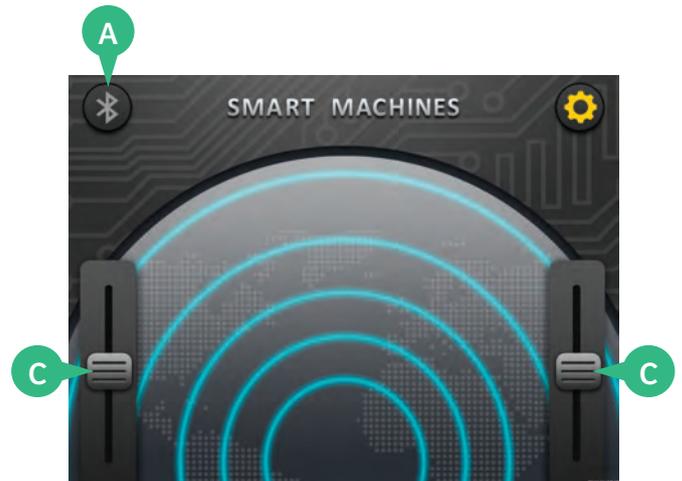

Object Near

Object Far

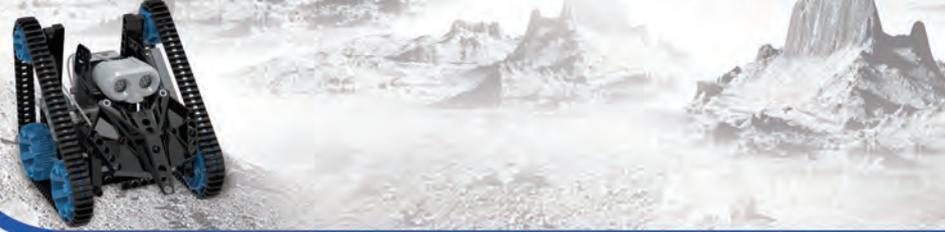

Writing Programs

PROGRAMMING MODE






Press the gear icon (D) to enter the programming mode. When you press the icon, a list of programs appears. You can save up to 24 programs. The app comes with demo programs preloaded in Programs 1-24. **You will be using programs 17-24 in this kit.**

UNDERSTANDING THE ULTRASONIC DETECTION INTERVALS

1. Enter Program 8, which is a blank program. The programming screen appears.
2. The Go button (E) runs the program. When it is pressed, the number in the upper left (F) will start indicating the distance to the object that the sensor is detecting.
3. After you press the Go button, it becomes a Stop button (G) and the program runs. You can see in this example that the sensor is reading a distance of "21." This equates roughly to a distance of 21 centimeters. Press the Stop button.
4. The sensor distance indicator line (H) has adjustable ranges. Different program segments can run in each of these ranges. By default, there are three ranges. The first range marker (I) is set at 30 and the second marker (J) at 50. This means there are four program segments by default:
 - The "Opening" program segment (K) runs once at the beginning when the Go button is pressed.
 - When an object is detected between 0 and 30, the blue 0-30 segment (L) runs.
 - When an object is detected between 30 and 50, the green 31-50 segment (M) runs.
 - When an object is detected between 50 and 100, the purple >51 segment (N) runs.

You can slide the range markers to change the distance ranges. You can also increase the number of distance range segments by pressing the add range marker button (O). You can delete a segment with the delete button (P).

Range markers must be a minimum of 5 distance units apart. You cannot add a new range marker if there is another marker at 90 or higher.

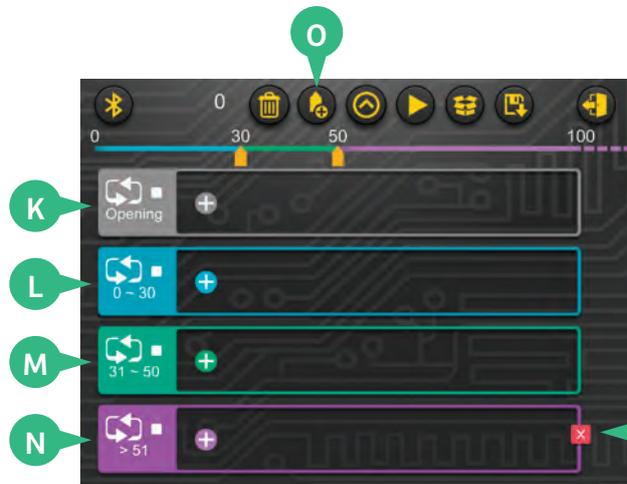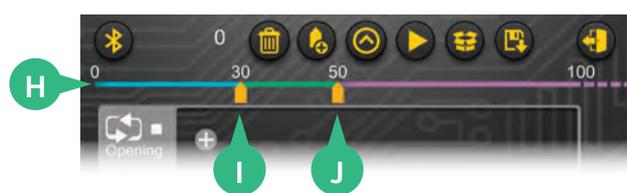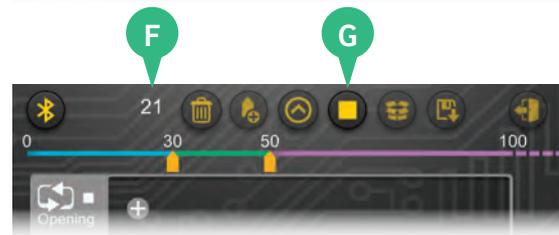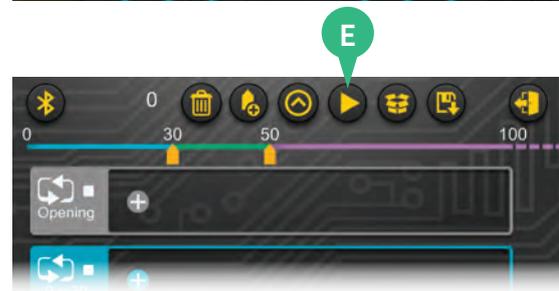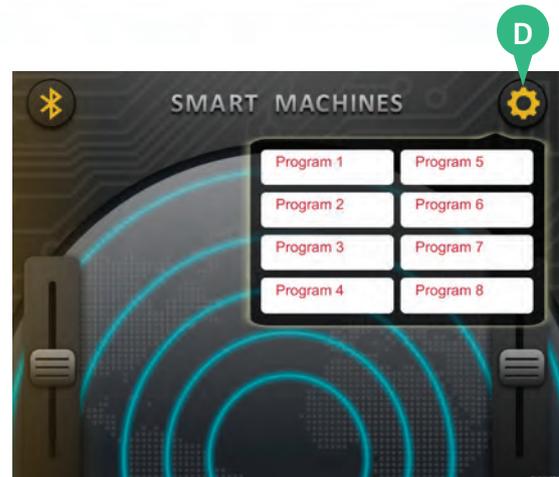






Writing Programs

WRITING A PROGRAM

1. Now you are ready to write your first program. Click the gear button (A) to enter the programming mode. Choose a blank program (Program 8 starts out blank).
2. The programming screen appears.
3. Press the plus sign “+” button (B) in one of the program segments to add a command.
4. The commands menu (C) pops up. You can select between three types of commands:
 - Choose Motors to add motor commands.
 - Choose Notes to add sound commands.
 - Choose Rest to add a pause command.

Or press the red X button to exit the commands menu.


Continued on next page >>>

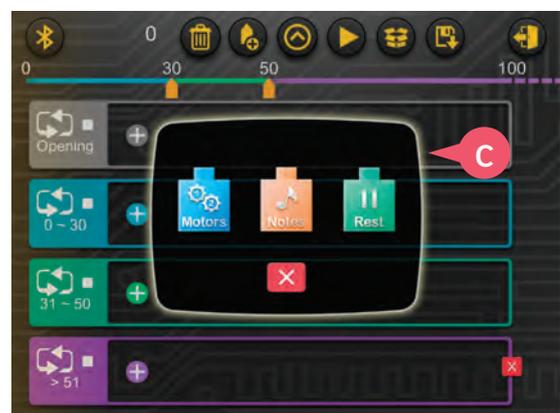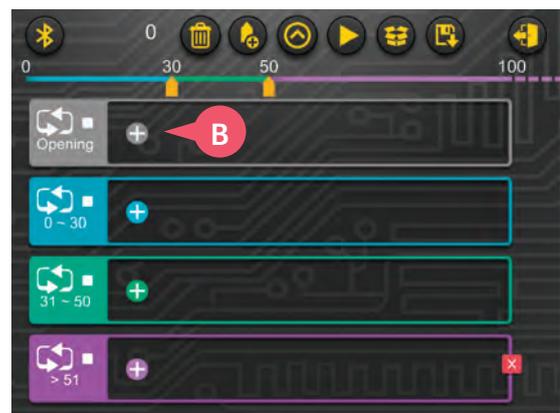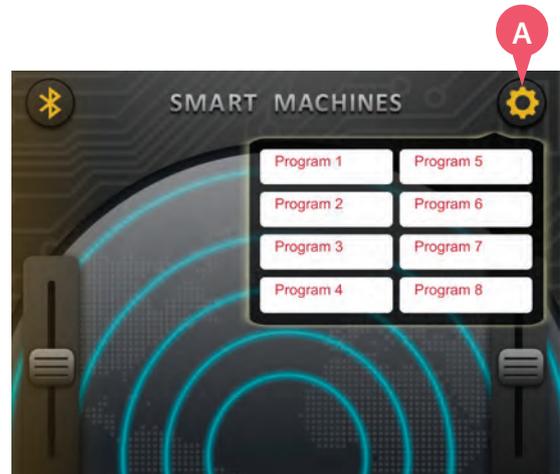

TROUBLESHOOTING THE SENSOR CONNECTION

If the sensor connection isn't working:

- >>> Disconnect and then reestablish the Bluetooth connection.
- >>> Make sure the sensor cable is securely plugged into the battery box.
- >>> Exit the program you are in and relaunch it.

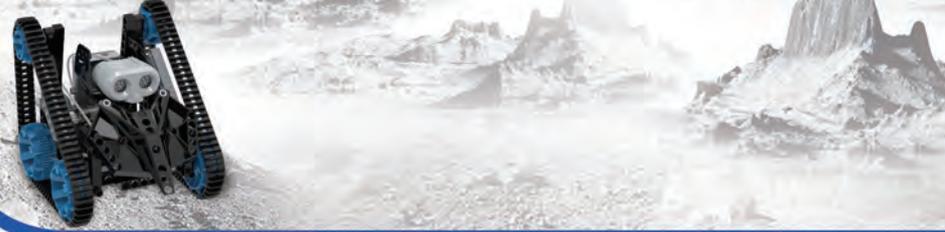

Writing Programs


PROGRAMMING MOTORS

1. Press the motors command icon and the motor programming window appears (D).
2. In the motor programming window, you can create a command to control motor one (blue) and/or motor two (red) to turn forward or backward. You can choose a relative speed from -4 (fastest in one direction) to 4 (fastest in the other direction).



Note: A positive speed (1-4) in the motor command doesn't always mean your model will move forward! You will have to test which direction results in the desired output direction on your specific models, because the orientation of the motor and the gearing will change the direction.

3. With the time slider (E), you can also set the duration for which the motor(s) will turn, from 0.5 to 5.0 seconds.
4. When you are satisfied with your selections, press the green check mark button and the motor block (F) appears in the program segment.

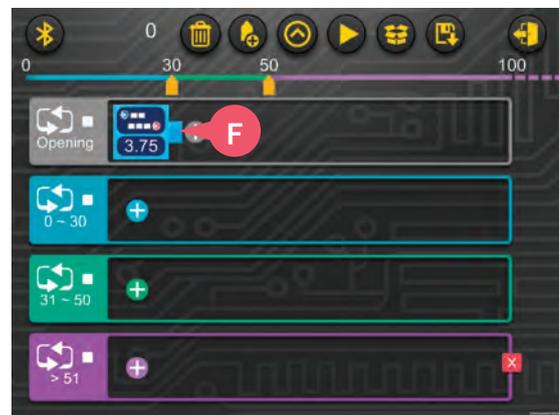


The blocks show which motor(s) (G) the command will turn, and at what speed and in what direction (H) each motor will turn. Below that, it shows how long the motor(s) will turn (I).



The blue gear wheel represents motor one and the red gear wheel represents motor two.

Tip! Add red and blue dots or stickers to the battery box and motors so you can easily keep track of which motor you are programming.

5. You can add more command blocks to the same segment by pressing the "+" button (B) again.

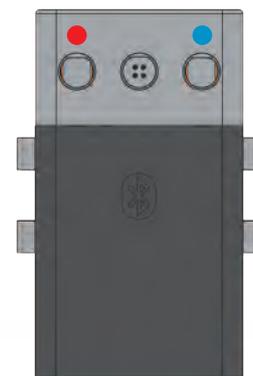

Motor indicator dots



Writing Programs

PROGRAMMING SOUNDS

1. Press the notes command icon and the sound programming window appears (J).
2. In the sound programming window, you can create a command to make sounds. You can choose the pitch (Do, Re, Mi, Fa, Sol, La, Si, and Do) and the duration (0.5 to 5 seconds) for each note command.
3. Press the green check mark button and the note block (K) appears in the program segment.

In this way, you can program a simple melody with multiple note blocks that will play when the program segment runs.

PROGRAMMING PAUSES

1. The last command option is to add a pause, or rest, to the program. Press the rest command icon and the rest programming window appears (L). You can choose the duration (0.5 to 5 seconds) of the pause in the program. Press the green check mark button and the rest block (M) is added to the program segment.



WRITING A COMPLETE PROGRAM


Following the previous instructions for adding commands, you can now go and write programs for all of the segments. You can think of the different actions you want your robot to perform when the ultrasonic sensor reads objects at different distances in front of it.

Don't be afraid to try a lot of different ideas and play around with different combinations of command blocks in different distance range segments.

DELETING COMMANDS

To delete a command block, press the block you want to delete to open its programming window. Then press the trash button (N) in the bottom corner.

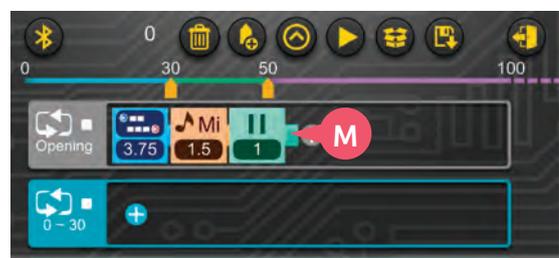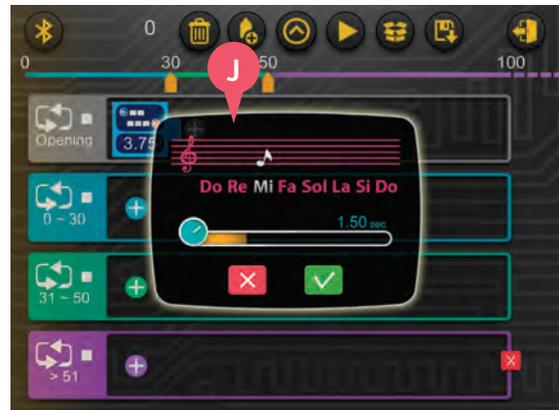


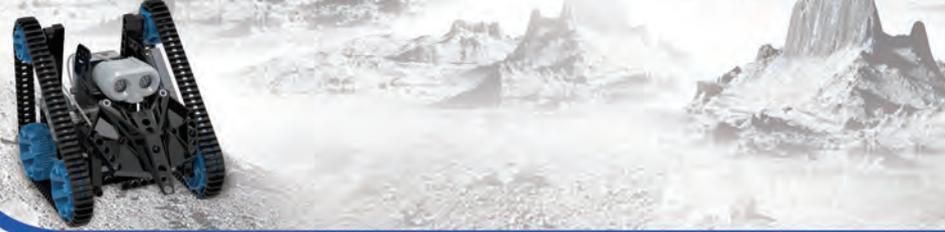

Writing Programs

DELETE ALL


To clear an entire program and set it back to the default blank program mode, press the trash can button (O) in the menu bar. This also resets the range markers to the default settings.

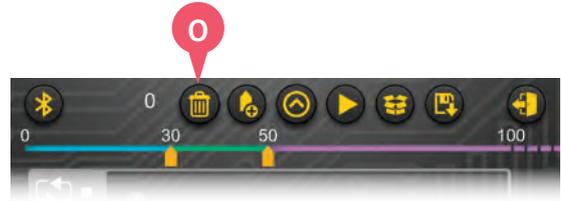

LOOP CHECKBOX

When the loop checkbox (P) is checked, the program segment will run in a continuous loop, over and over again, when the program segment is active.

When the loop checkbox is unchecked, the program segment will run just once when the program segment is triggered.

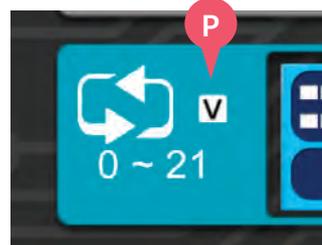

SWITCHING BETWEEN PROGRAMS

If you want to move to a different program, click the storage box button (Q) and select which program you want to open.



SAVING PROGRAMS

When you want to save a program you have written, press the disk button (R). The program script will immediately be saved inside the program you are currently in. A confirmation screen will appear.



REVERT TO SAVED

To revert to the last saved version of the program and erase all unsaved changes, press the revert to saved button (S).



EXITING PROGRAMMING MODE







When you want to leave the programming screen, press the door button (T). A window will pop up asking if you are sure you want to leave the programming screen. Press the green check mark button to go back to the main remote screen.



Model 1 Trackbot








Parts Needed ● ● ● Easy

1	2	3	4	6	8	9	10	12	13	14
x10	x20	x1	x3	x6	x2	x4	x1	x4	x3	x2
16	17	18	20	21	23	24				
x3	x2	x1	x2	x1	x2	x2				
27	28	29	30	31	32	34	35	36	37	
x2	x2	x2	x2	x2	x3	x2	x1	x1	x1	
38	39	40	41	42	43	44	45			
x2	x4	x4	x2	x4	x1	x1	x1			

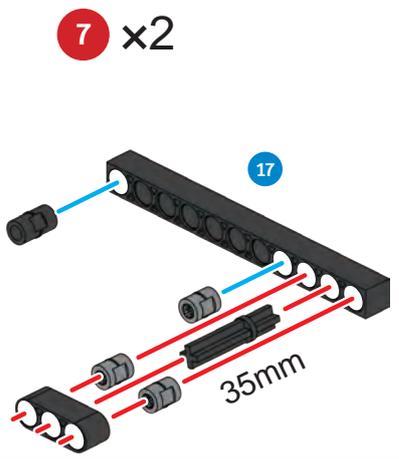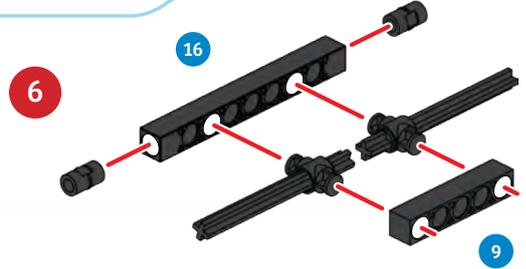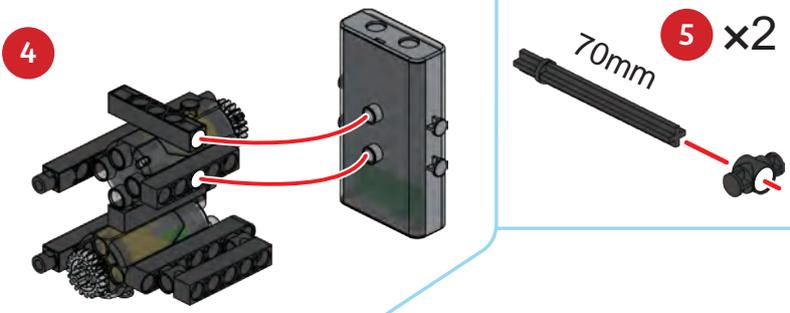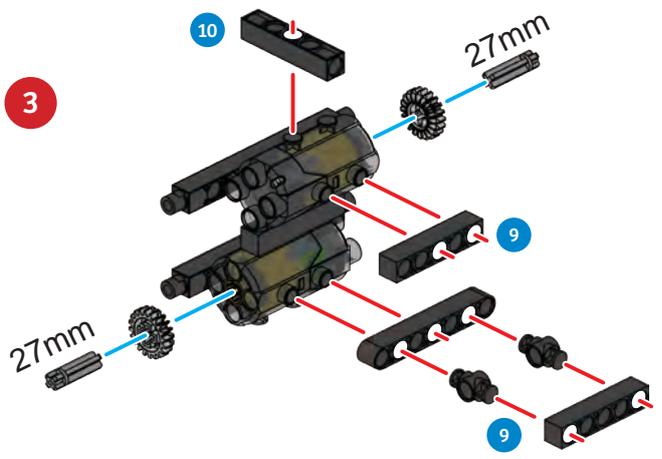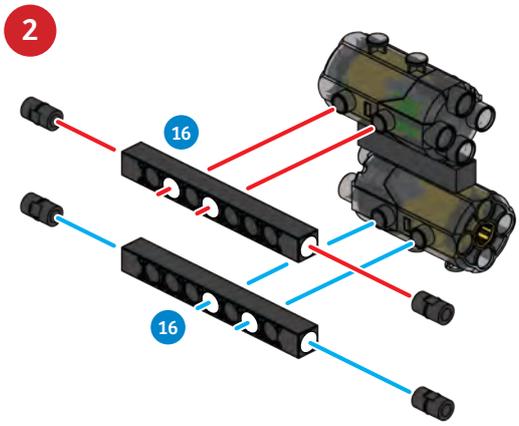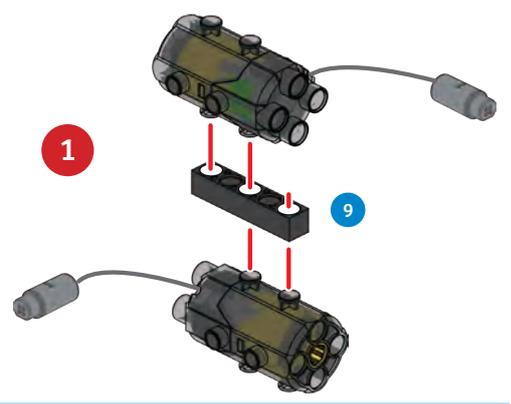




Trackbot Model 1

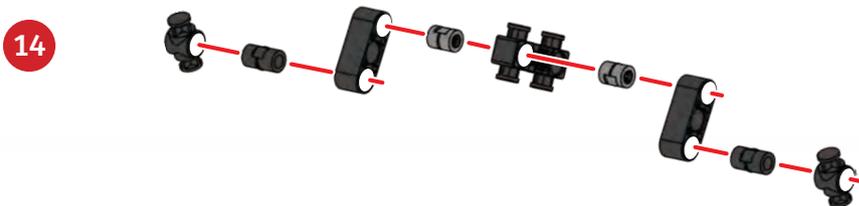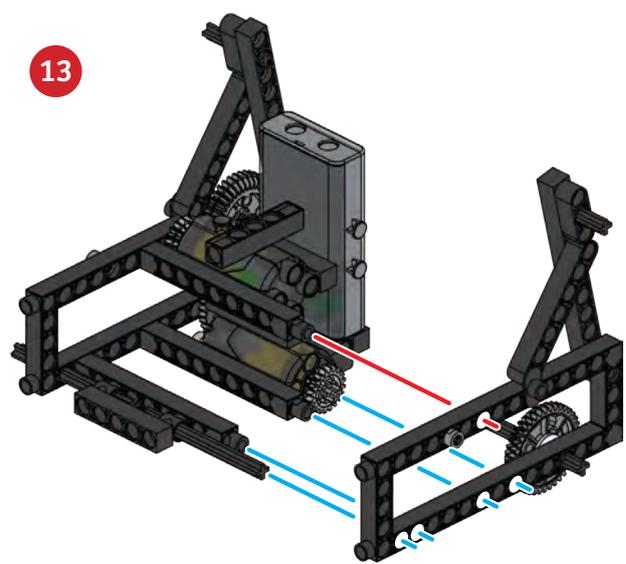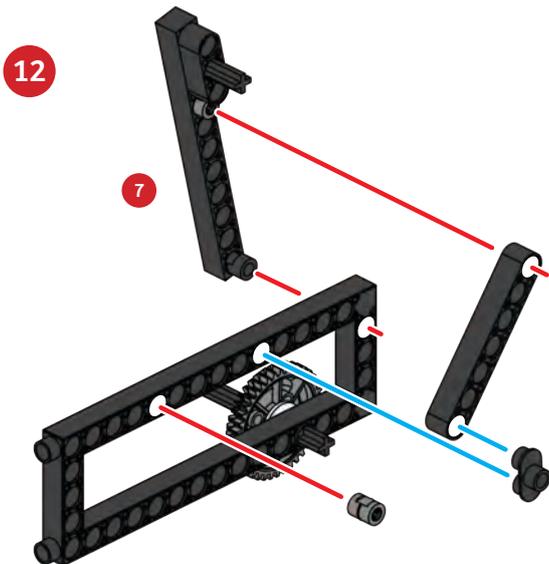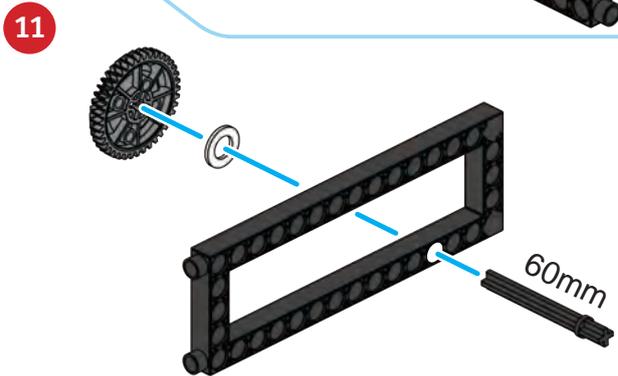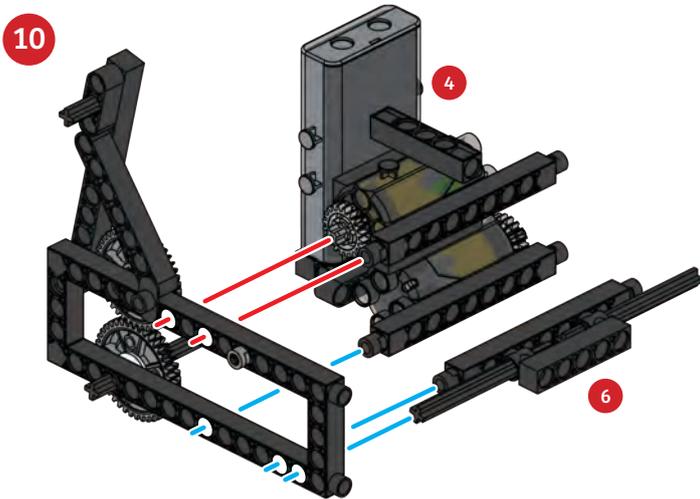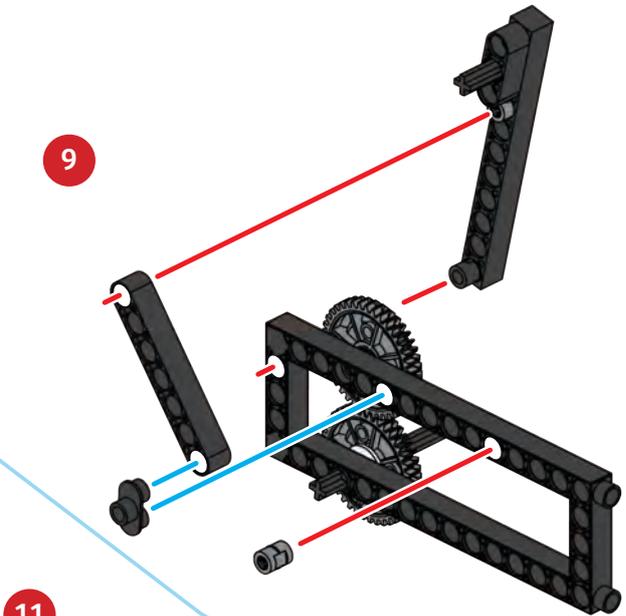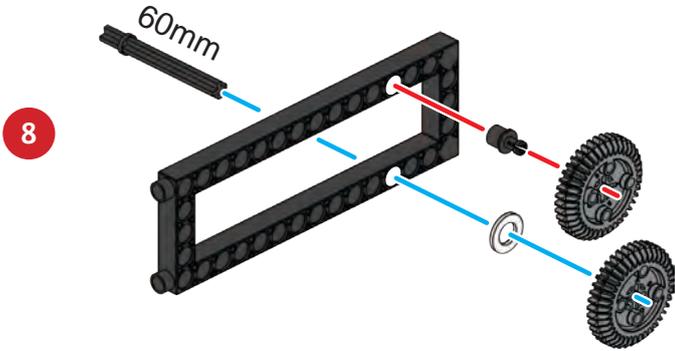




Model 1 Trackbot


15

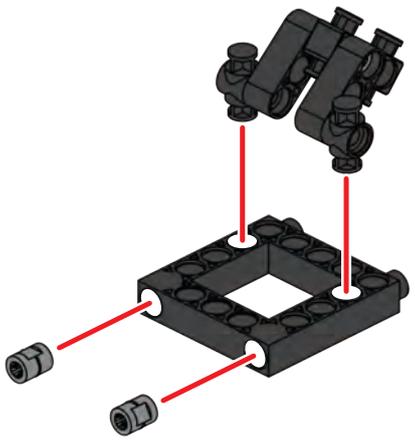


16

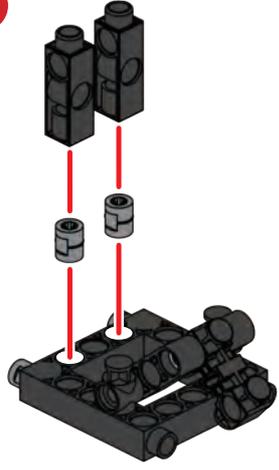


17

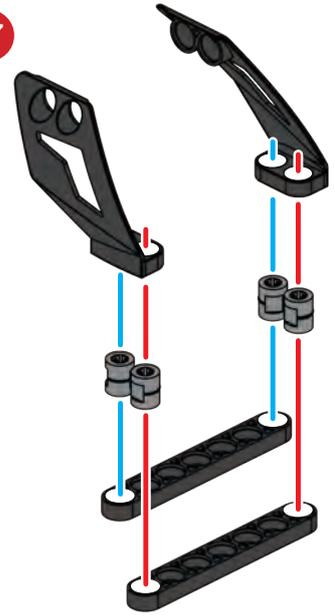


18

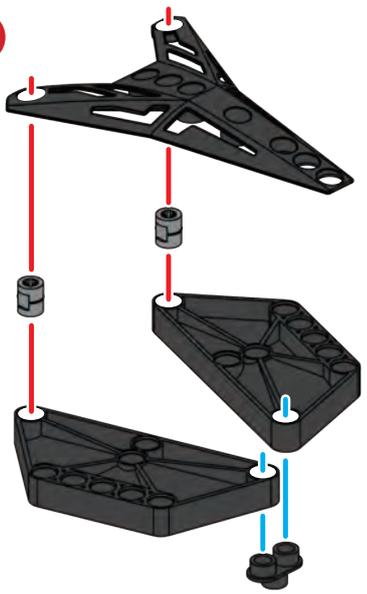

19

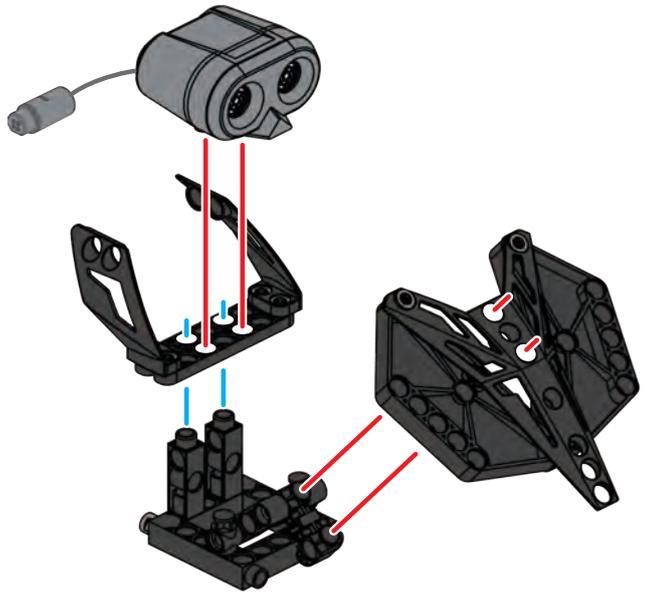



20

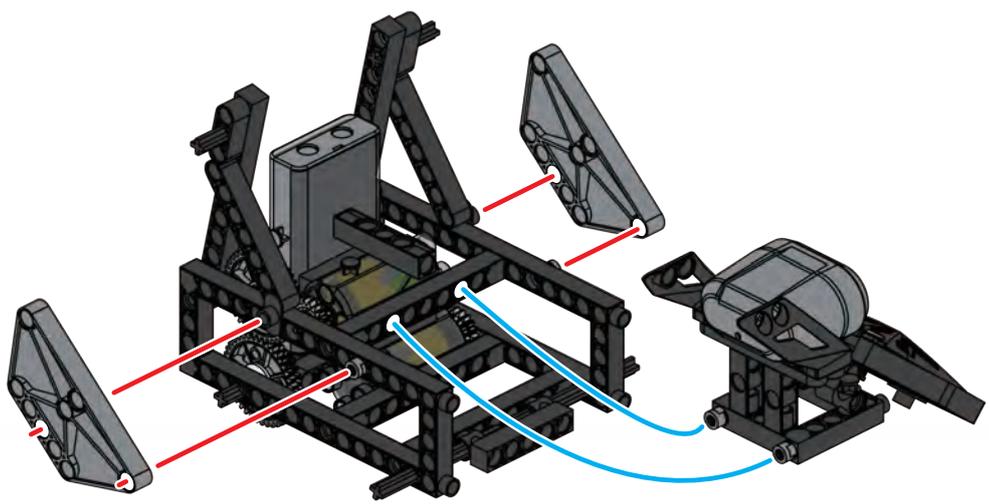




Trackbot Model 1


21 x2

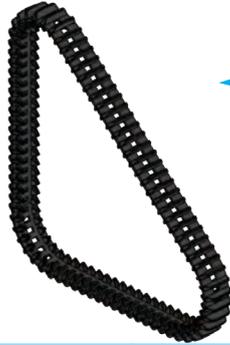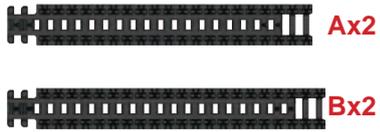


How to assemble tracks:

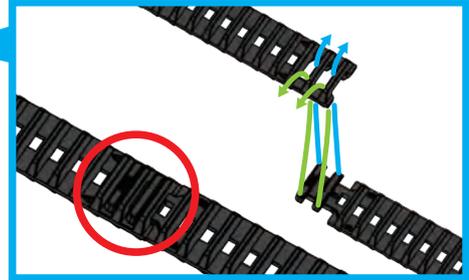


22

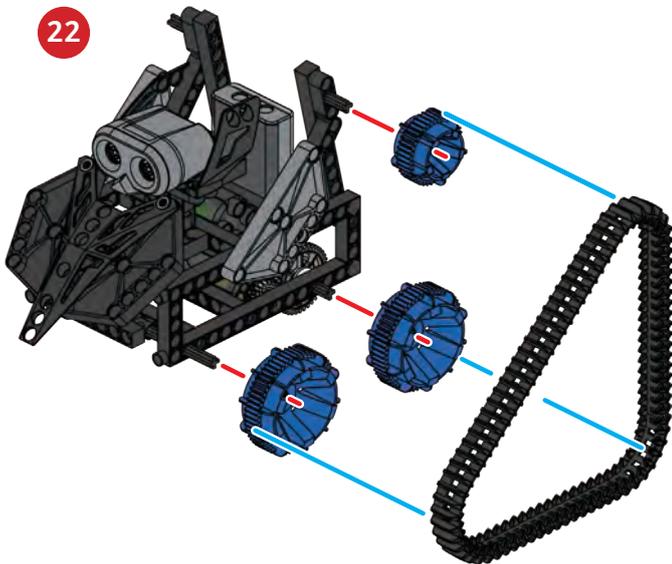


23

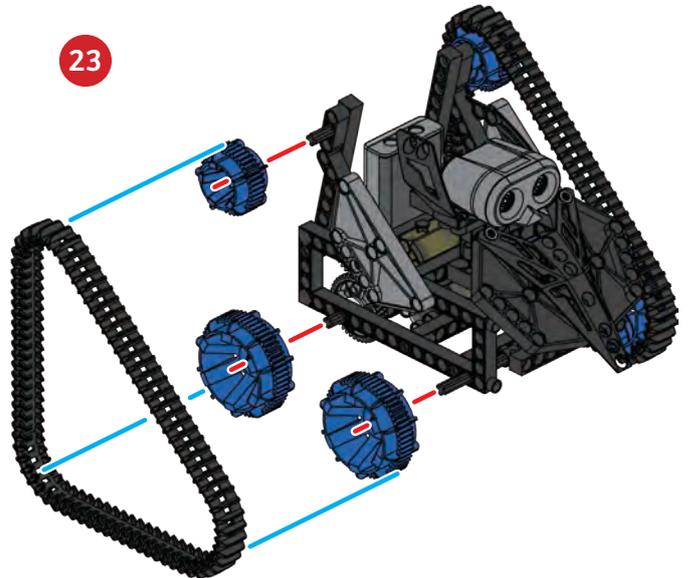

24

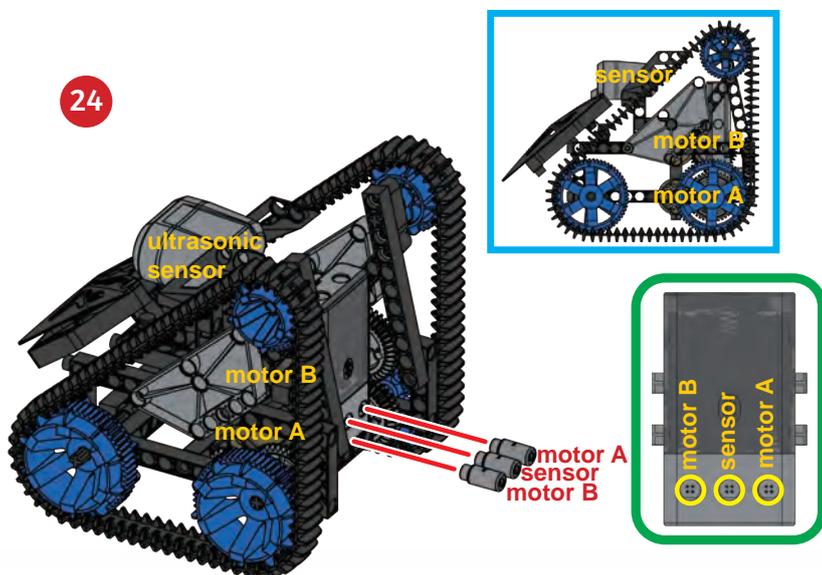

25

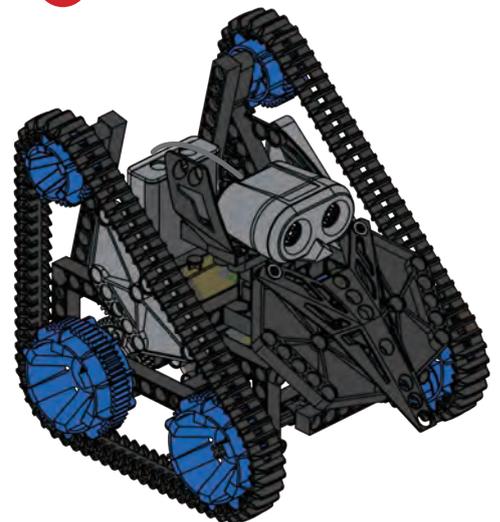

Done!



Programming

SAMPLE PROGRAM FOR THE TRACKBOT

The trackbot is very shy! It will quickly move to avoid any object that is in front of it. When this program runs, the robot will first play music. If you move an object, such as a book, in front of the trackbot's ultrasonic sensor it will quickly back away and then turn. Repeat this several times to see how the trackbot reacts.

This program is preloaded in the app under Program 17. Test it out and write down how the robot behaves for each program segment below.



DEMO PROGRAM:
Program 17

OPENING SEGMENT:

PROGRAMMING NOTES

SEGMENT 0-30:






SEGMENT >31:



Scout Robot Model 2











Parts Needed ● ● ● Medium


1	2	3	4	5	6	7	8	9	11	12	13
x8	x34	x1	x2	x1	x6	x1	x2	x4	x2	x4	x3
15	16	18	19	21	22	23					
x1	x3	x1	x2	x1	x2	x1					
27	28	29	31	32	34	35	36	37			
x2	x2	x2	x2	x3	x6	x1	x1	x1			
38	39	40	42	43							
x2	x2	x4	x4	x4							

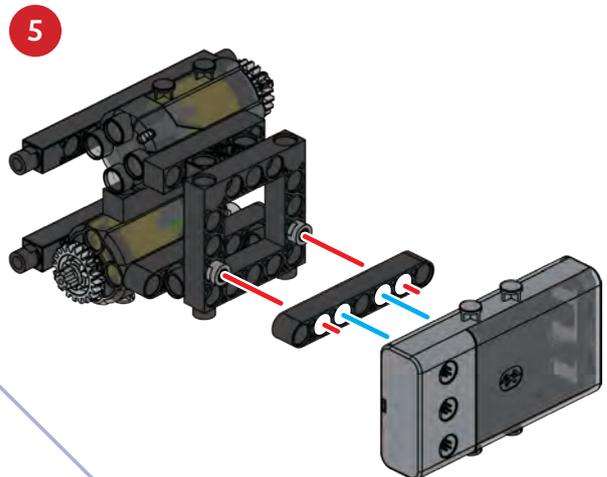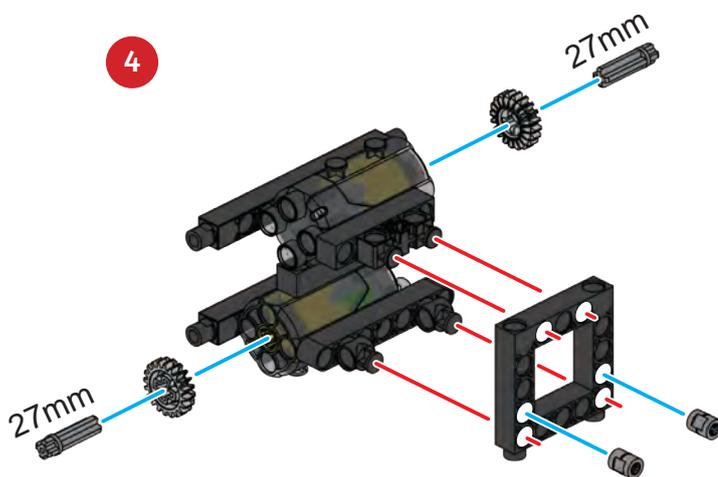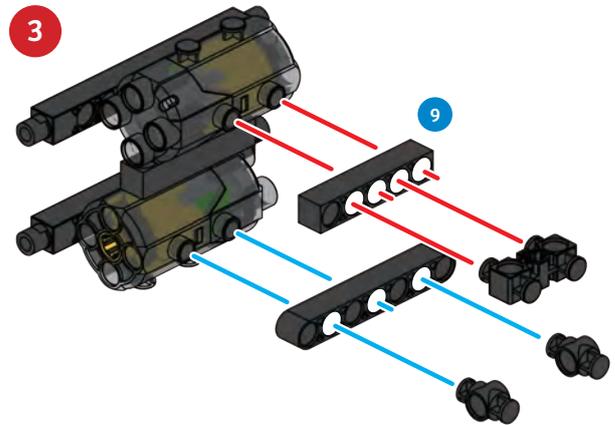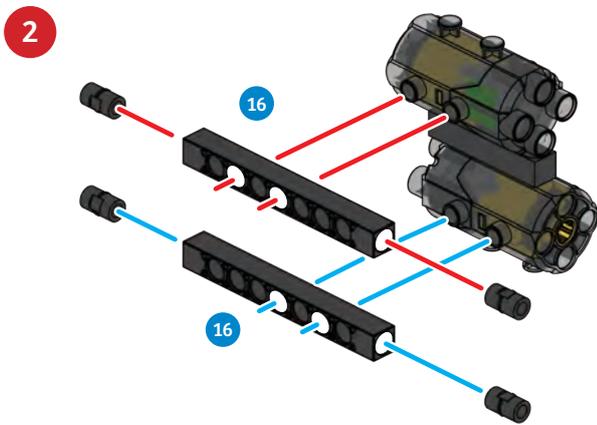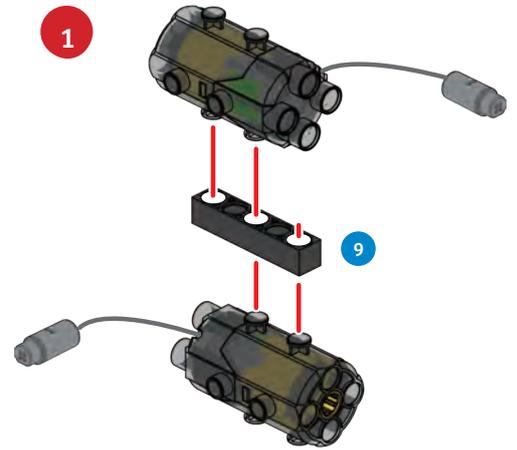




Model 2 Scout Robot

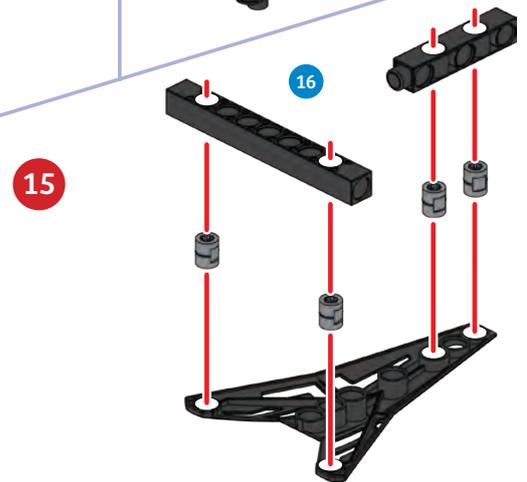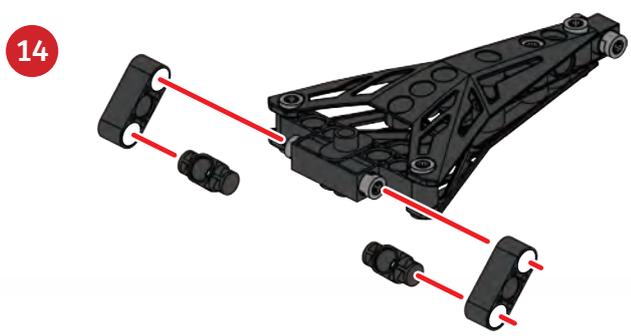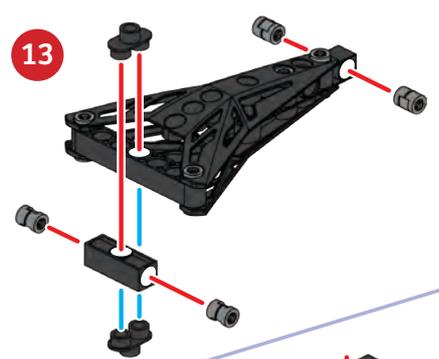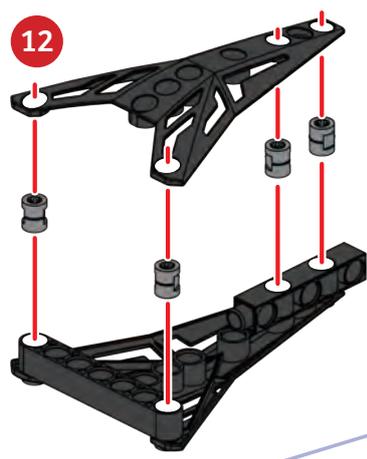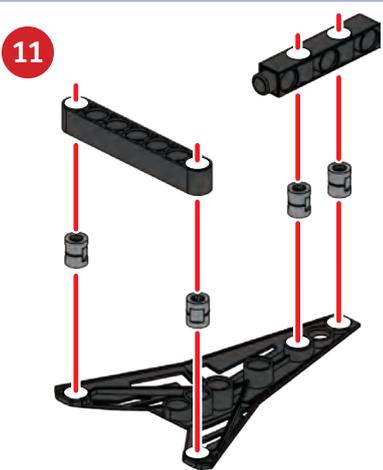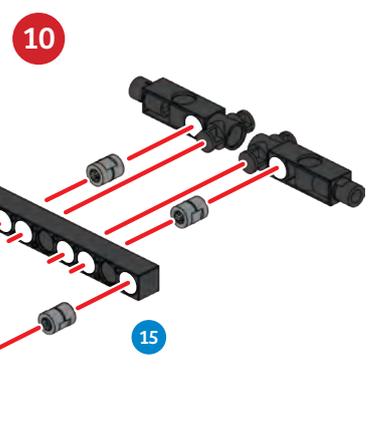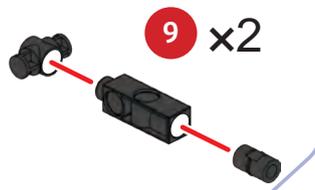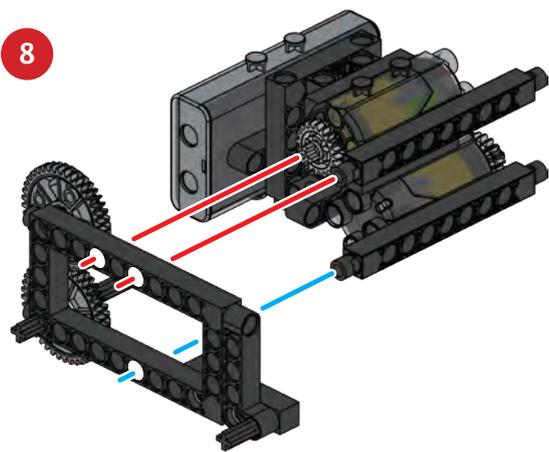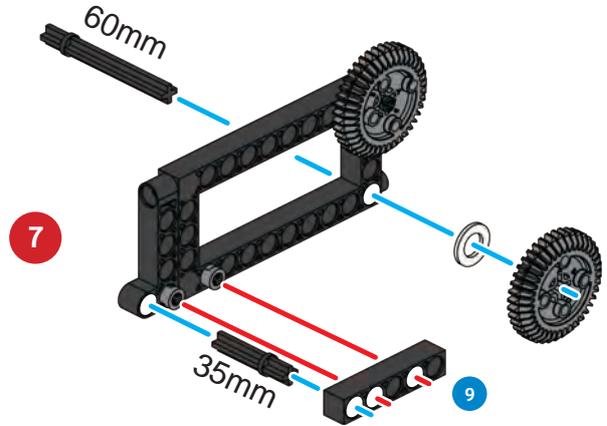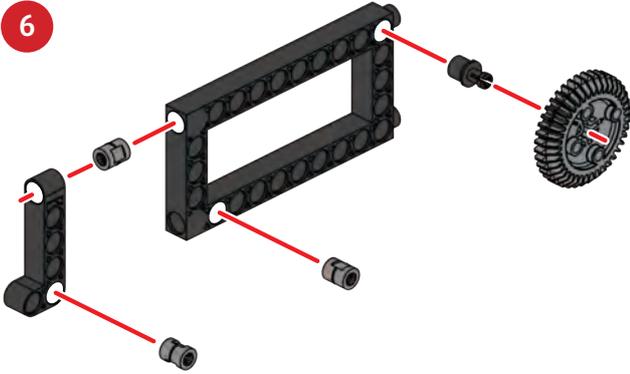

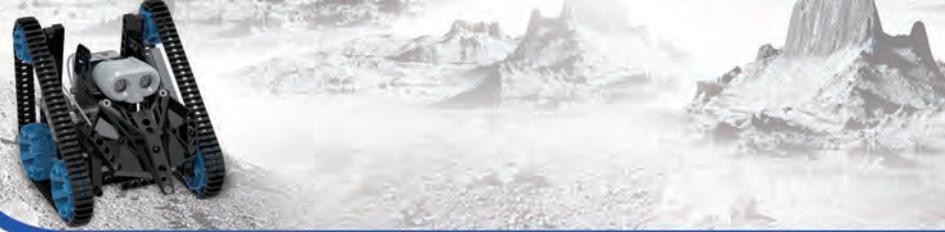

Scout Robot Model 2


16

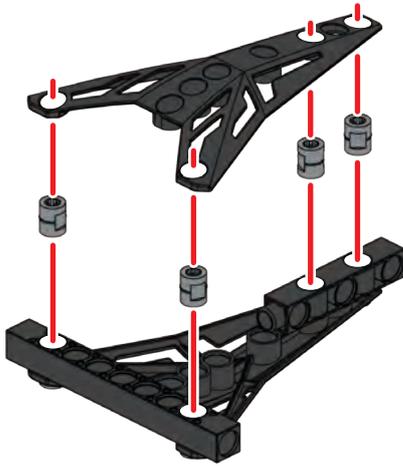


17




18

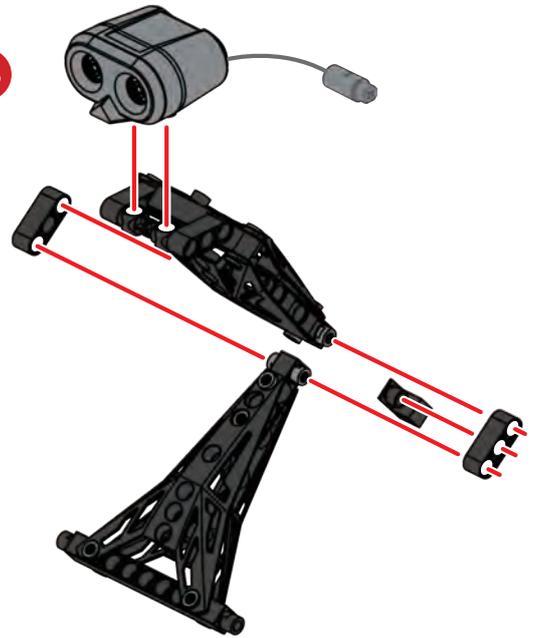



19

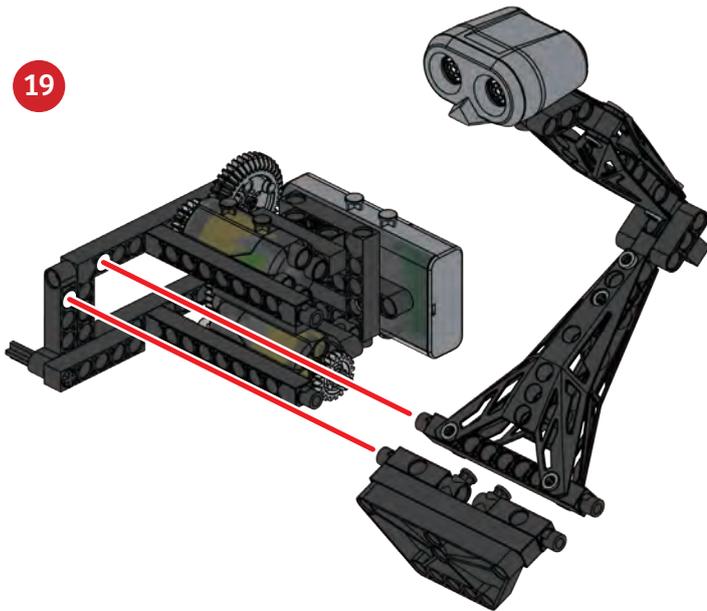

20

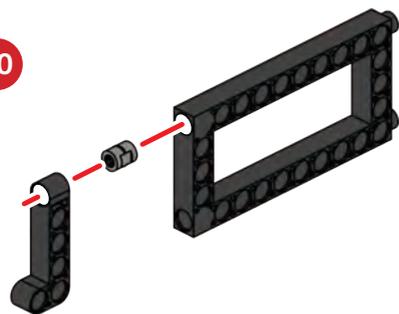


21

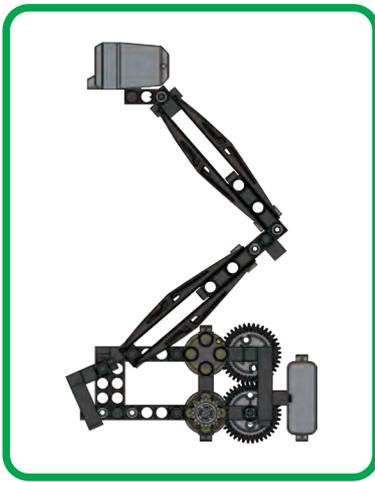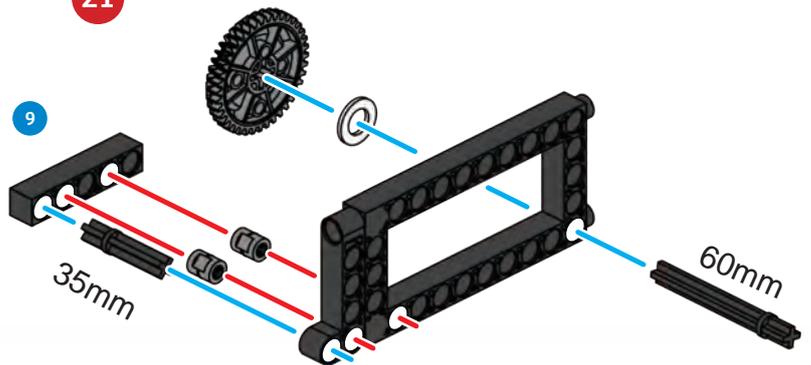




Model 2 Scout Robot


22

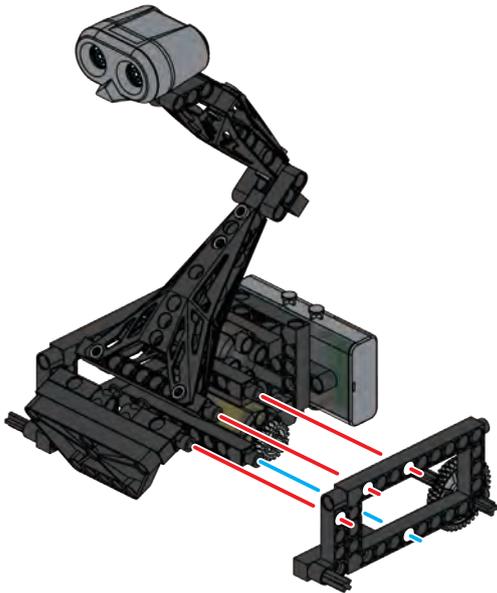

23 x2

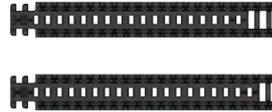

How to assemble tracks:

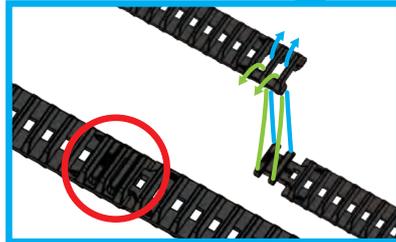


24



25




26

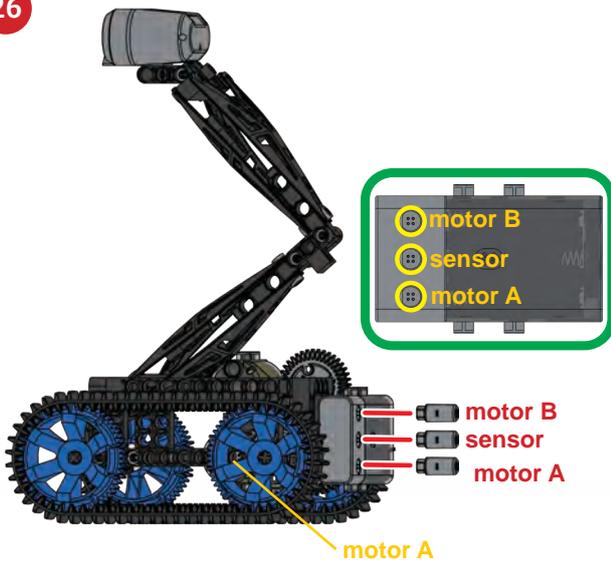

27



Done!

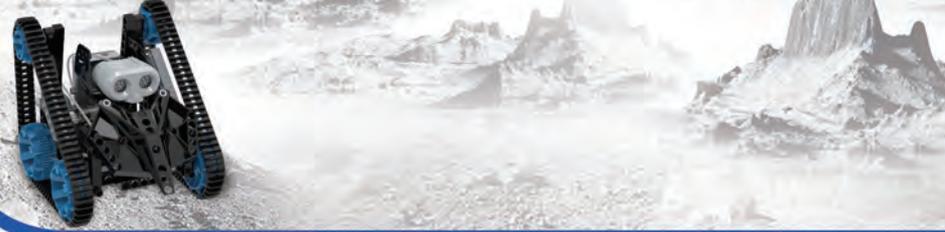

Scout Robot Model 2



SAMPLE PROGRAM FOR THE SCOUT ROBOT

First, place several large objects along a corridor or hallway. When you run this program, the scout robot will be able to navigate around these obstacles. First, the scout robot will move forward until an object is detected by the ultrasonic sensor. When an object is within range of the scout robot, it will back away and turn. Then the scout robot will continue to move forward again in a new direction until it detects another object.

This program is preloaded in the app under Program 18. Test out the program and write down how the robot behaves for each program segment below.



DEMO PROGRAM:

Program 18

OPENING SEGMENT:

SEGMENT 0-40:

SEGMENT >41:

PROGRAMMING NOTES












Model 3 Tracker Bot

Parts Needed







●●● Hard

1	2	3	4	6	8	9	10	11	13
x12	x32	x1	x2	x8	x2	x4	x2	x2	x2
14	15	16	17	18	20	21			
x1	x1	x2	x3	x1	x2	x2			
22	23	24	25	26	27	28	29	30	
x2	x2	x2	x1	x1	x2	x2	x2	x2	
31	32	34	35	36	37	38	39		
x2	x3	x6	x1	x1	x1	x2	x4		
40	41	42	43	44	45				
x4	x2	x4	x4	x1	x1				

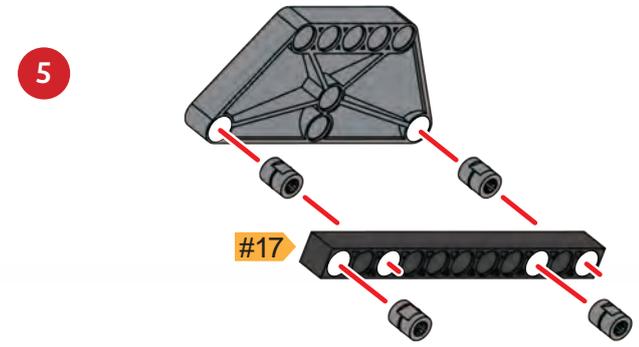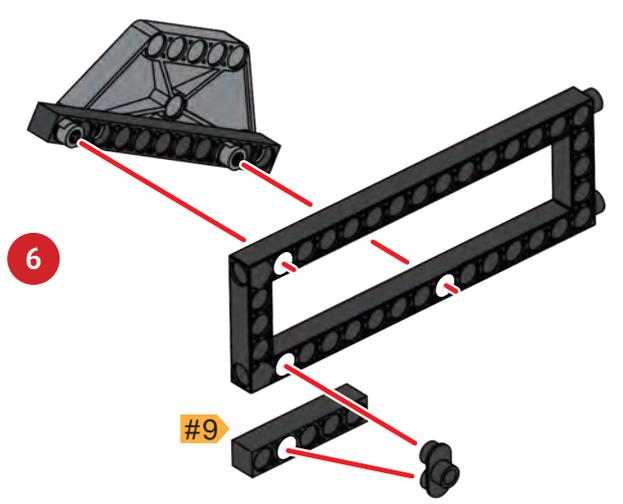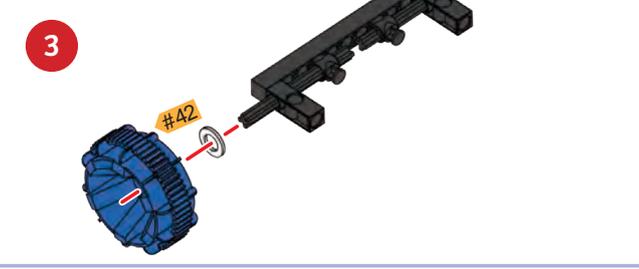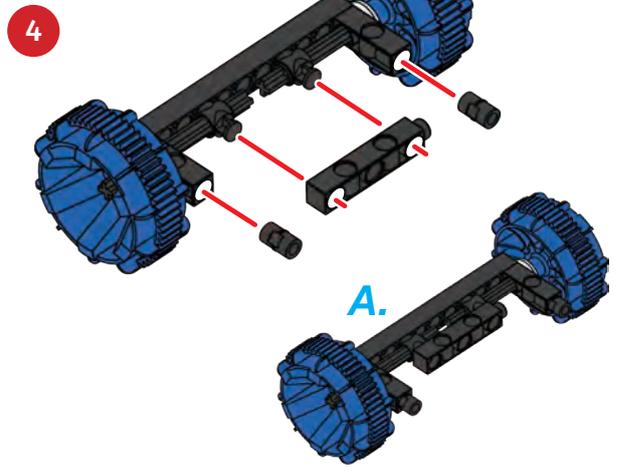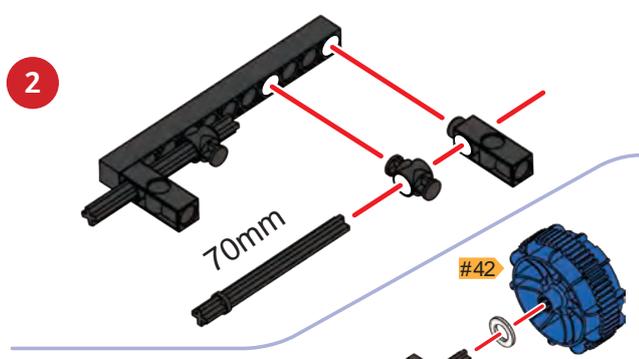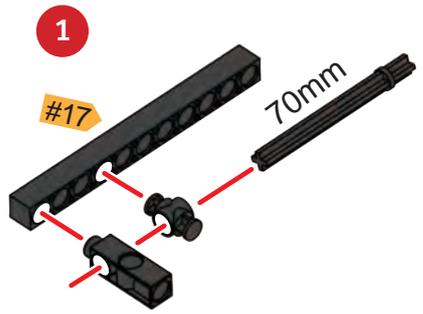








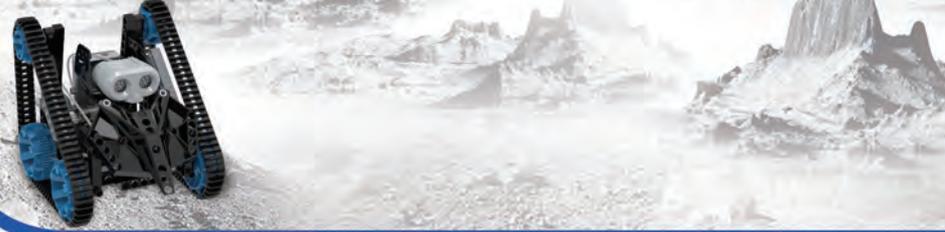


Tracker Bot Model 3

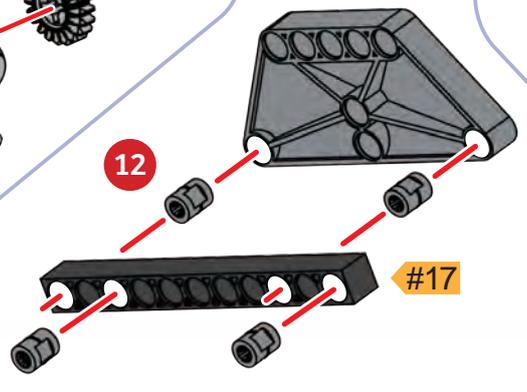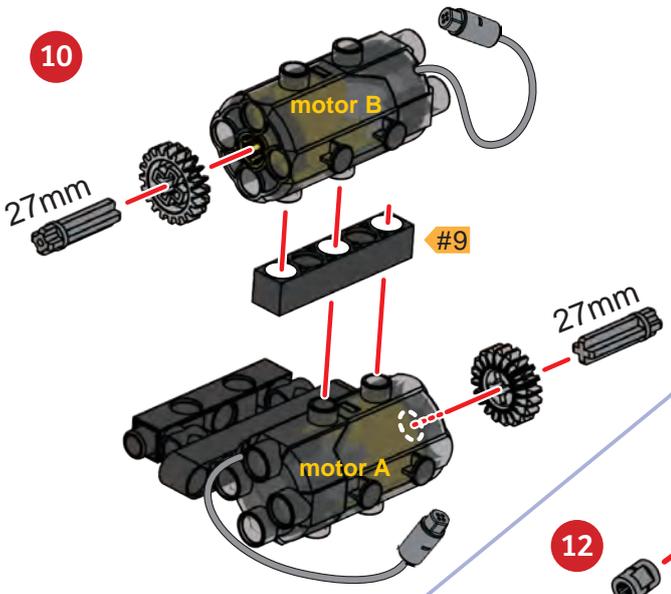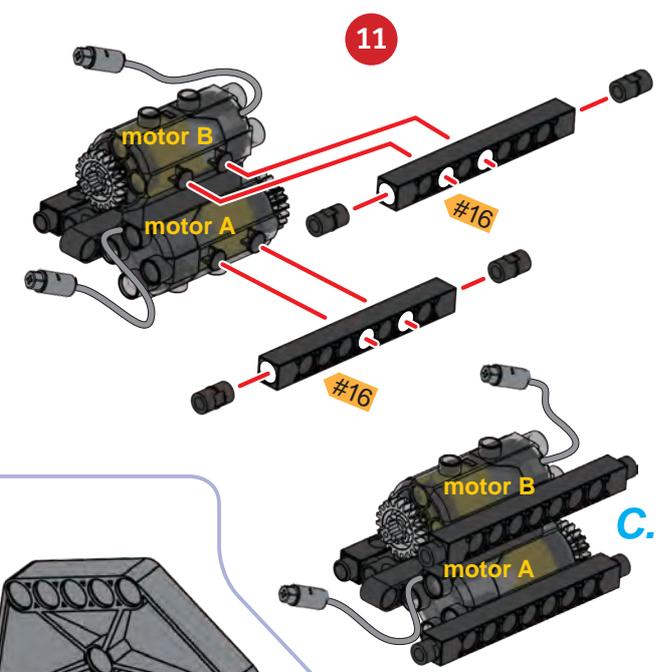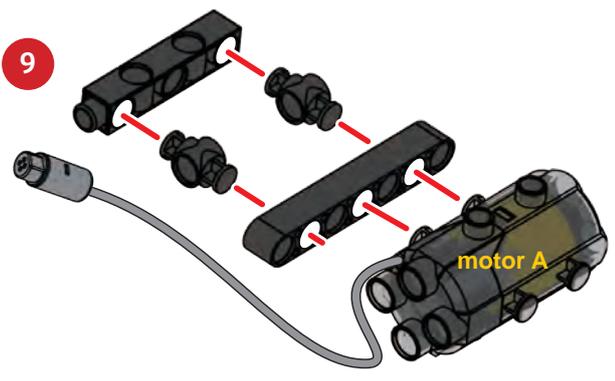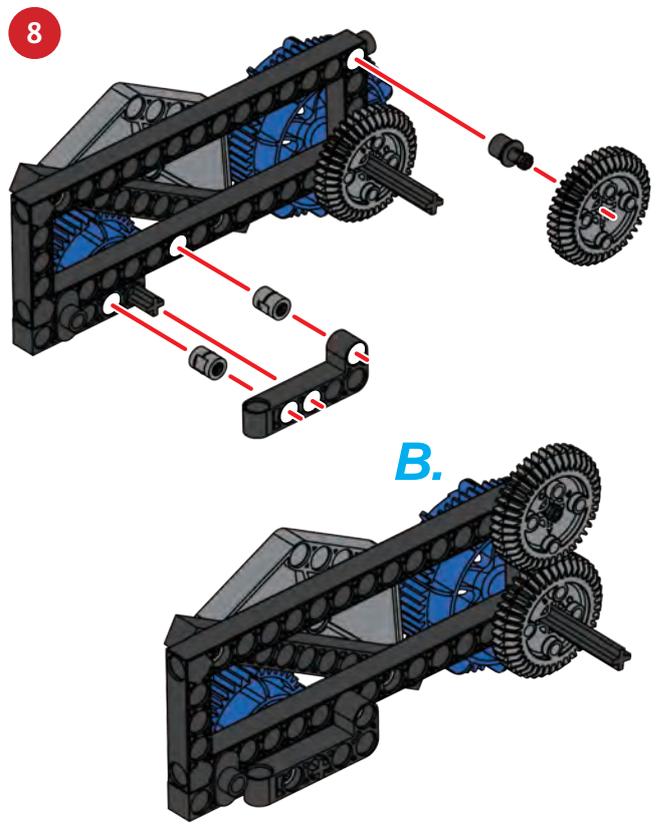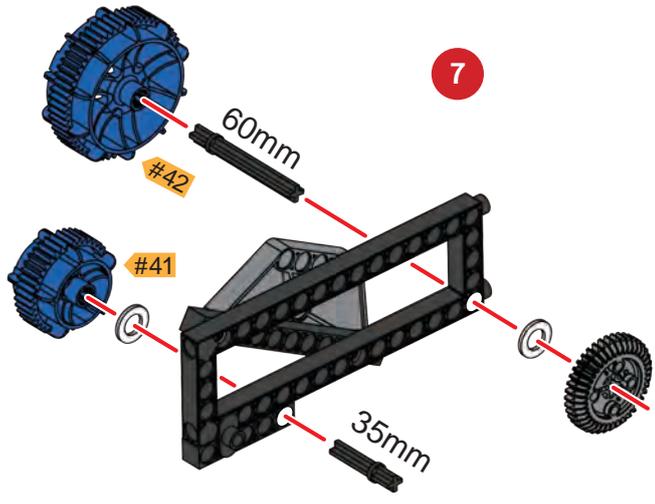











Model 3 Tracker Bot

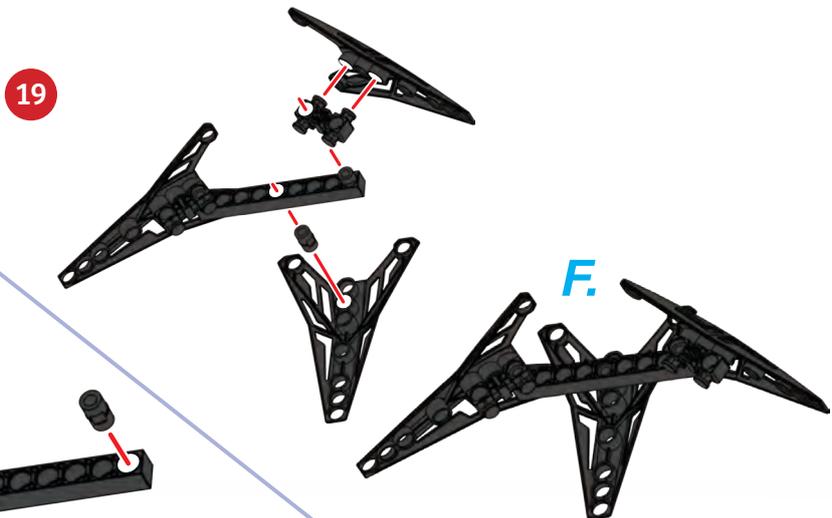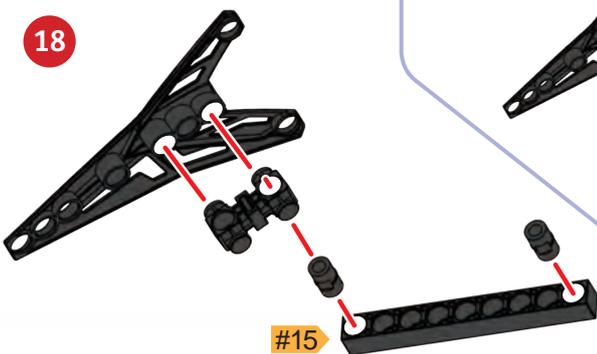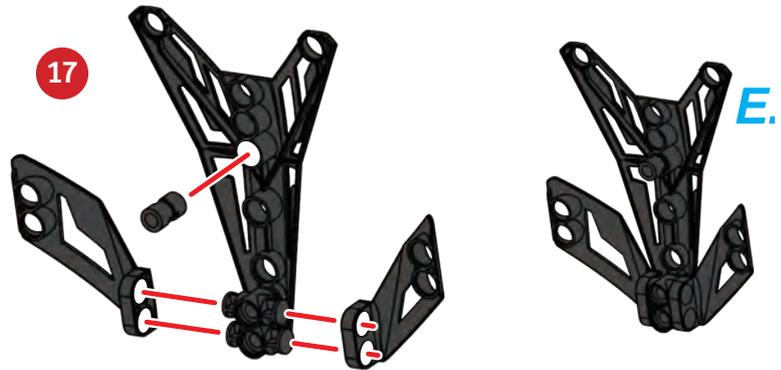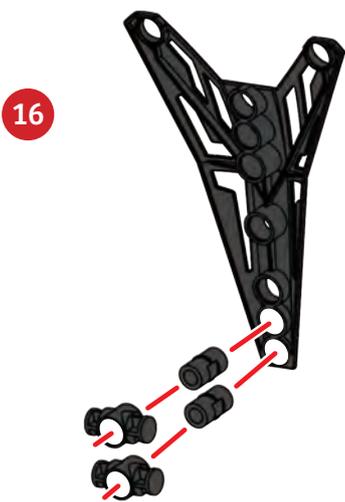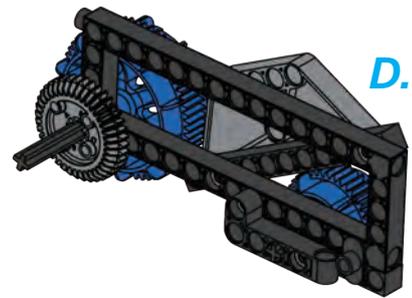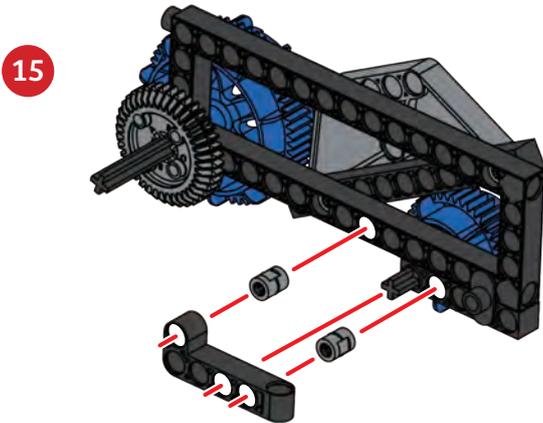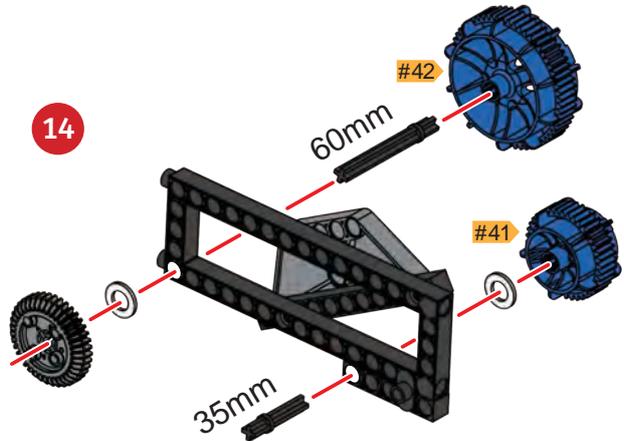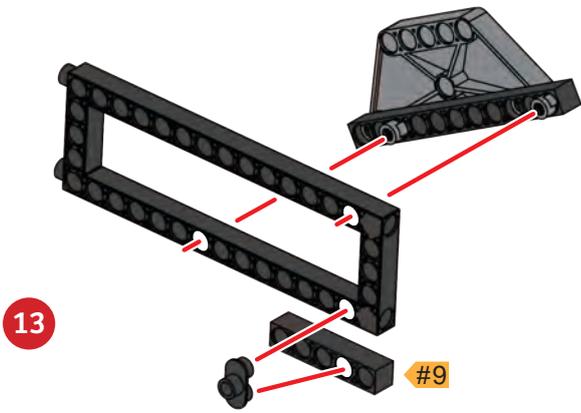







Tracker Bot Model 3

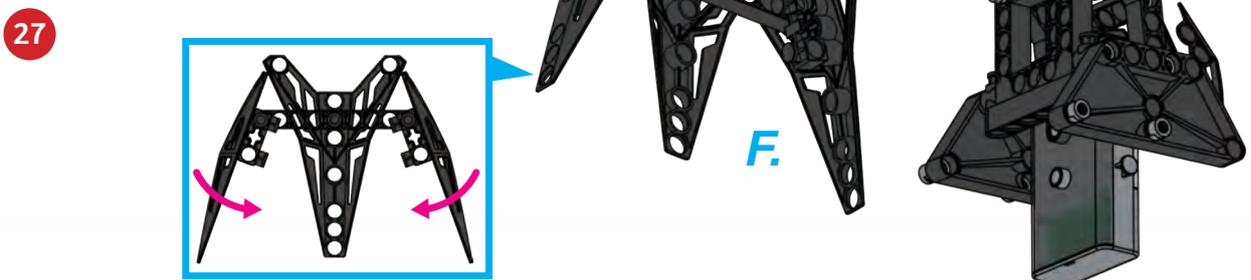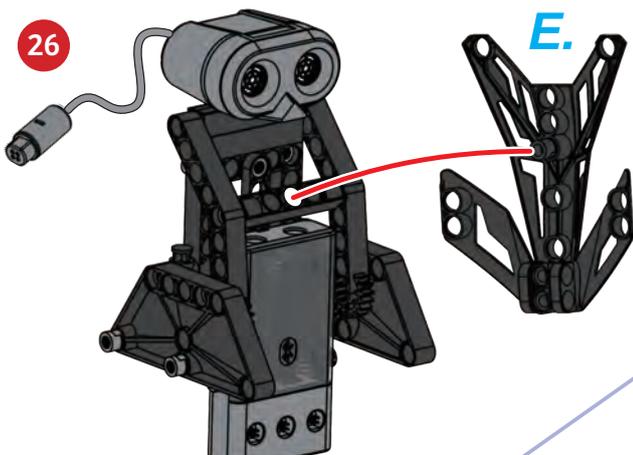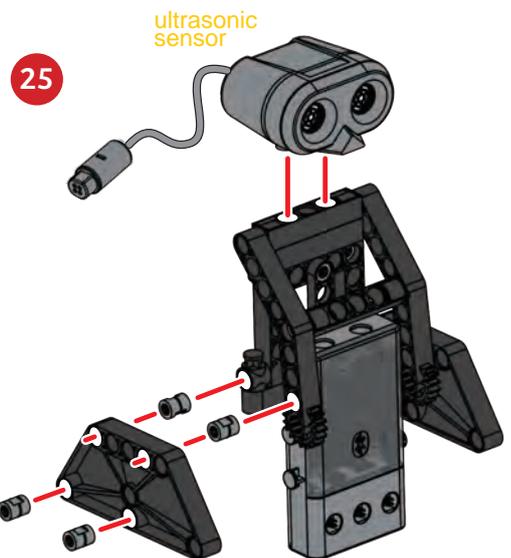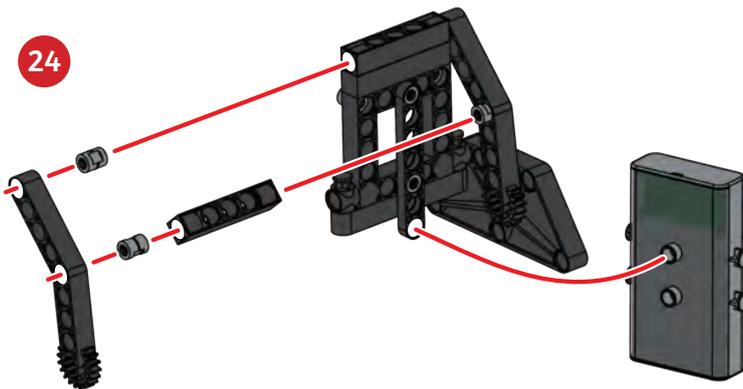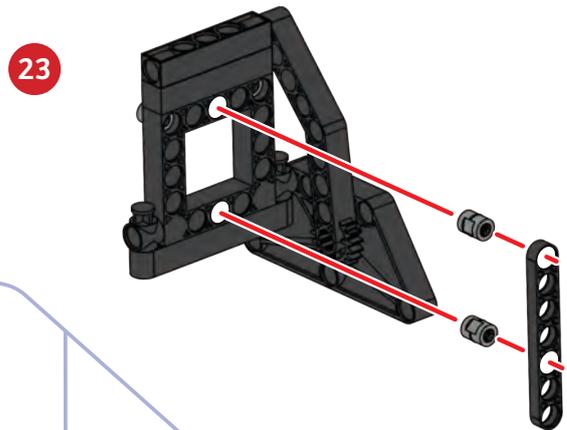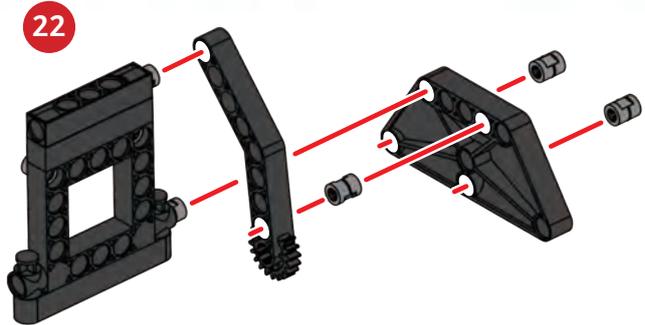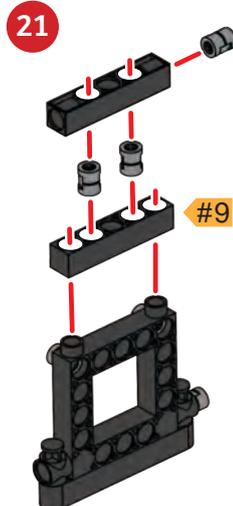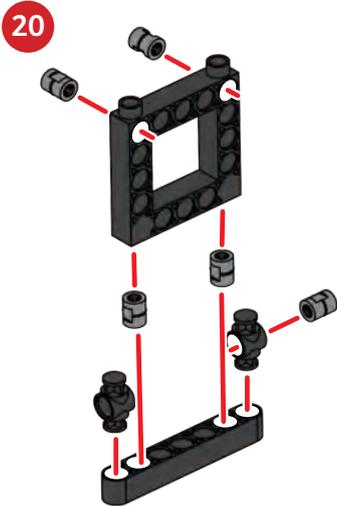





Model 3 Tracker Bot

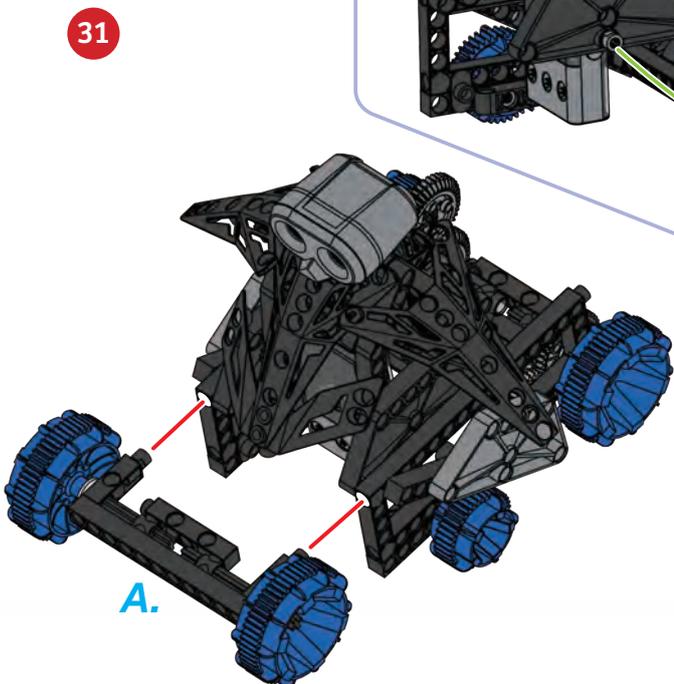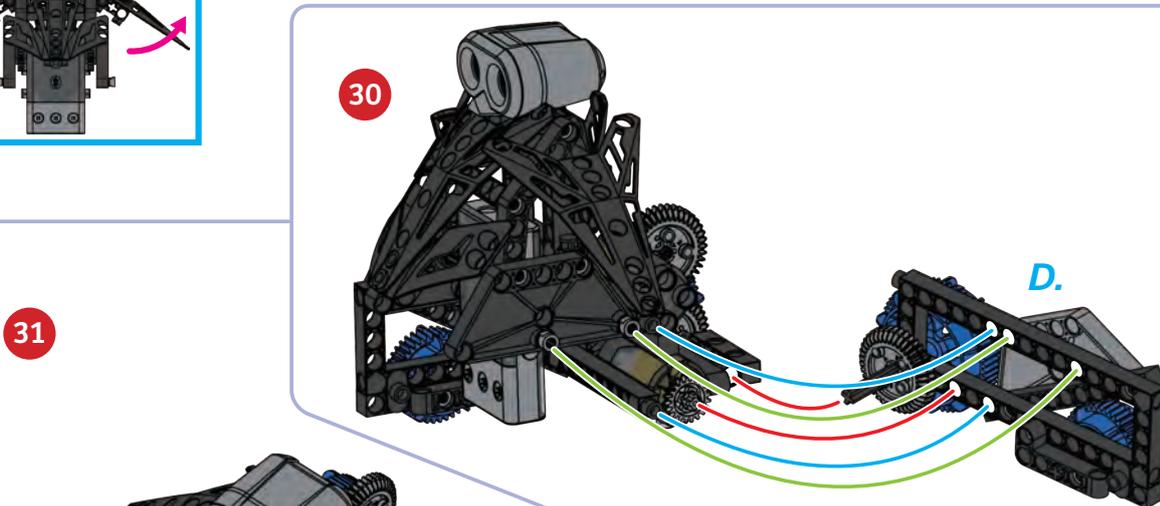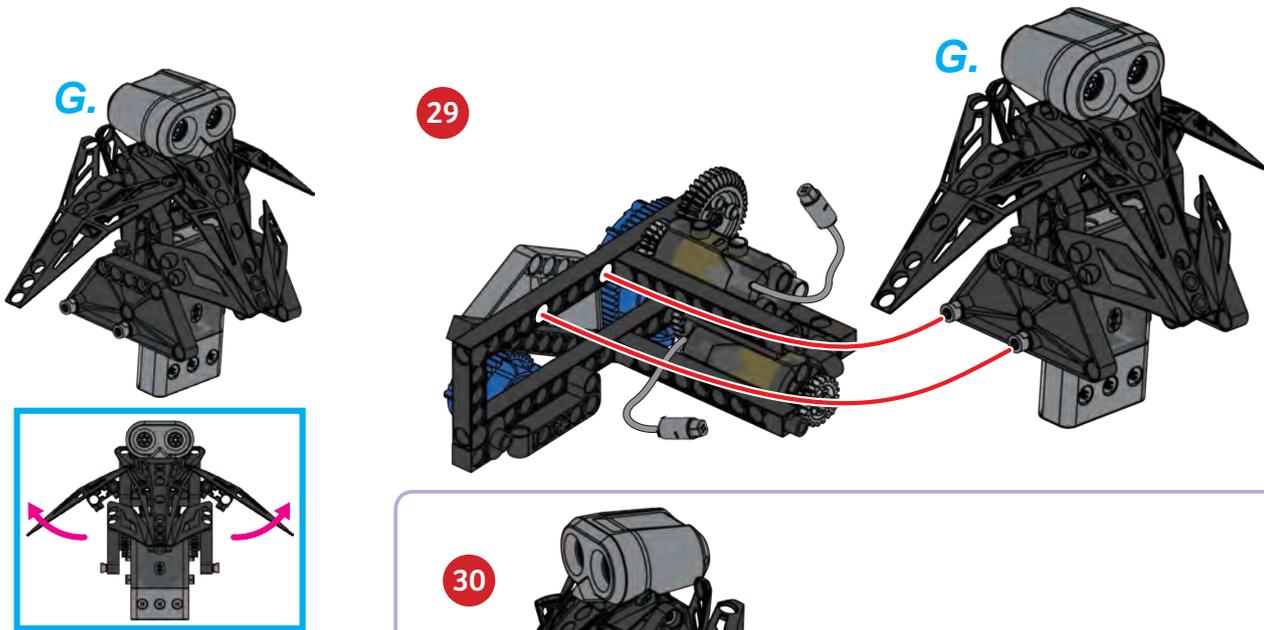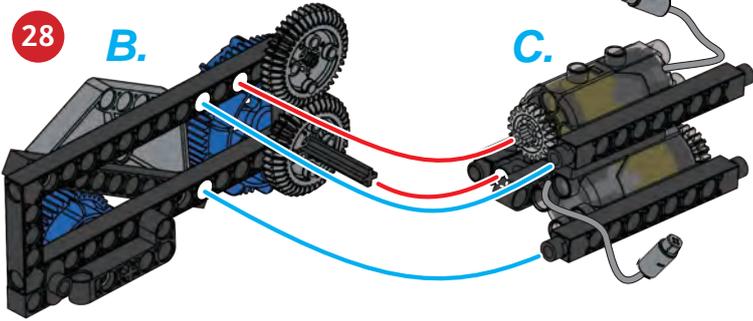




Tracker Bot Model 3


32

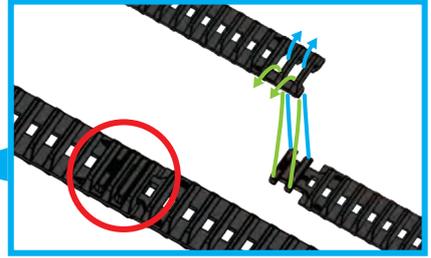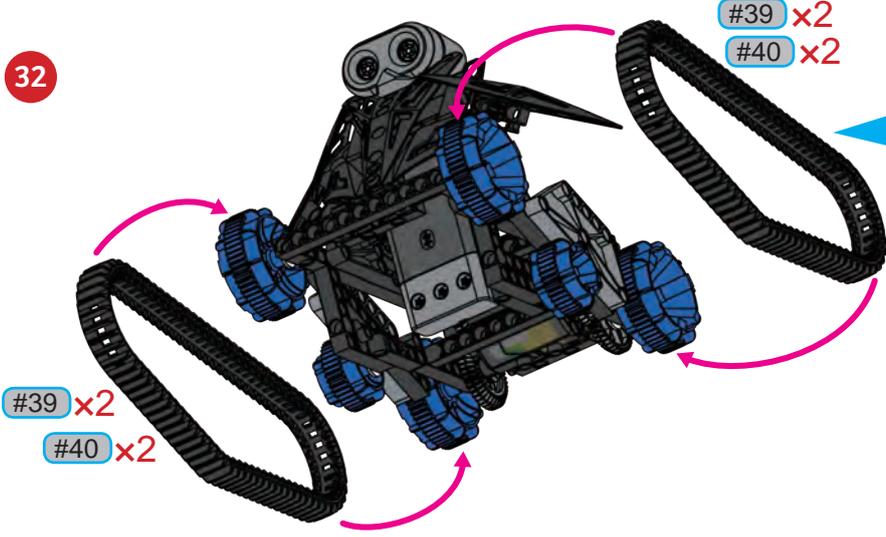

33

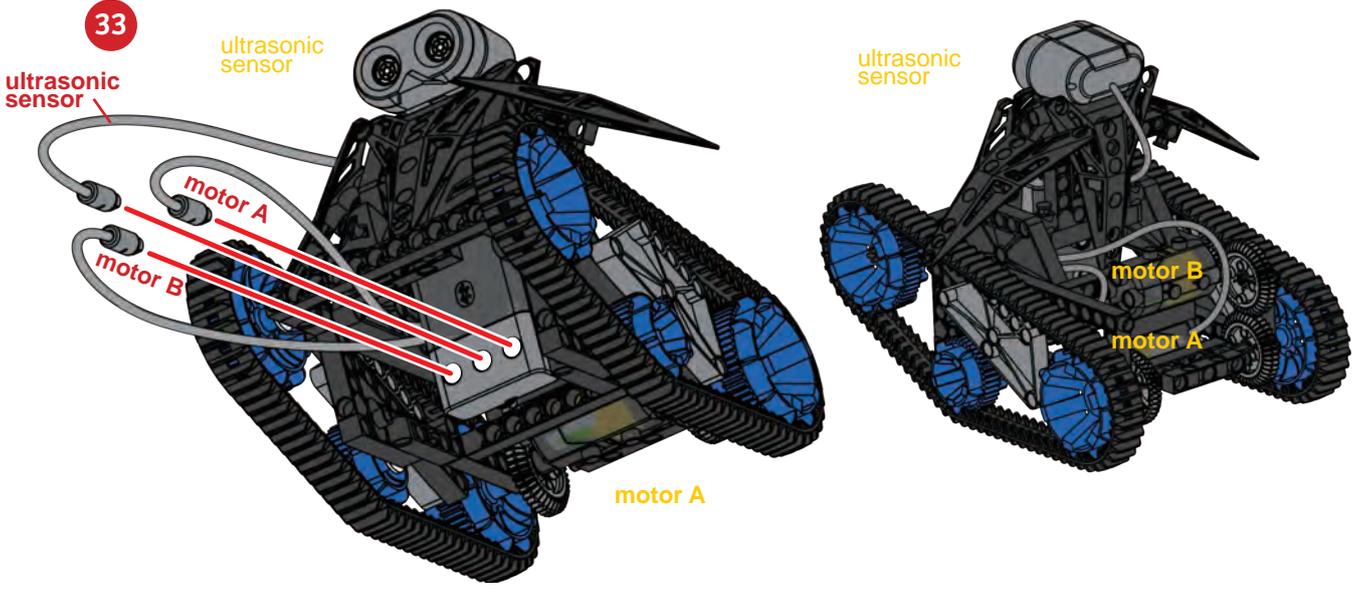

34

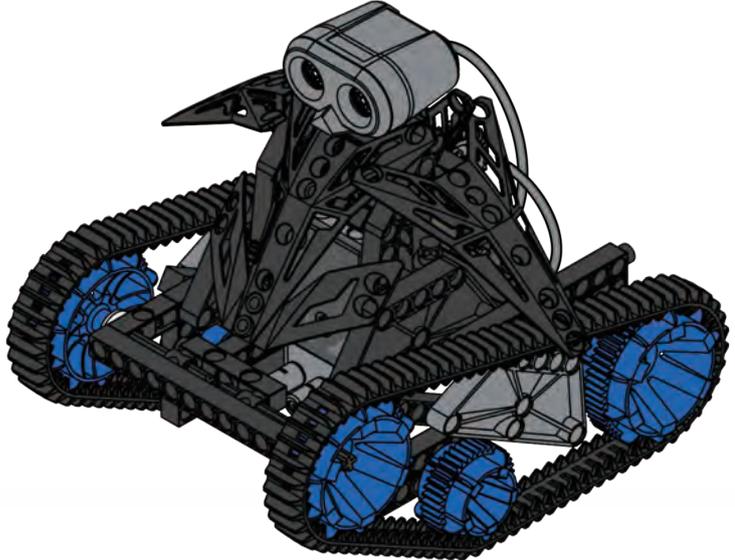

Done!



Programming




SAMPLE PROGRAM FOR THE TRACKER BOT

The tracker bot is able to use its ultrasonic sensor to follow a moving thing, such as your hand, around. Place the tracker bot a few feet away from any large objects such as walls or furniture. Run the program and move your hand toward the front of the tracker bot. Once the tracker bot has detected your hand with its ultrasonic sensor it will move toward you. Try to get the tracker bot to follow your hand as you move it slowly away from the robot.



This program is preloaded in the app under Program 19. Test it out and write down how the robot behaves for each program segment below.

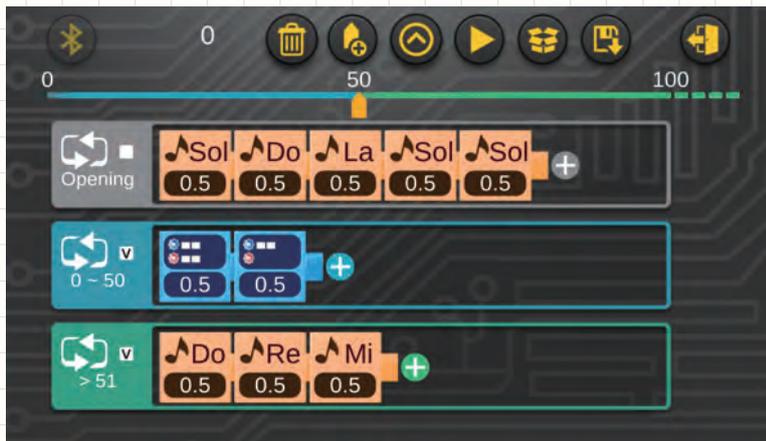

PROGRAMMING NOTES


DEMO PROGRAM:

Program 19

OPENING SEGMENT:

SEGMENT 0-50:

SEGMENT >51:





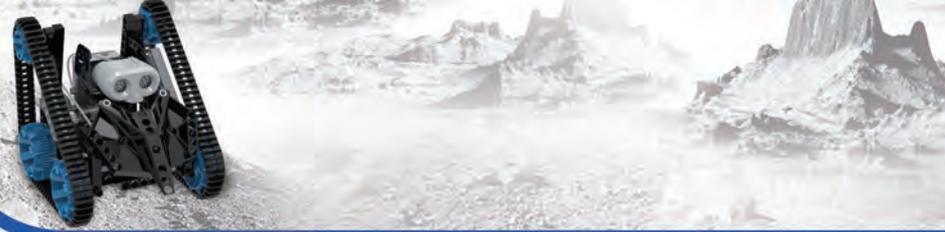


Dozer Bot Model 4

Parts Needed








● ● ● Easy


1 x19	2 x11	3 x1	4 x2	6 x6	7 x1	9 x4	10 x1	12 x4	13 x2							
16 x3	17 x2	19 x2	20 x2	21 x2	22 x2	23 x1	25 x1	26 x1	27 x2	28 x2	29 x2	30 x2	31 x2	32 x3	34 x6	35 x1
36 x1	37 x1	38 x2	39 x4	40 x4	41 x2	42 x4	43 x2									

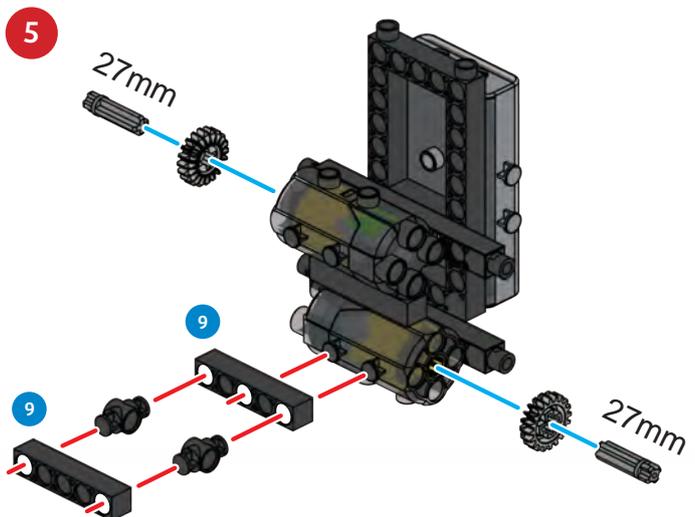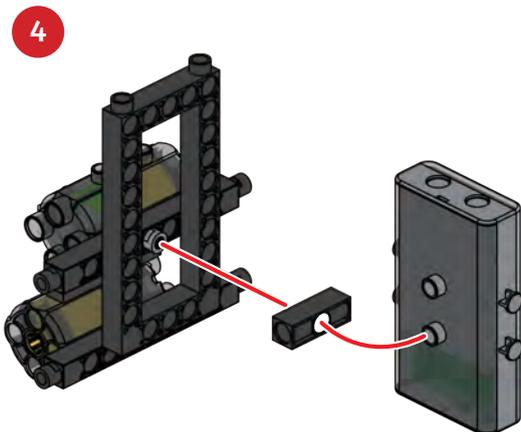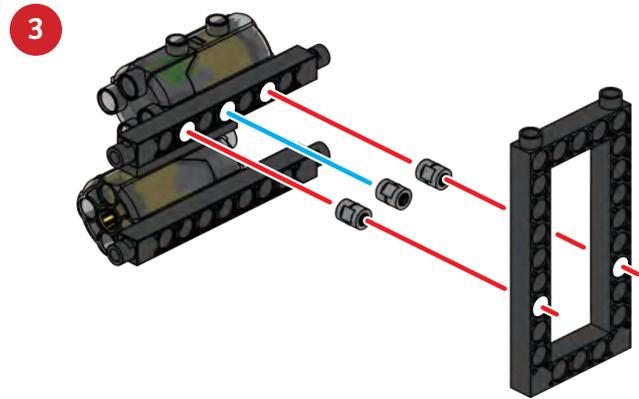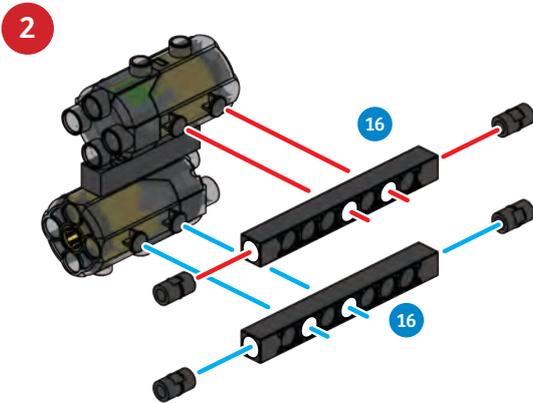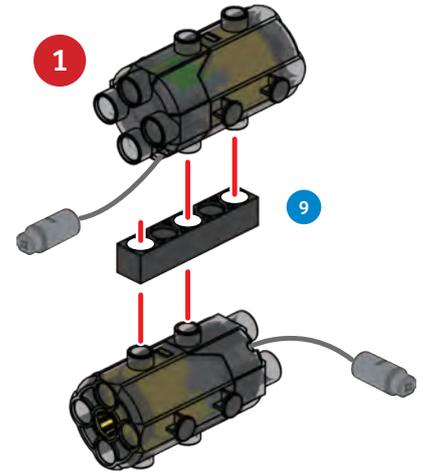




Model 4 Dozer Bot

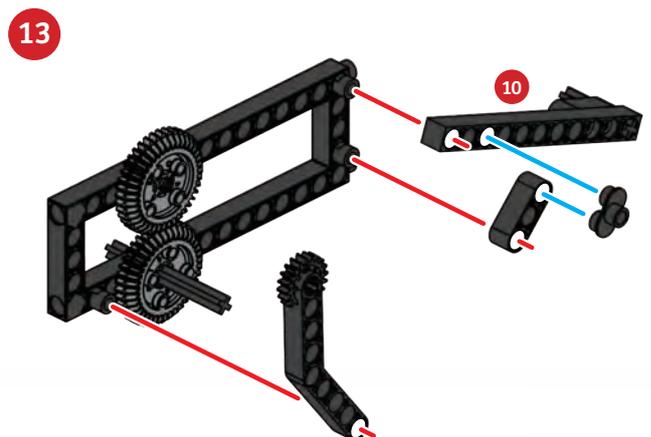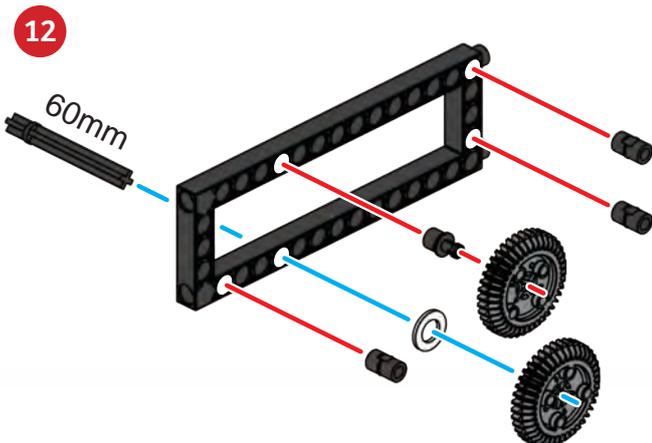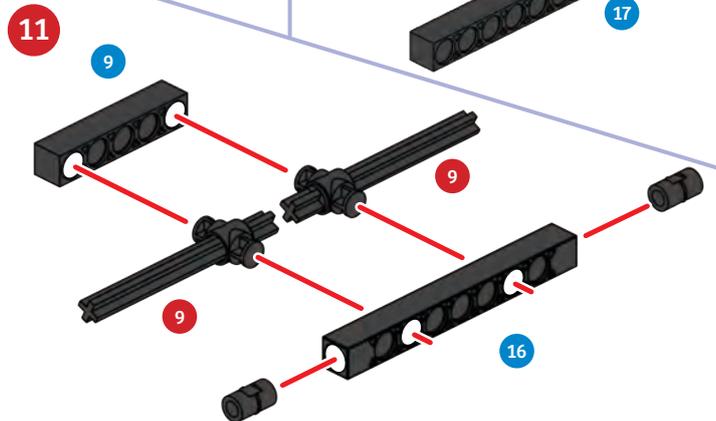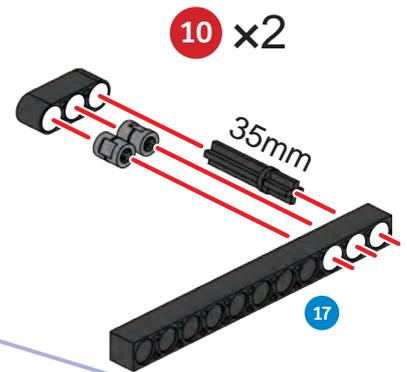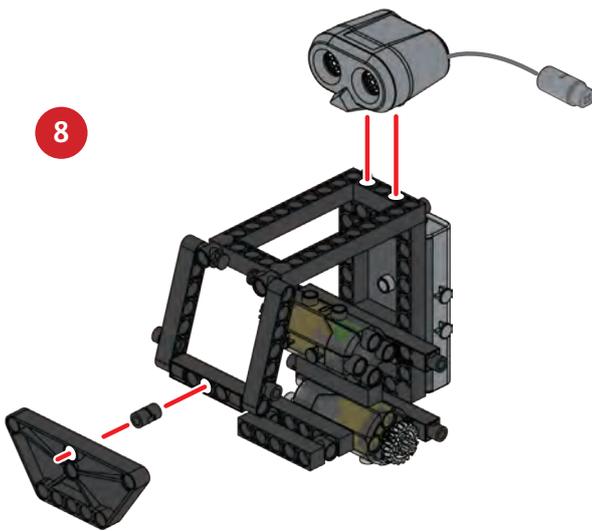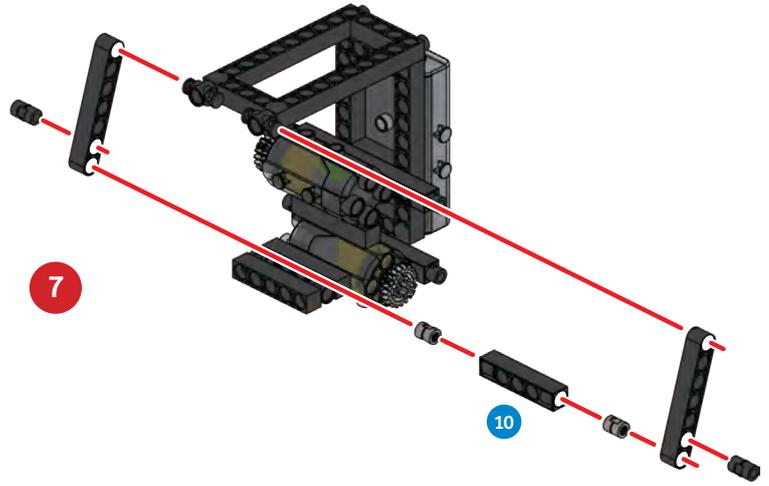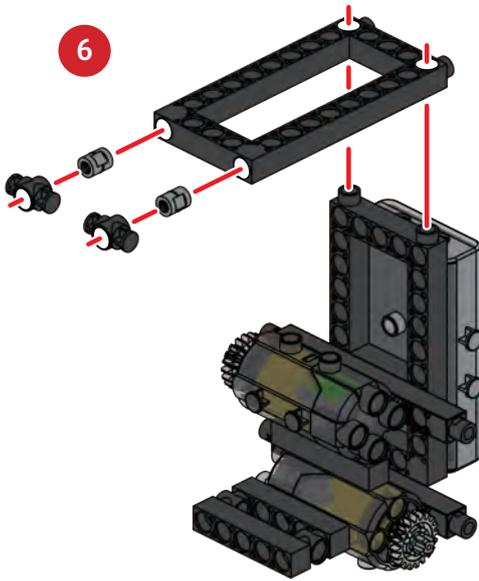

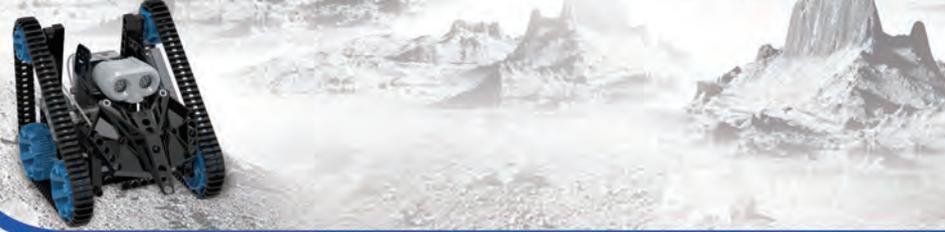


Dozer Bot Model 4


14

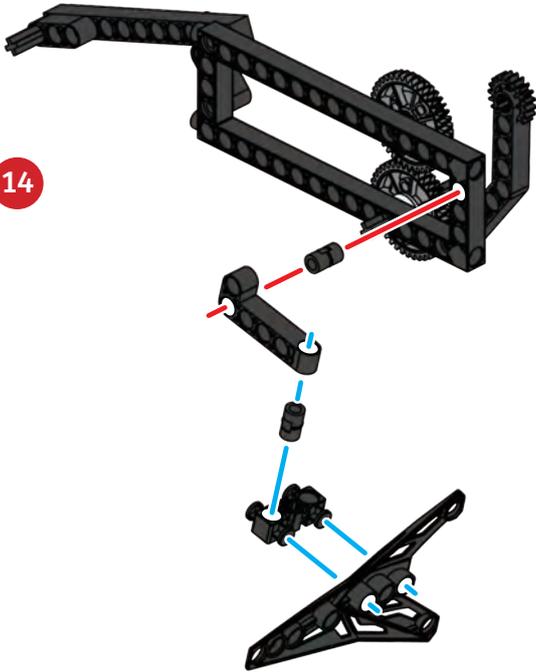


15

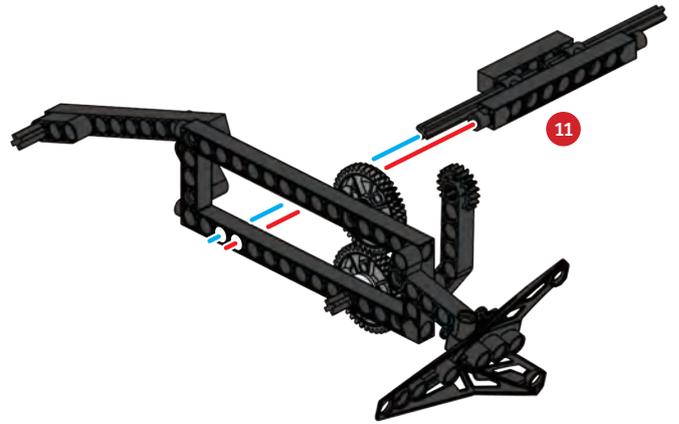


16

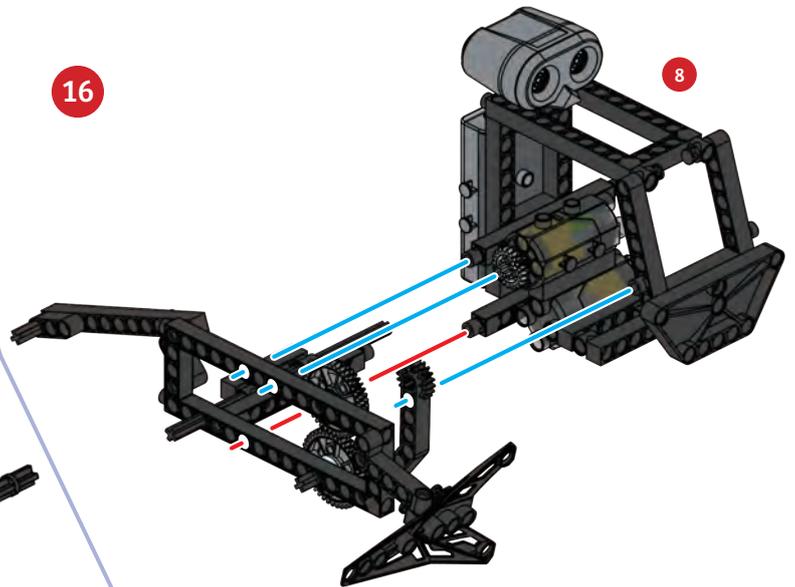


17

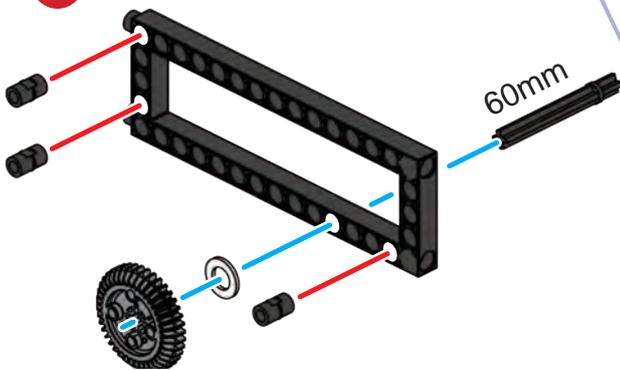

18

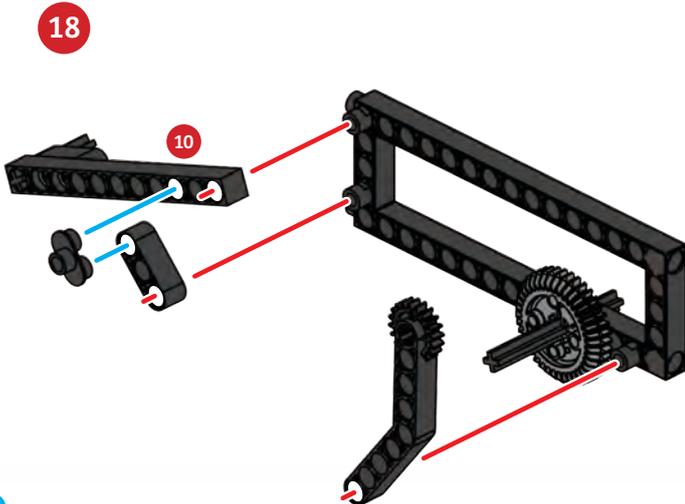


19

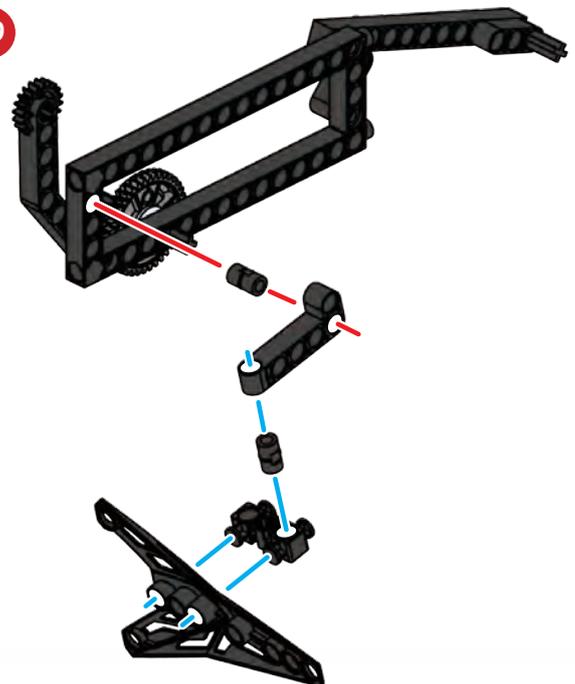




Model 4 Dozer Bot


20

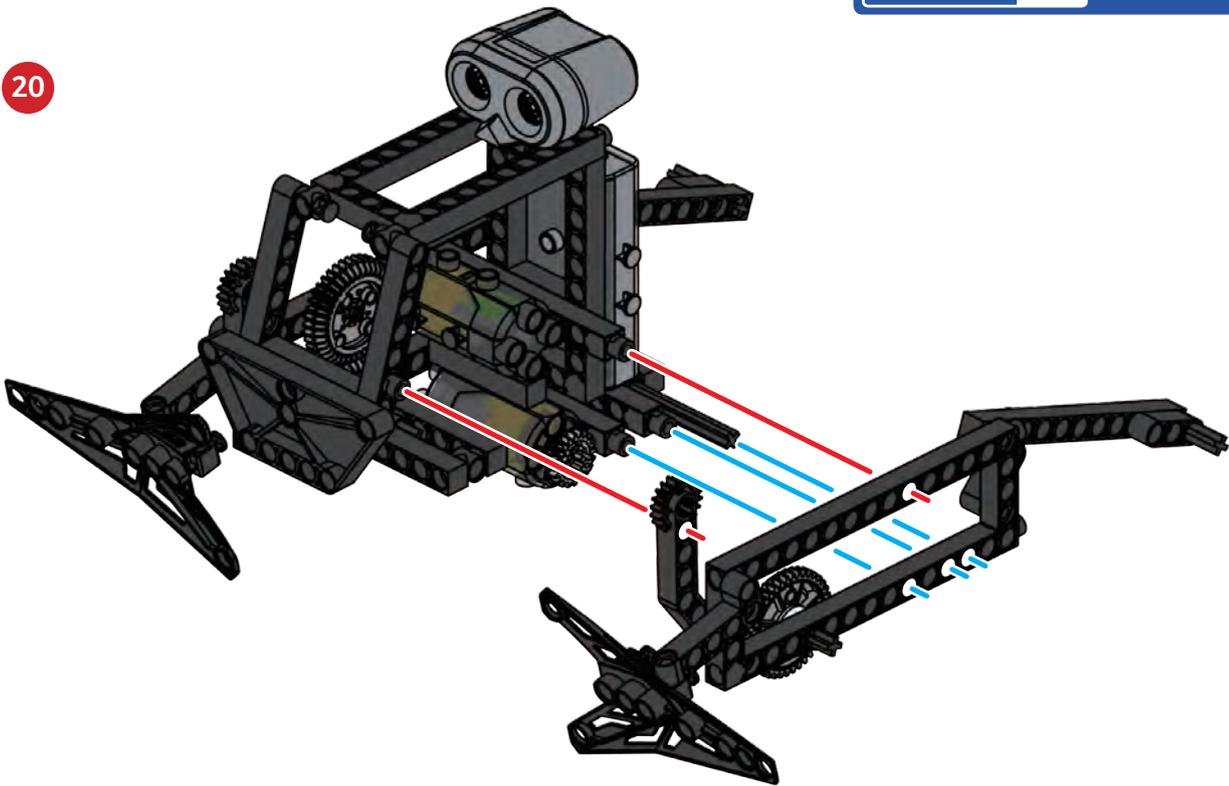


21 x2

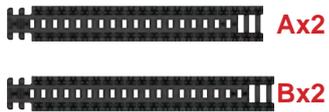

How to build tracks:




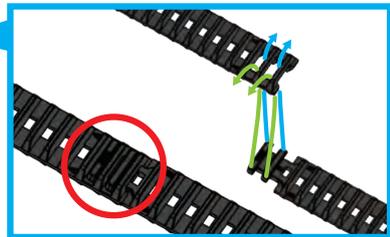


22

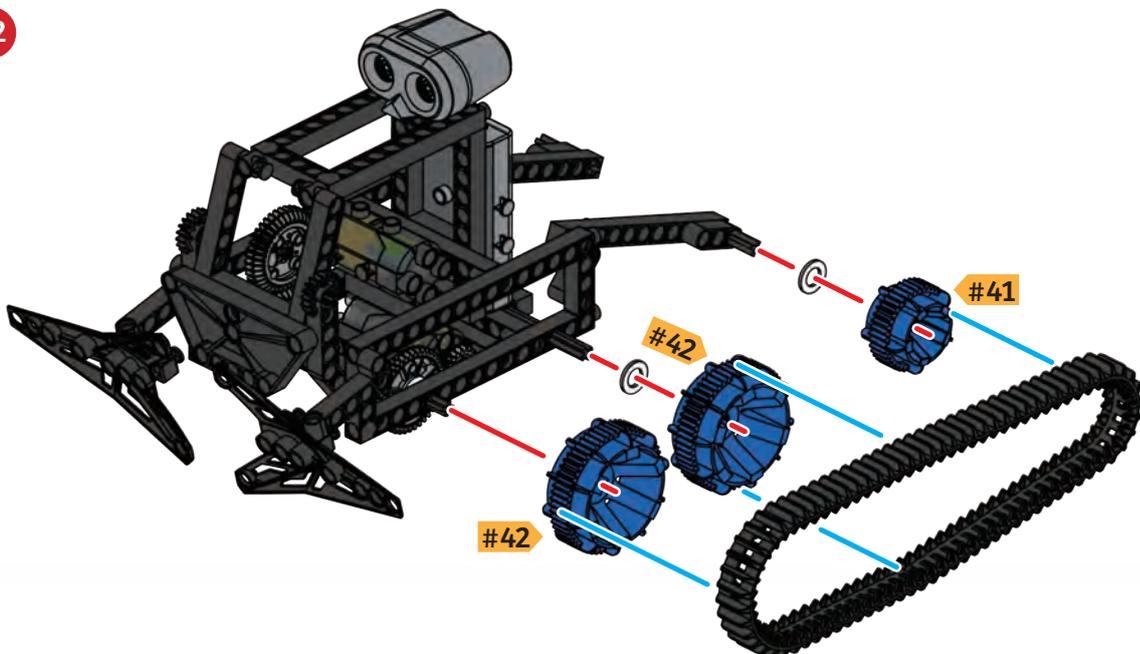



Dozer Bot Model 4

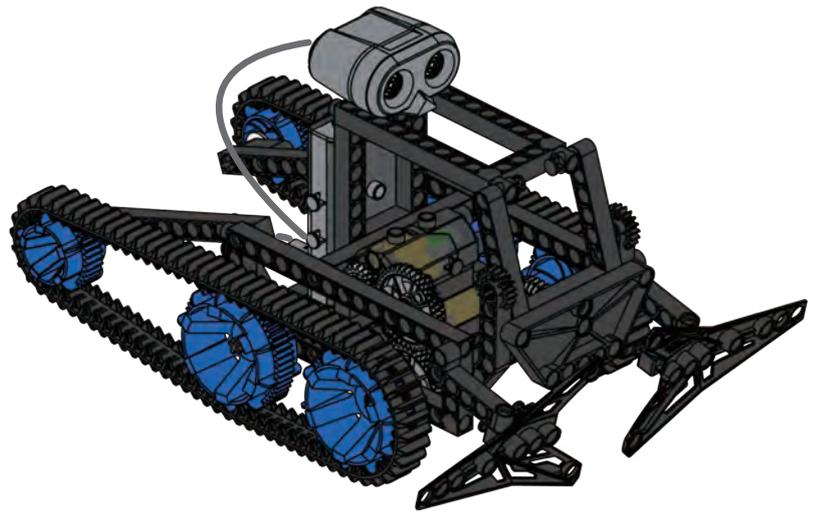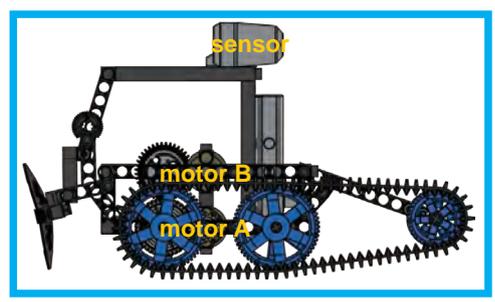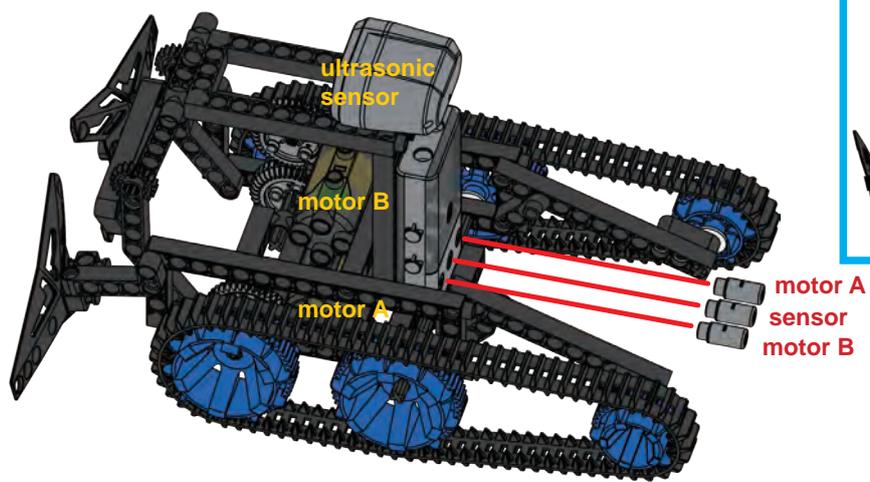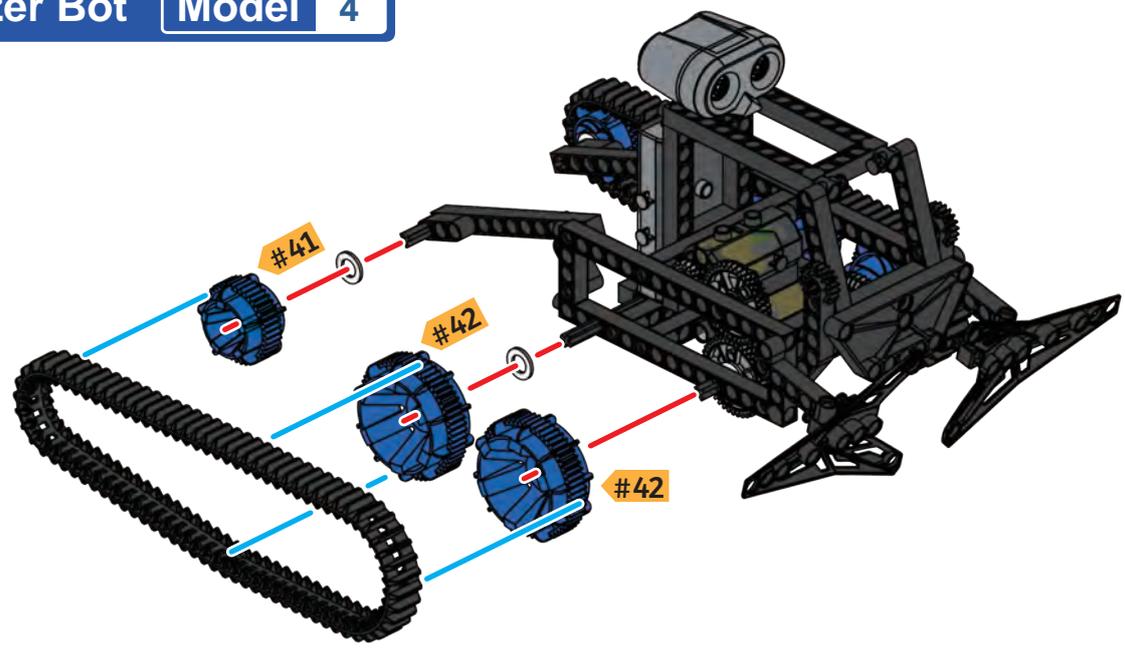

Done!



Programming



SAMPLE PROGRAM FOR THE DOZER BOT

Start by placing small objects, like toy blocks, around the floor of a room. The dozer bot is able to push objects around to create a path. When the program is run, the dozer bot will move forward until an object — like a piece of furniture or a wall — is in front of the ultrasonic sensor. The dozer bot will then stop, backup, turn, and then stop again. Then the dozer bot will continue in a new direction until the ultrasonic sensor detects another object.

This program is preloaded in the app under Program 20. Test it out and write down how the robot behaves for each program segment below.

The screenshot shows the Smart Bricks programming interface with a timeline from 0 to 100. The 'Opening' segment (0-30) contains ten notes: Do (0.5), Do (0.5), Re (0.5), Mi (0.5), Mi (0.5), Re (0.5), Do (0.5), Re (0.5), Mi (0.5), and Do (0.5). The '0-30' segment contains four notes: Do (0.5), Sol (0.5), Do (0.5), and Sol (0.5), followed by a blue block with '2' and a green block with '0.5'. The '>31' segment contains a blue block with '2', a blue block with '1', an orange note Si (0.5), a green block with '0.5', an orange note Si (0.5), and a green block with '0.5'.

PROGRAMMING NOTES

DEMO PROGRAM:

Program 20

OPENING SEGMENT:

SEGMENT 0-30:

SEGMENT >31:










Fire Rescue Robot Model 5








Parts Needed ● ● ● Easy

1	2	3	4	6	8	9	10	11	12	13	14
x13	x25	x1	x2	x3	x2	x4	x2	x2	x4	x4	x2
16	17	18	19	20	21						
x2	x2	x1	x2	x2	x1						
23	24	25	26	27	28	29	31	32	34		
x2	x1	x1	x1	x2	x4	x2	x2	x3	x6		
35	36	37	38	39	40	41	42				
x1	x1	x1	x2	x4	x4	x2	x4				

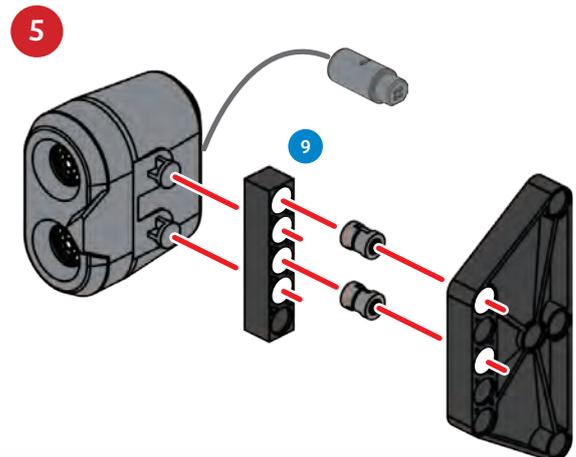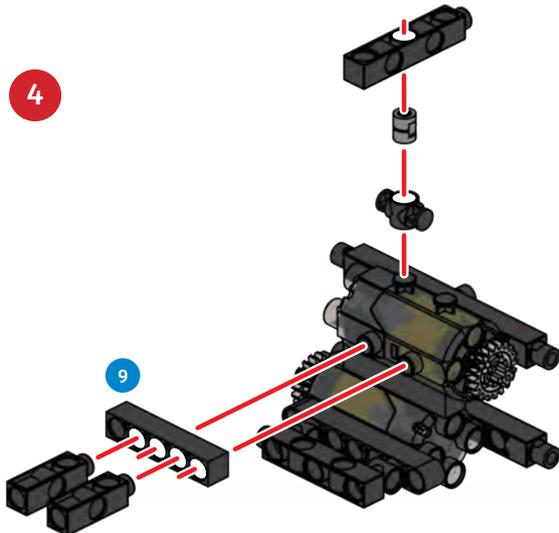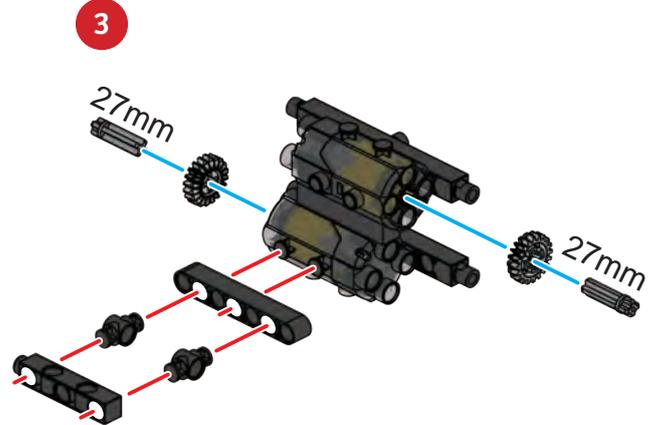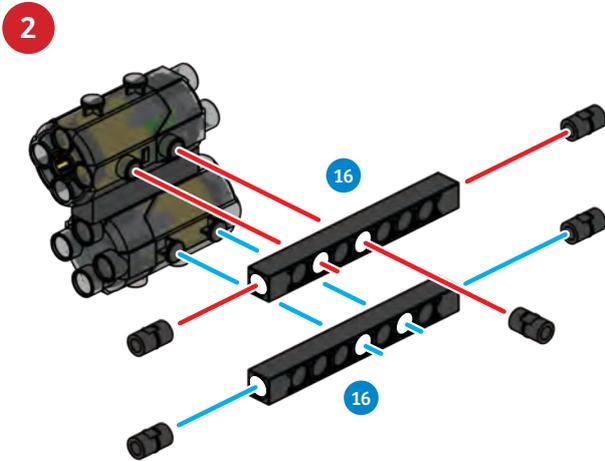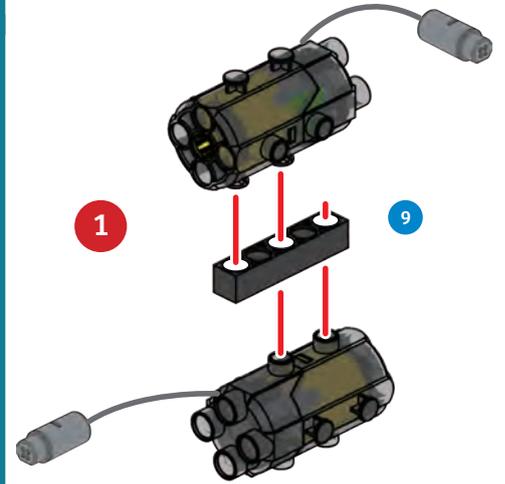








Model 5 Fire Rescue Root

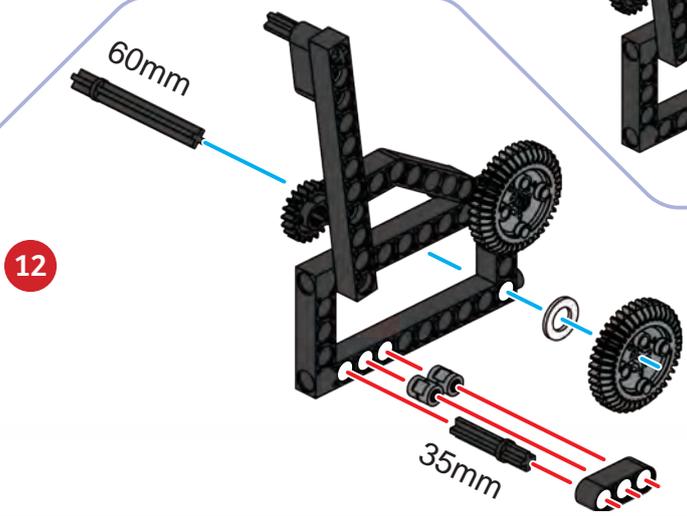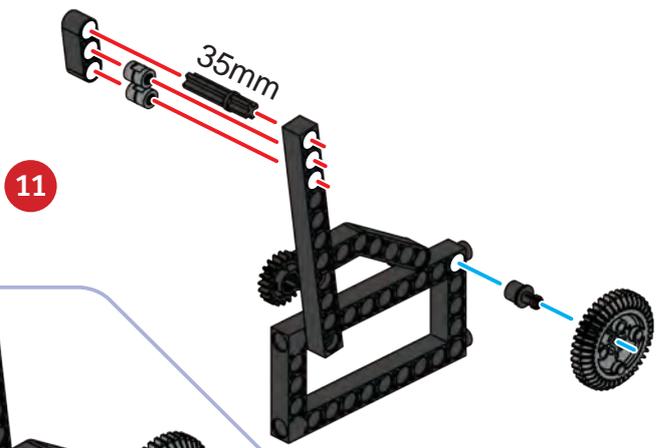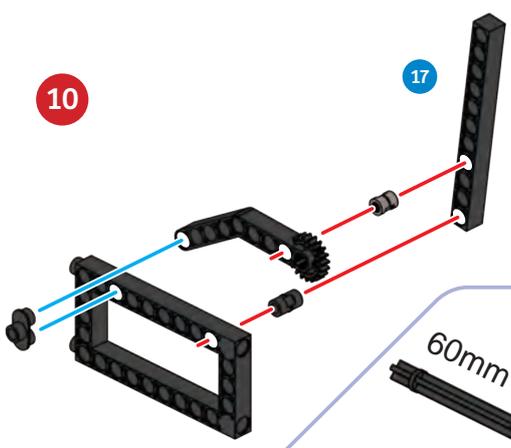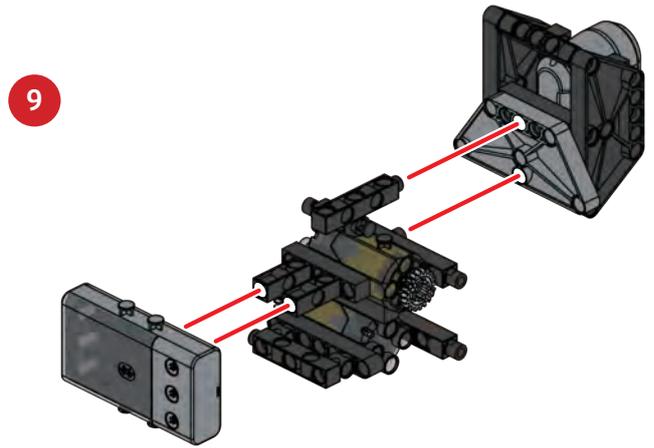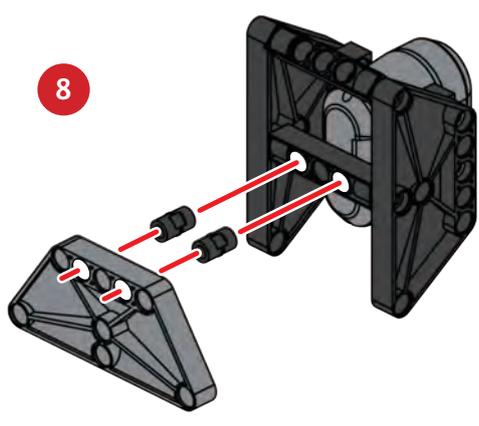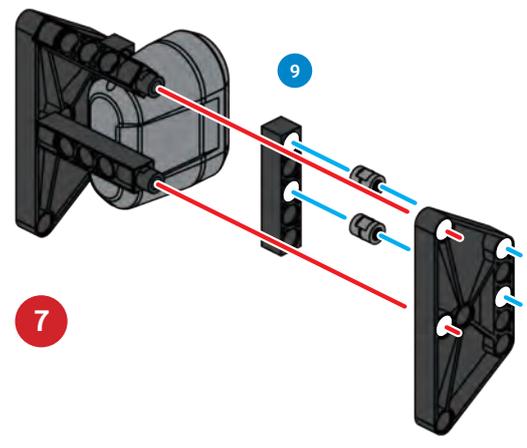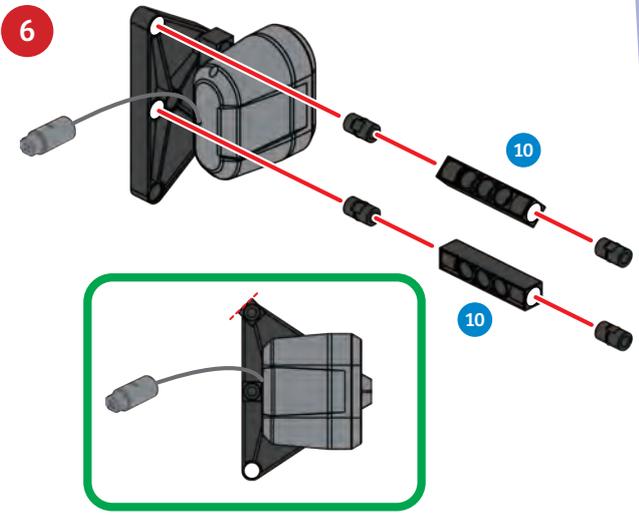






Fire Rescue Robot Model 5

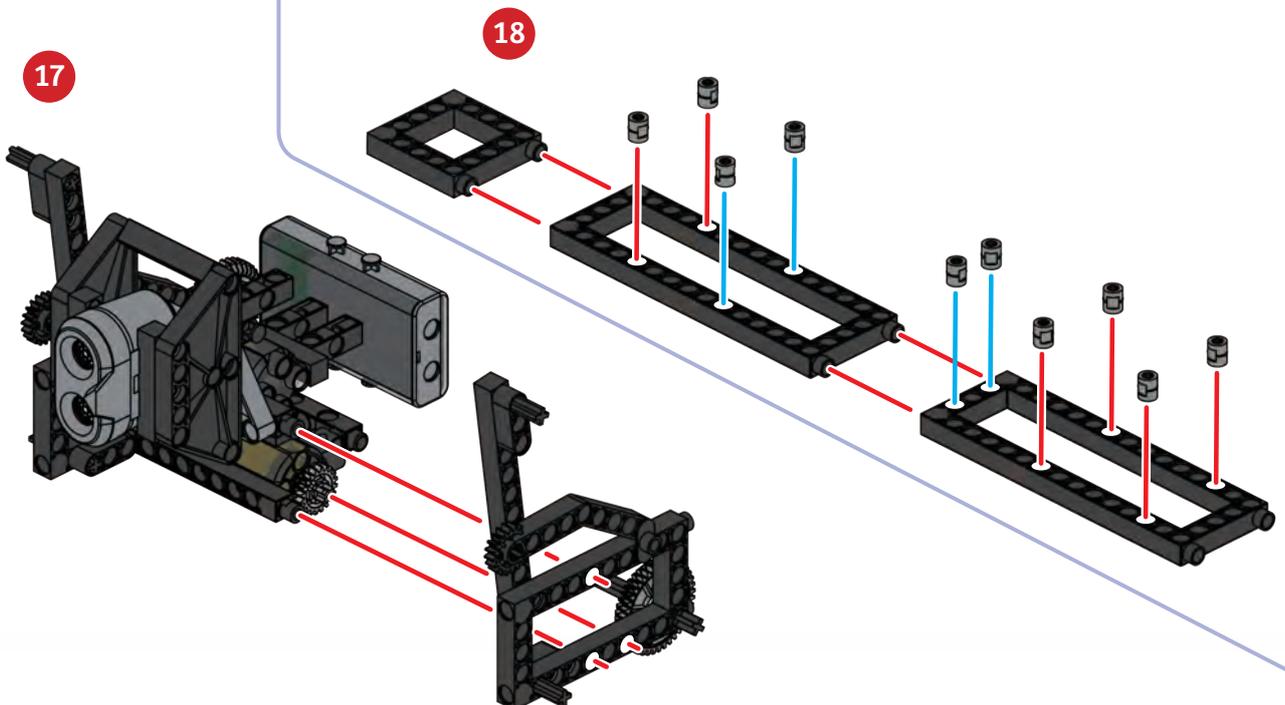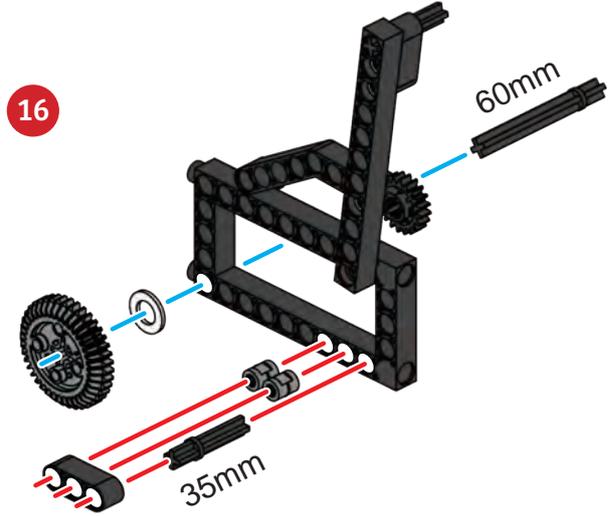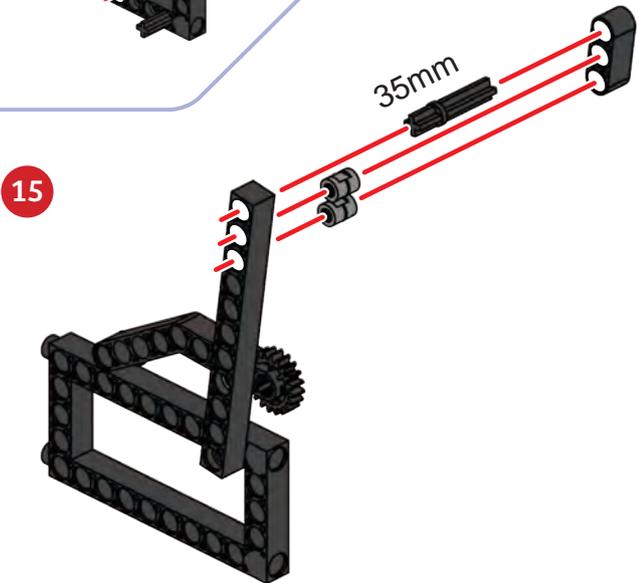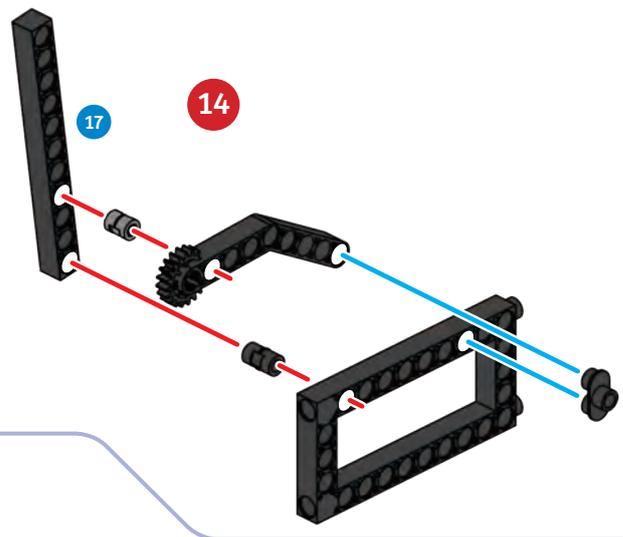
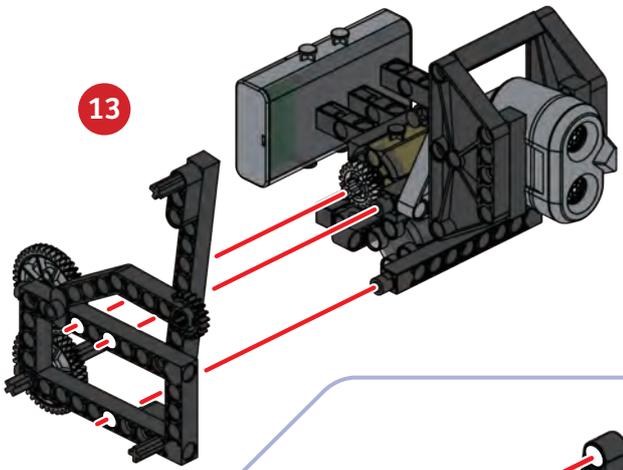




Model 5 Fire Rescue Root

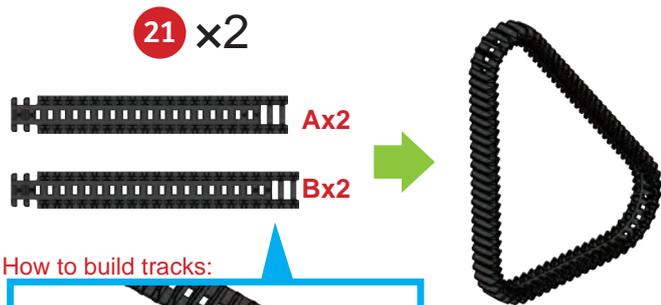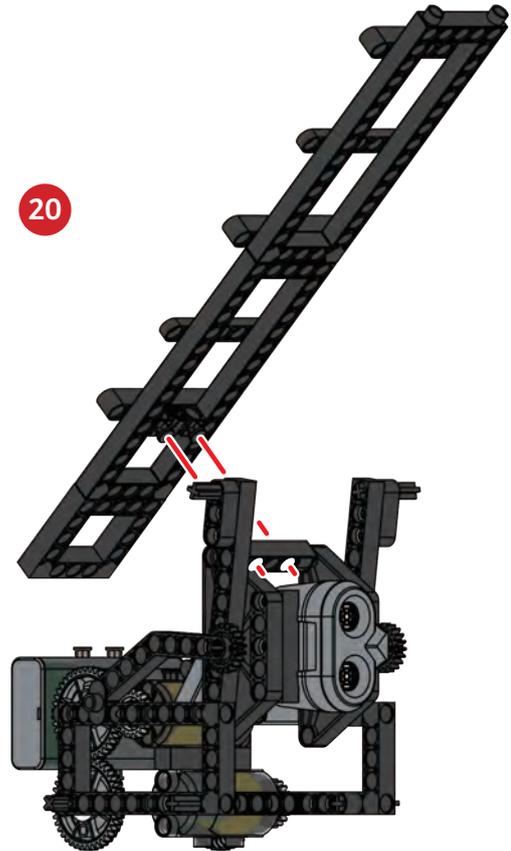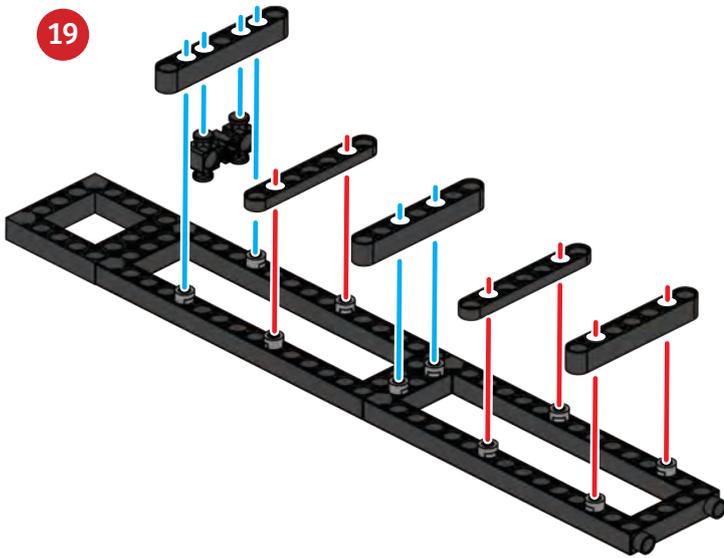


How to build tracks:

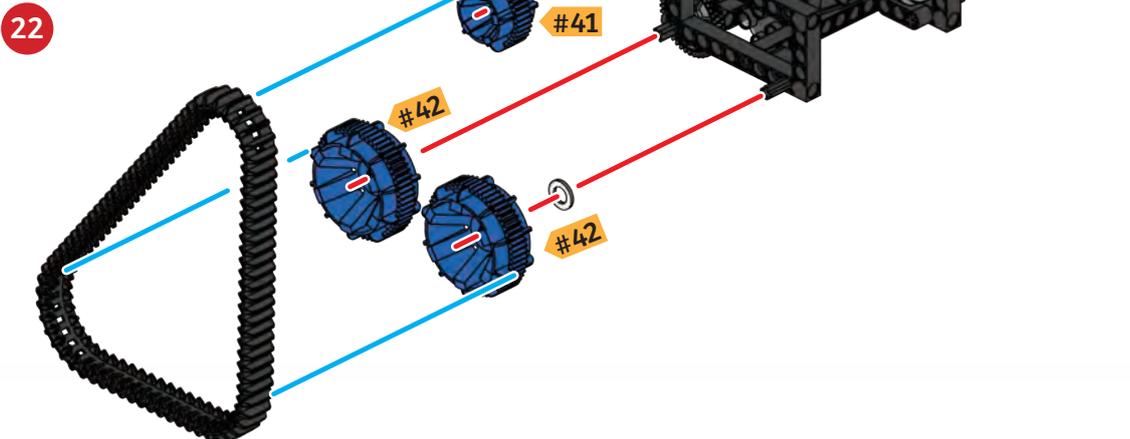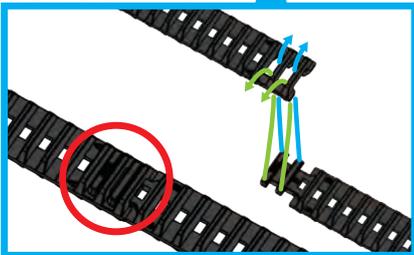




Fire Rescue Robot **Model 5**

23

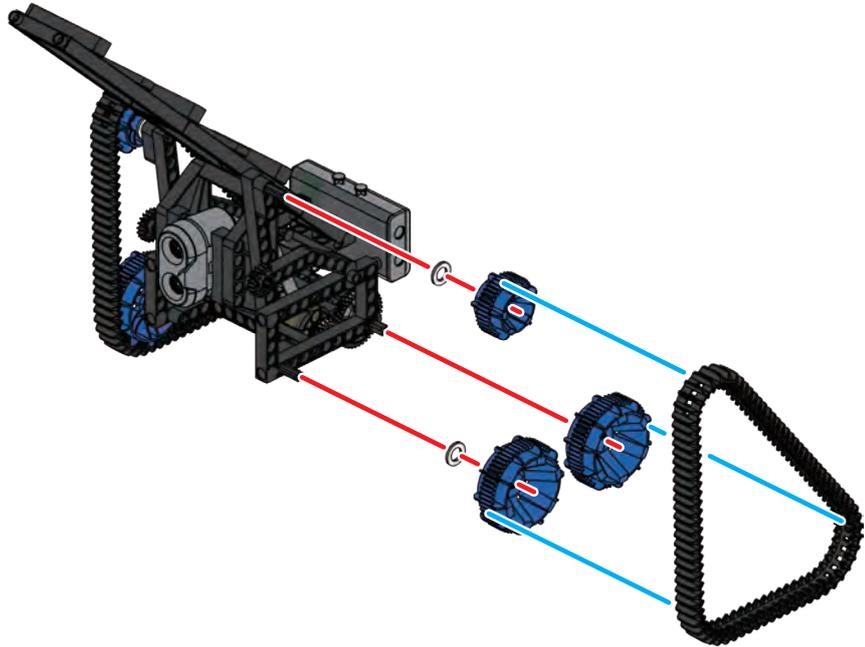

24

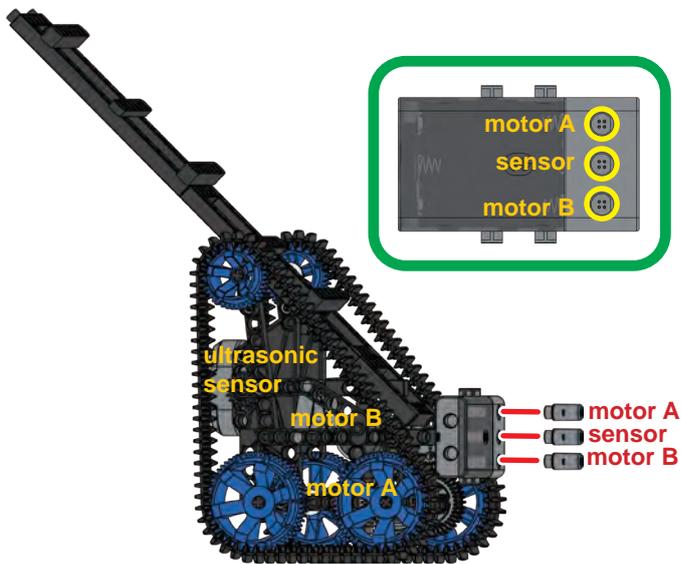

25



Done!




Programming

SAMPLE PROGRAM FOR THE FIRE RESCUE ROBOT

The fire rescue robot is programmed to drive up close to an object so that its ladder is positioned right next to the object. Start by placing the fire rescue robot in front of an object. The fire rescue robot will pause, then back away, and then turn. Then it will move forward toward another object.

This program is preloaded in the app under Program 21. Test it out and write down how the robot behaves for each program segment below.

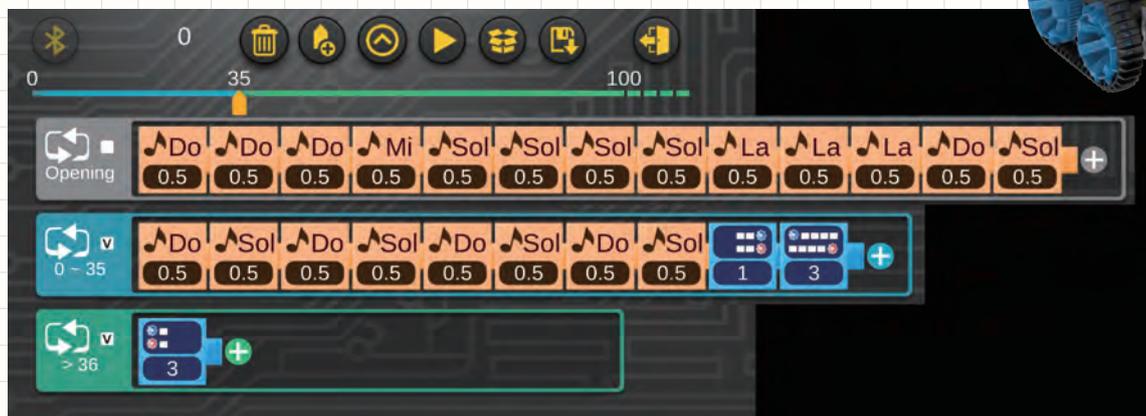

PROGRAMMING NOTES

DEMO PROGRAM:

Program 21

OPENING SEGMENT:

SEGMENT 0-35:








SEGMENT >36:



Conveyor Belt Model 6








Parts Needed ● ● ● Medium

1 x7	2 x50	4 x2	6 x6	7 x1	8 x2	9 x3	10 x1	11 x2	12 x2	13 x4
14 x3	15 x2	16 x3	17 x3	18 x2	19 x2	20 x2	21 x1	22 x1	23 x2	24 x2
28 x3	29 x2	30 x2	31 x2	33 x2	34 x2	35 x1	36 x1	37 x1	38 x2	39 x4
40 x4	42 x4	43 x2								

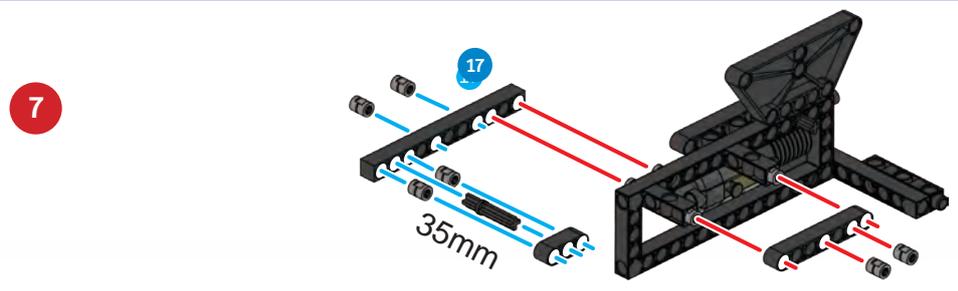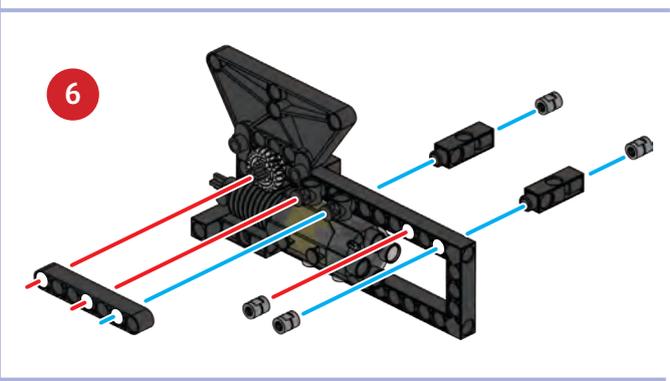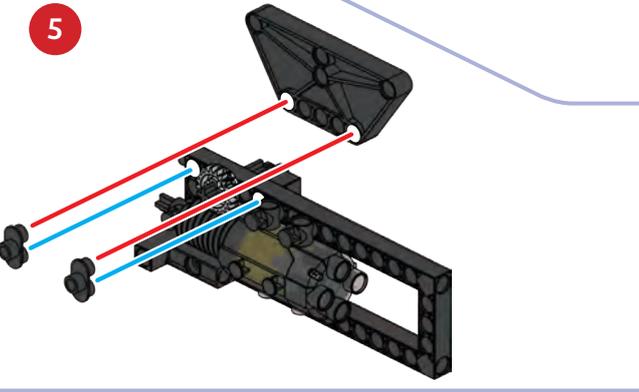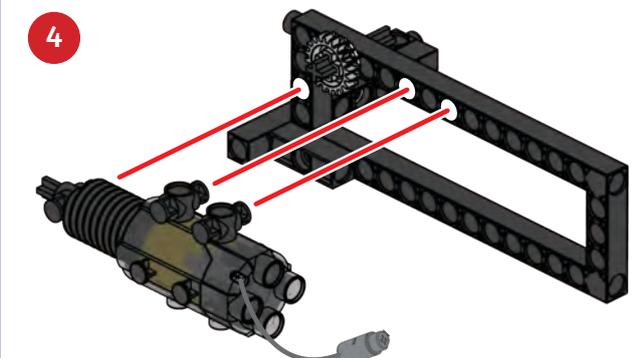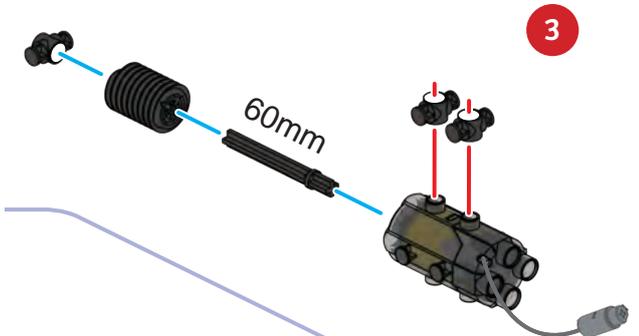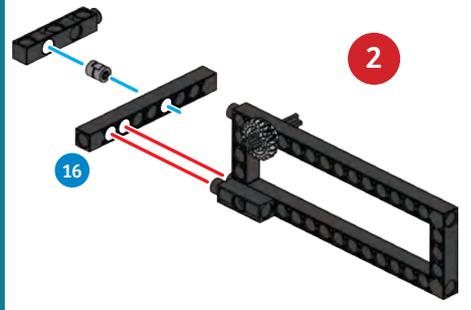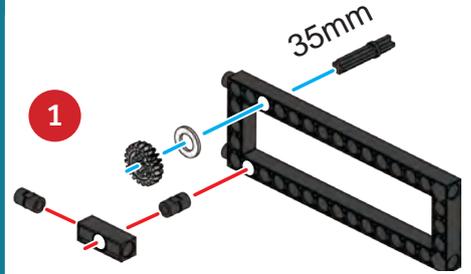








Model 6 Conveyor Belt

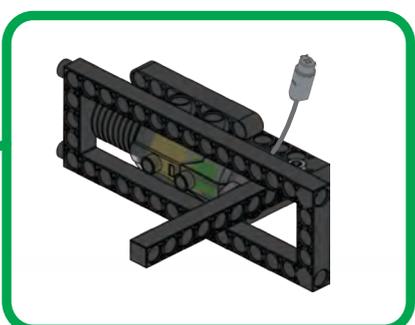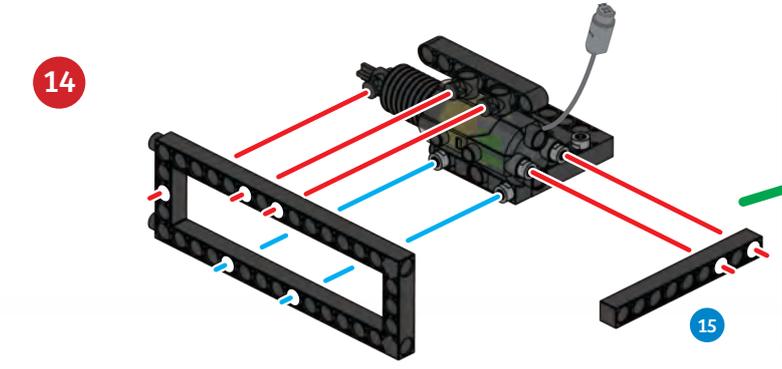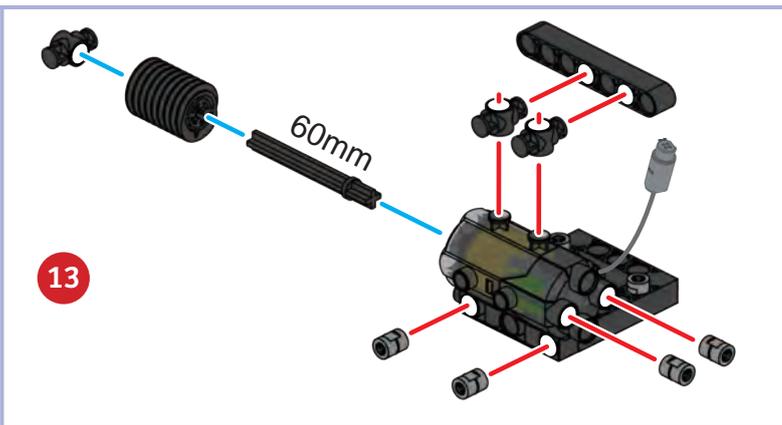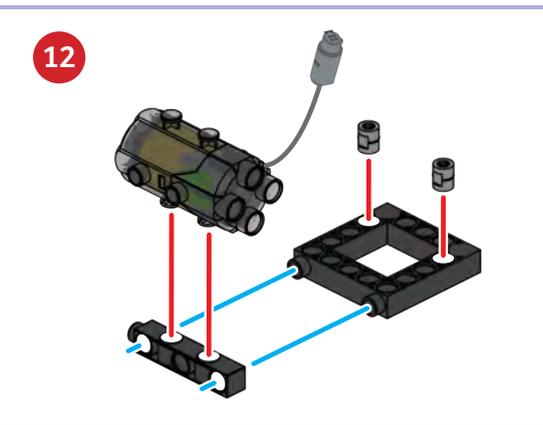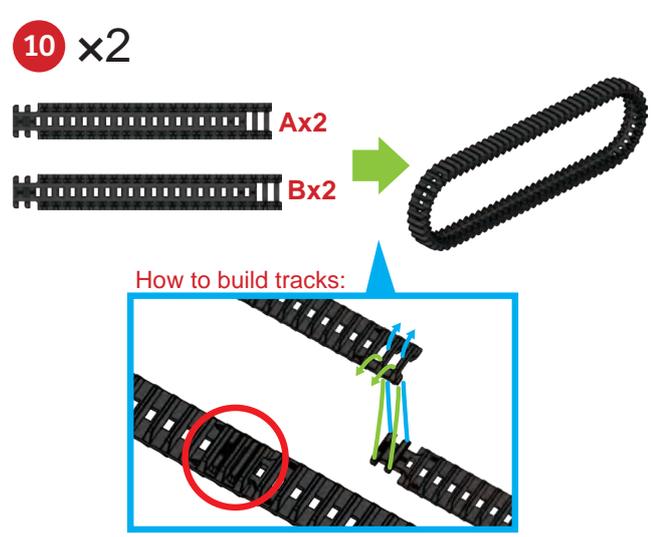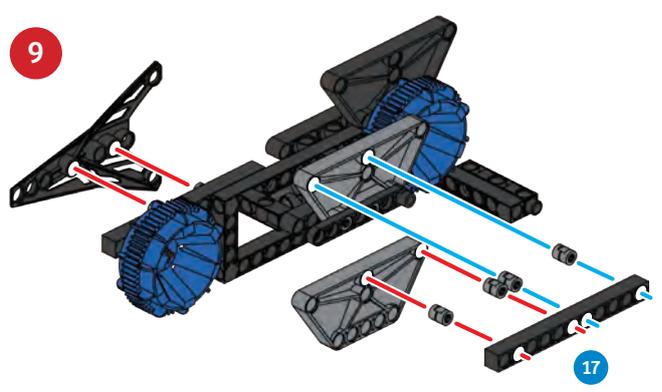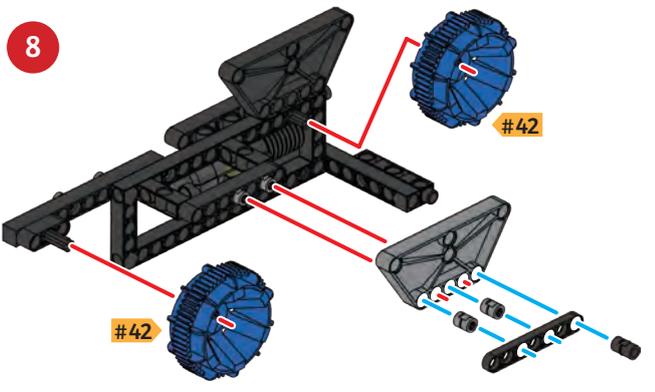




Model 6 Conveyor Belt

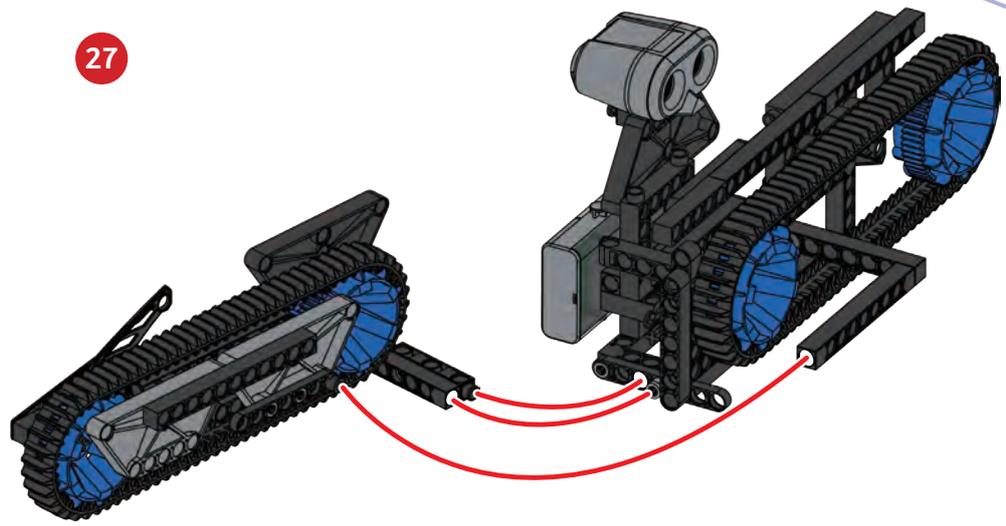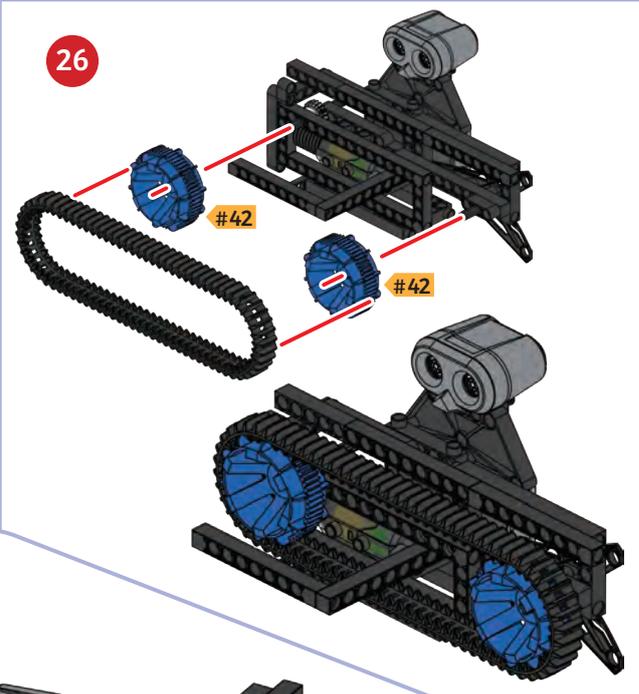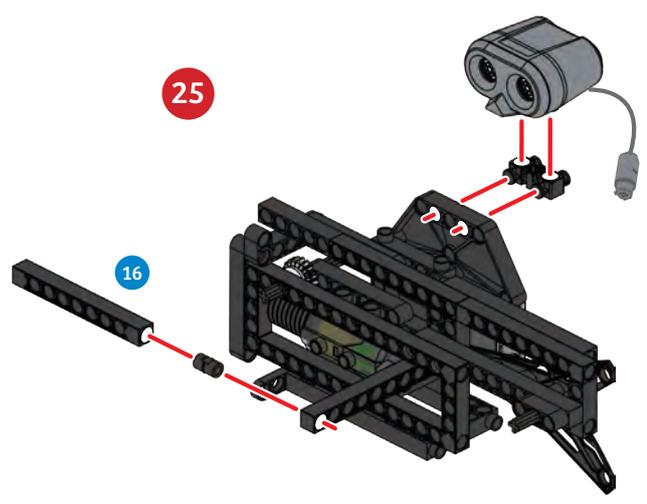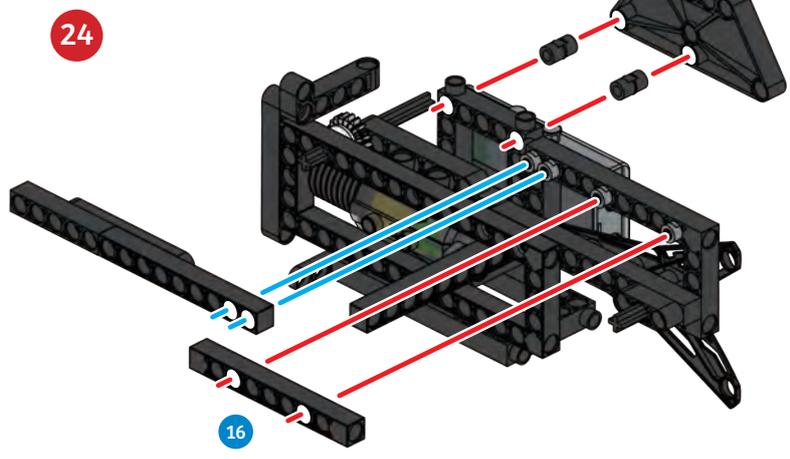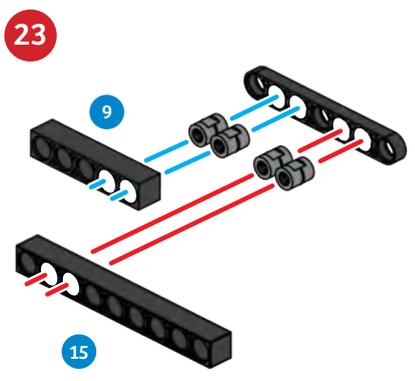




Conveyor Belt Model 6

28

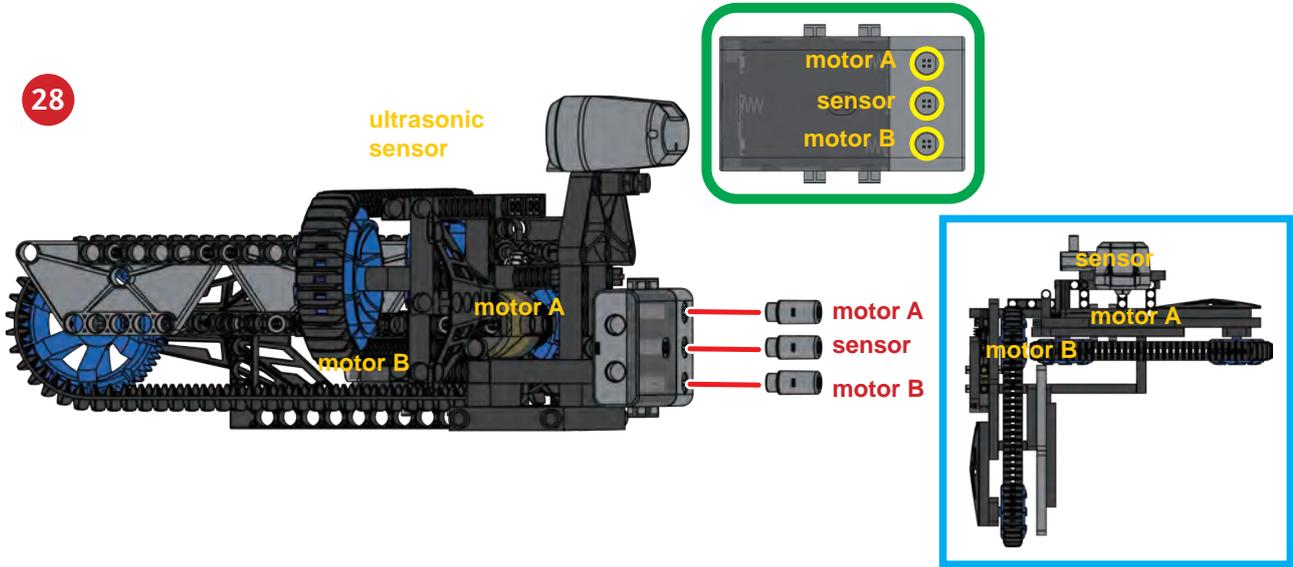

29

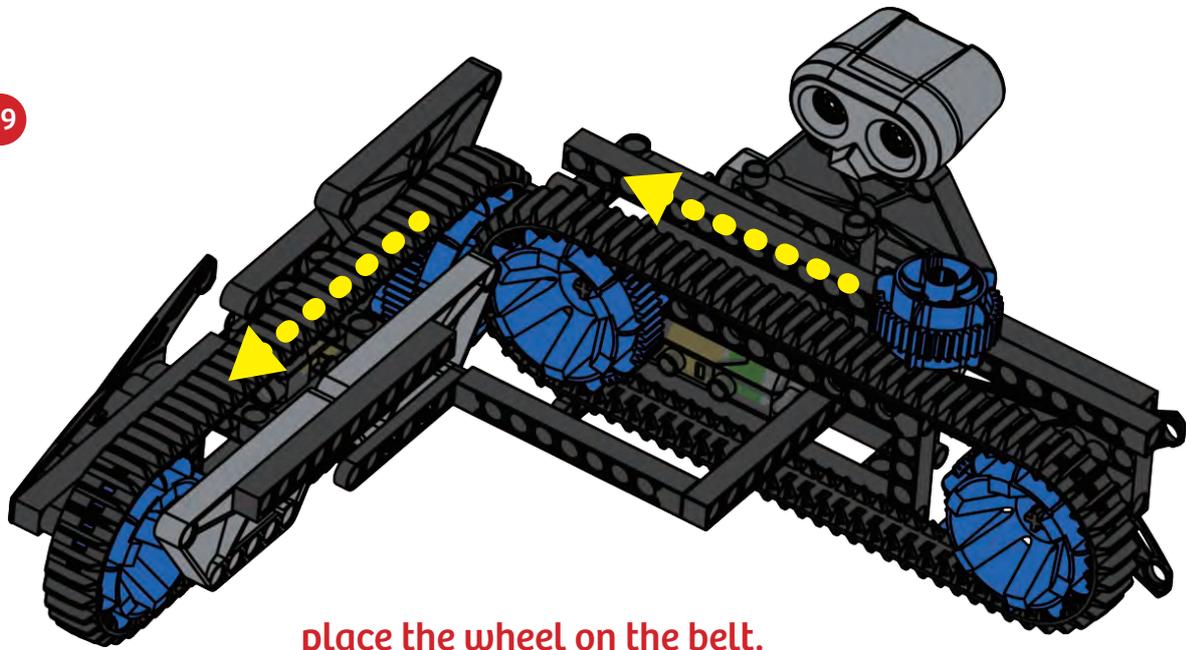

place the wheel on the belt.

Done!




Programming



SAMPLE PROGRAM FOR THE CONVEYOR BELT

The conveyor belt is able to move objects along its two belts, changing the direction in which the object is moving in the process. Before running the program, place a large wheel frame on the belt in front of the ultrasonic sensor. When the program is run, the belt will move the large wheel frame forward, pause for a second, and then continue to move the large wheel frame onto the second track. The second track will then move the large wheel frame forward until it falls off.

This program is preloaded in the app under Program 22. Test it out and write down how the robot behaves for each program segment below.

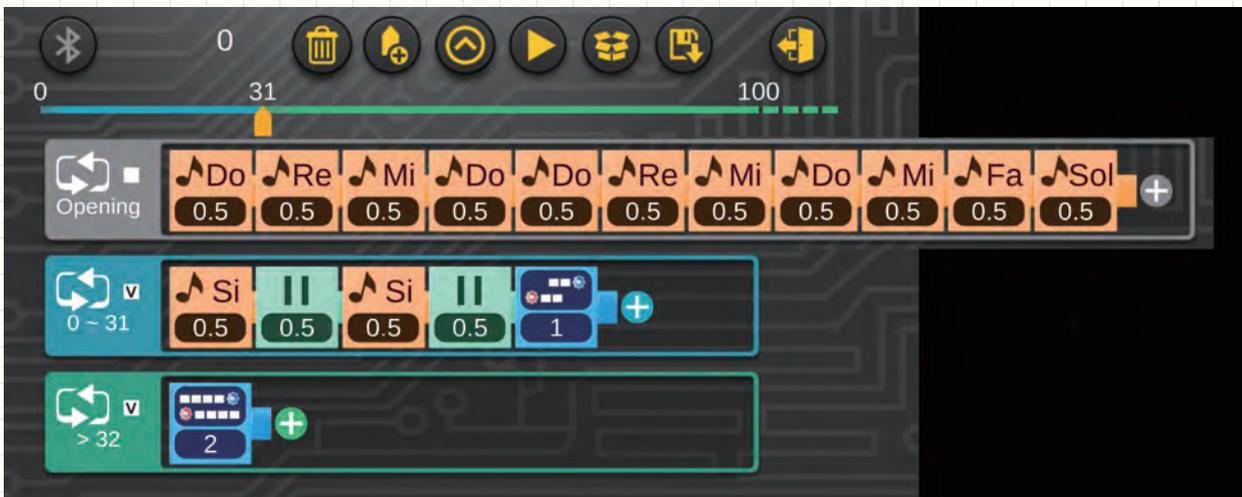

PROGRAMMING NOTES

DEMO PROGRAM:


Program 22

OPENING SEGMENT:

SEGMENT 0-31:

SEGMENT >32:








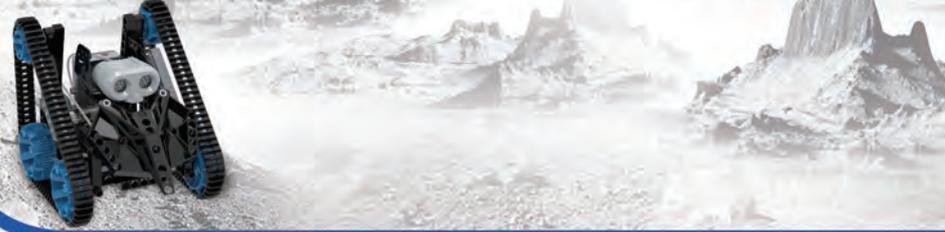


Escalator Model 7

Parts Needed






● ● ● Hard

1	2	4	6	8	9	10	11	12	13	14
x15	x59	x4	x10	x2	x3	x2	x2	x3	x4	x4
15	16	17	18	19	20	21				
x2	x3	x3	x2	x2	x2	x2				
22	23	24	25	26	27	28	29			
x2	x2	x2	x1	x1	x2	x4	x2			
31	33	34	35	36	38	39				
x2	x2	x2	x1	x1	x2	x4				
40	41	42	43	44	45					
x4	x2	x2	x4	x4	x4					

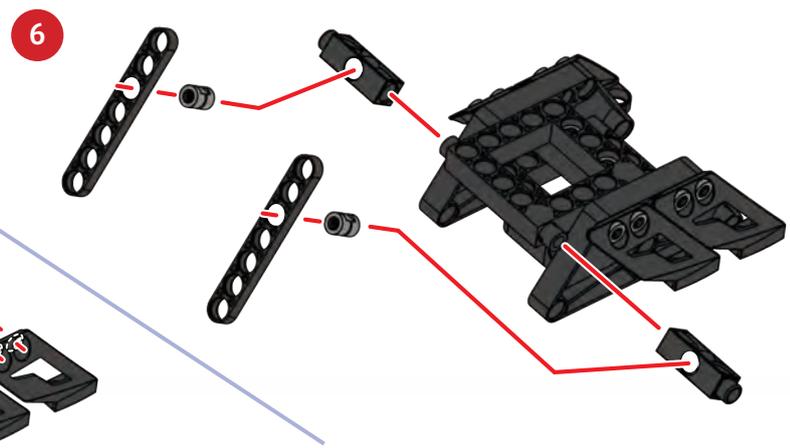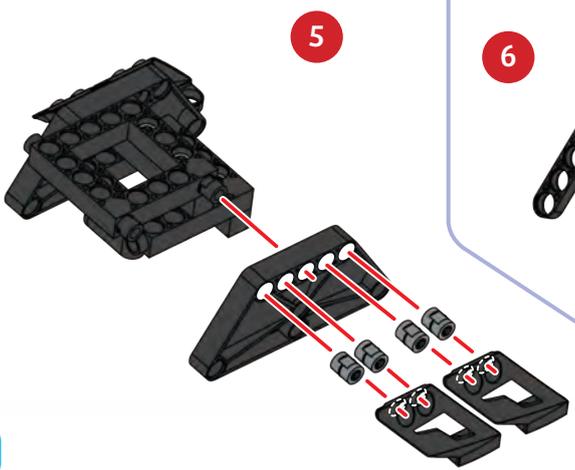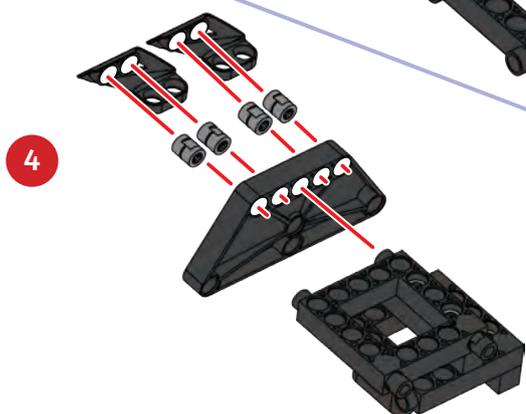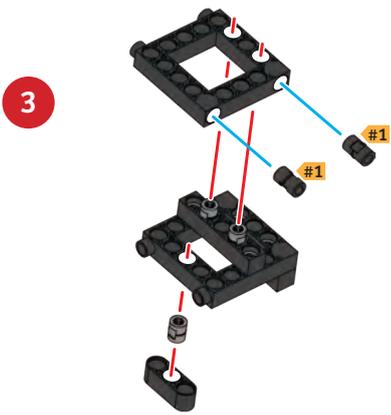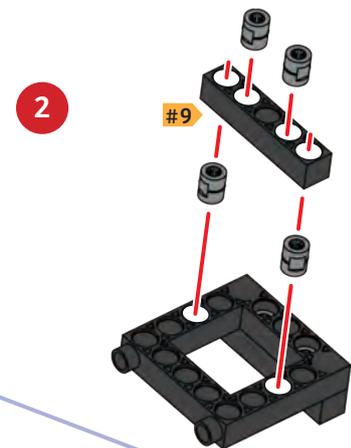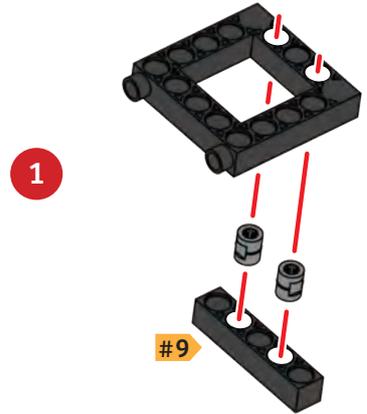










Model 7 Escalator

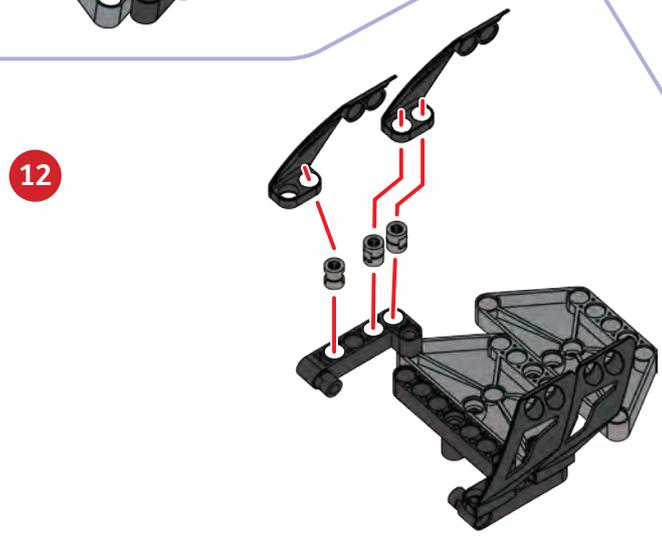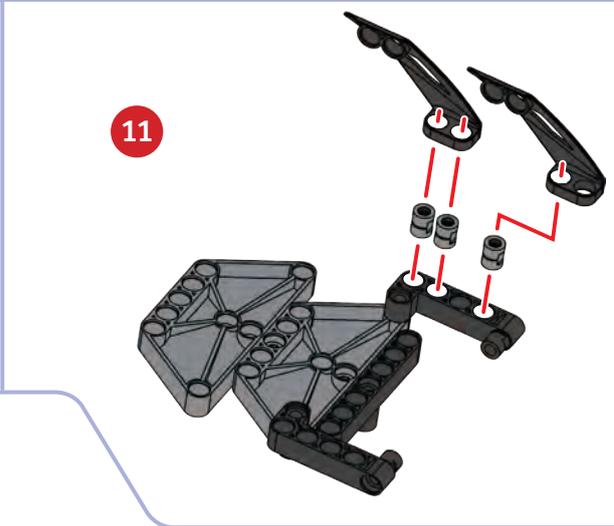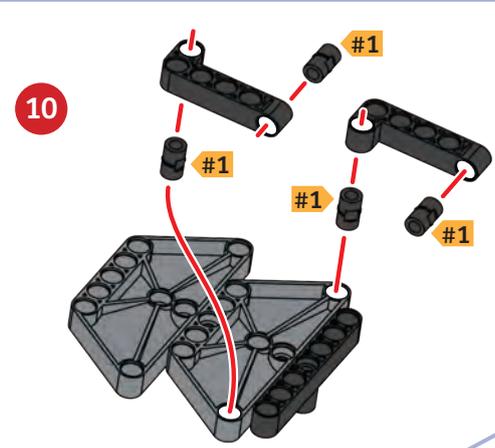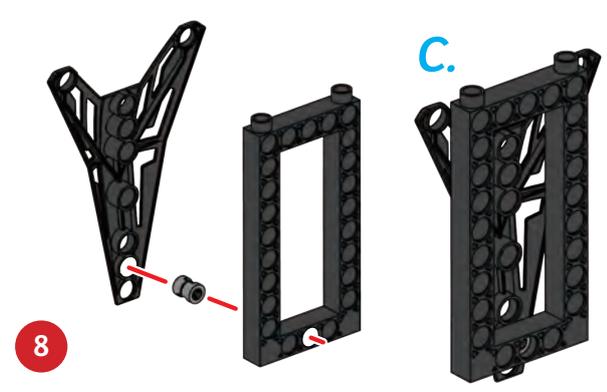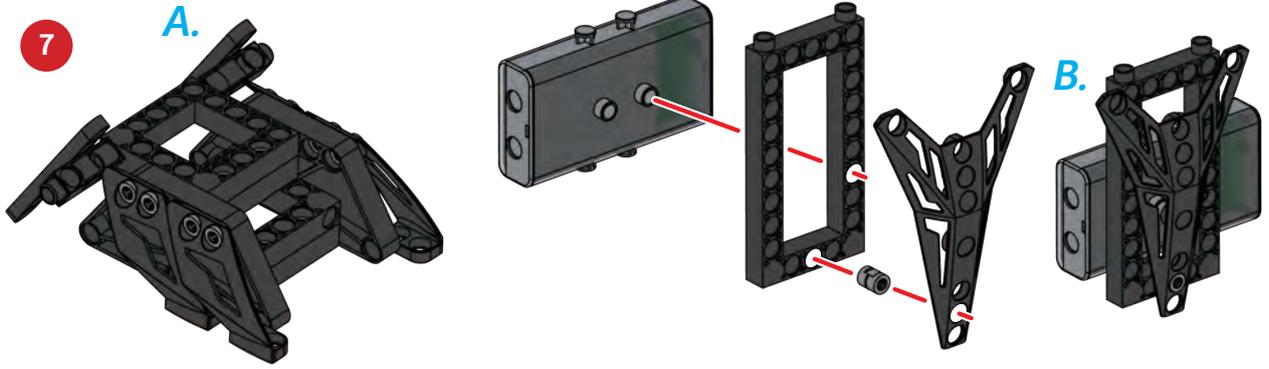




Escalator Model 7

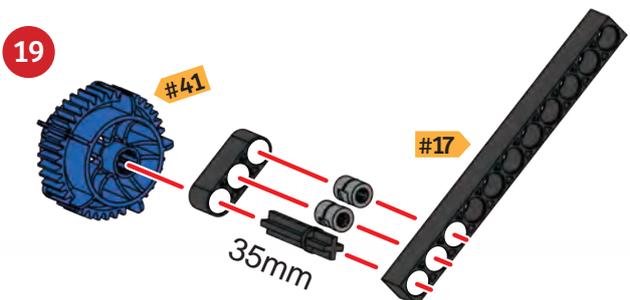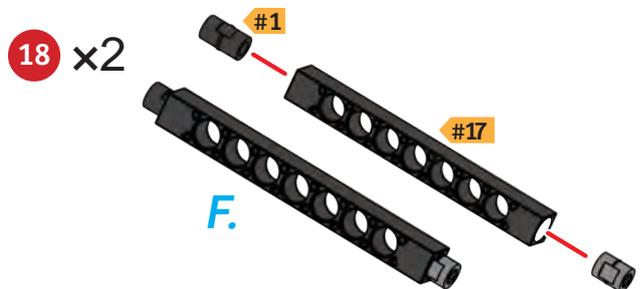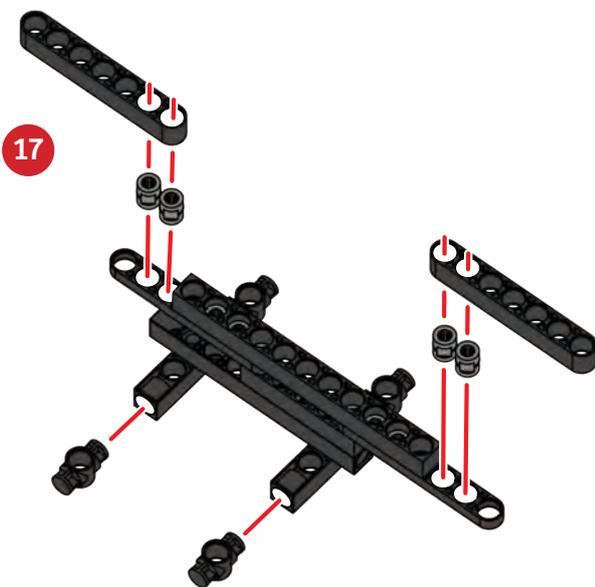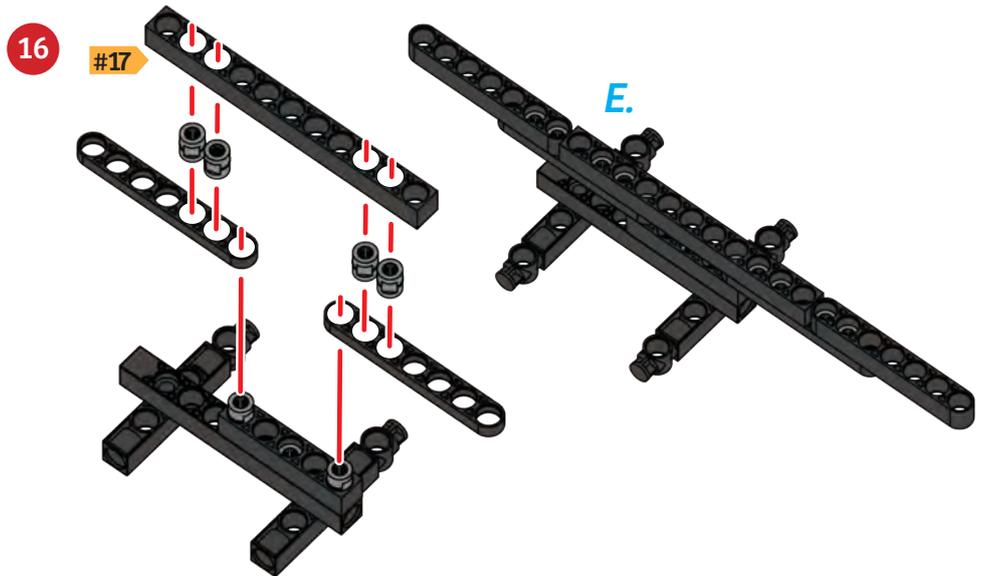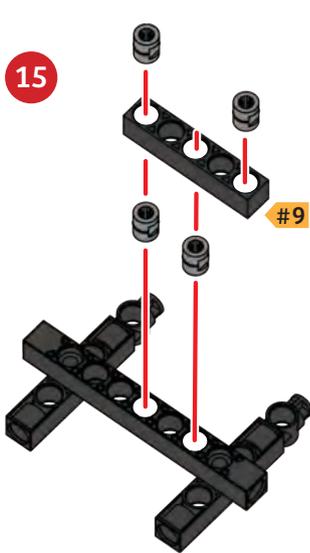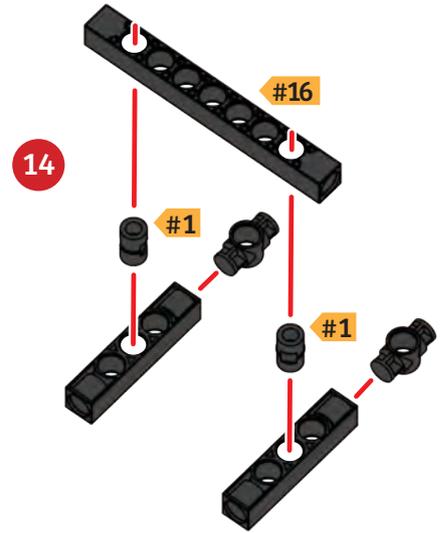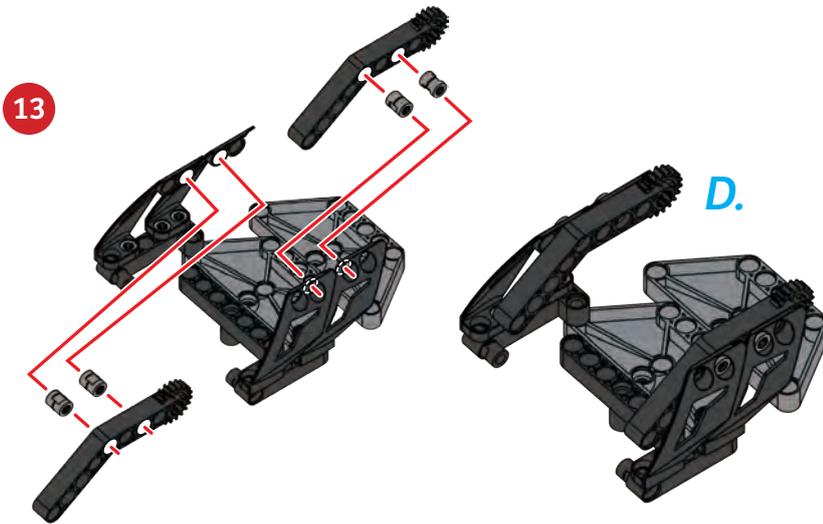




Model 7 Escalator


20 x2

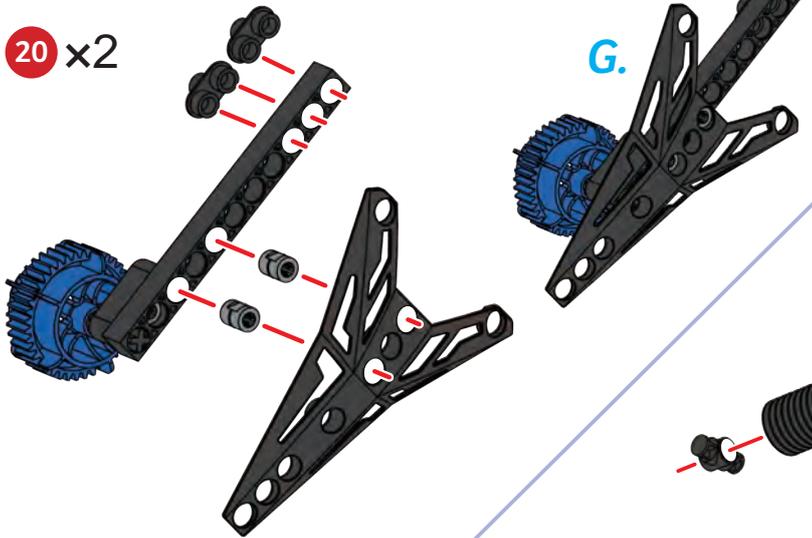


21

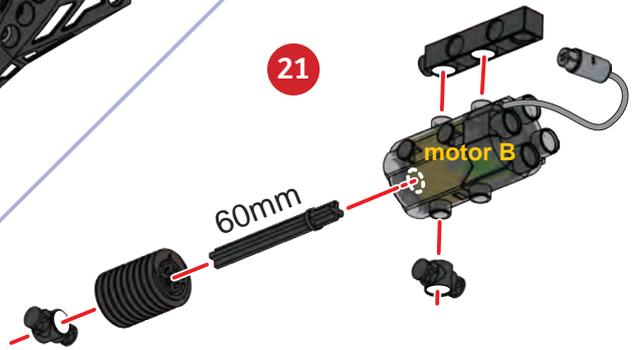


22

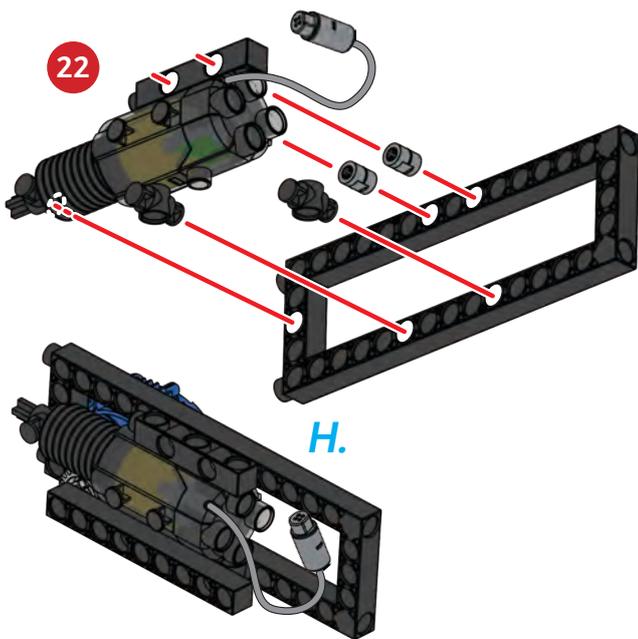


23

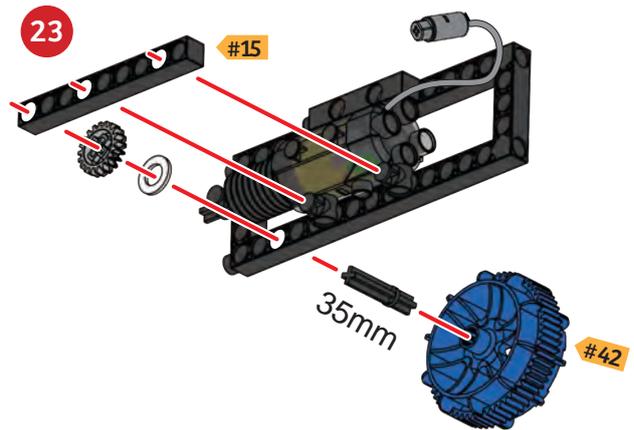


25

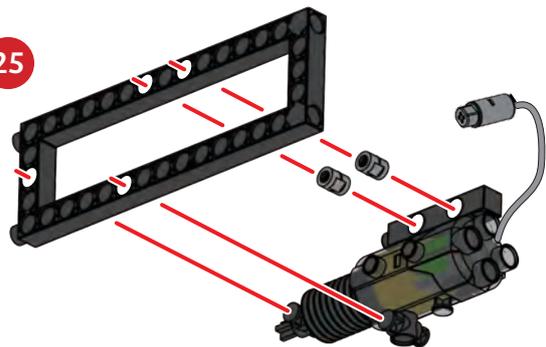

24




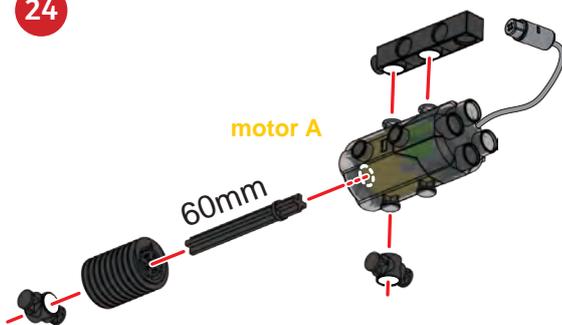


26

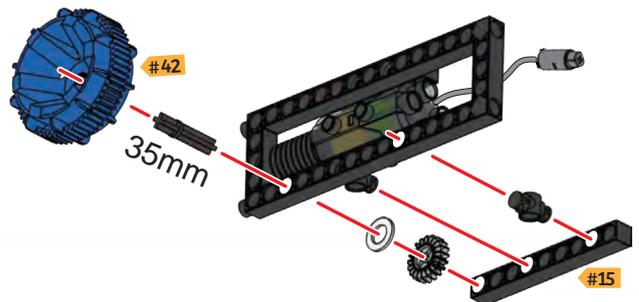








Escalator Model 7

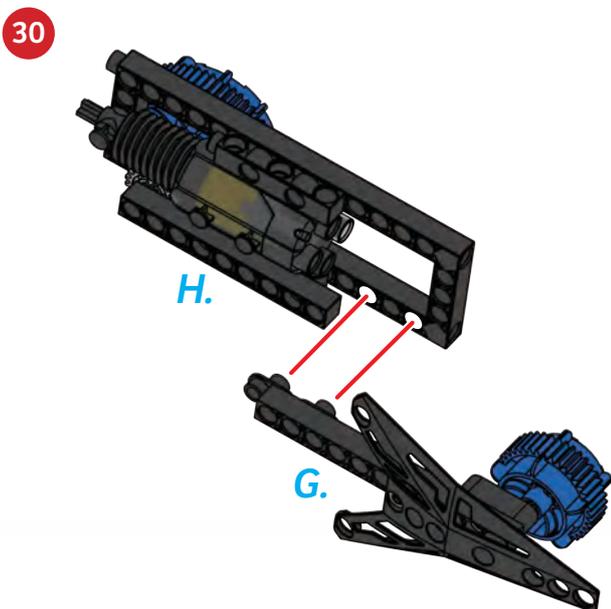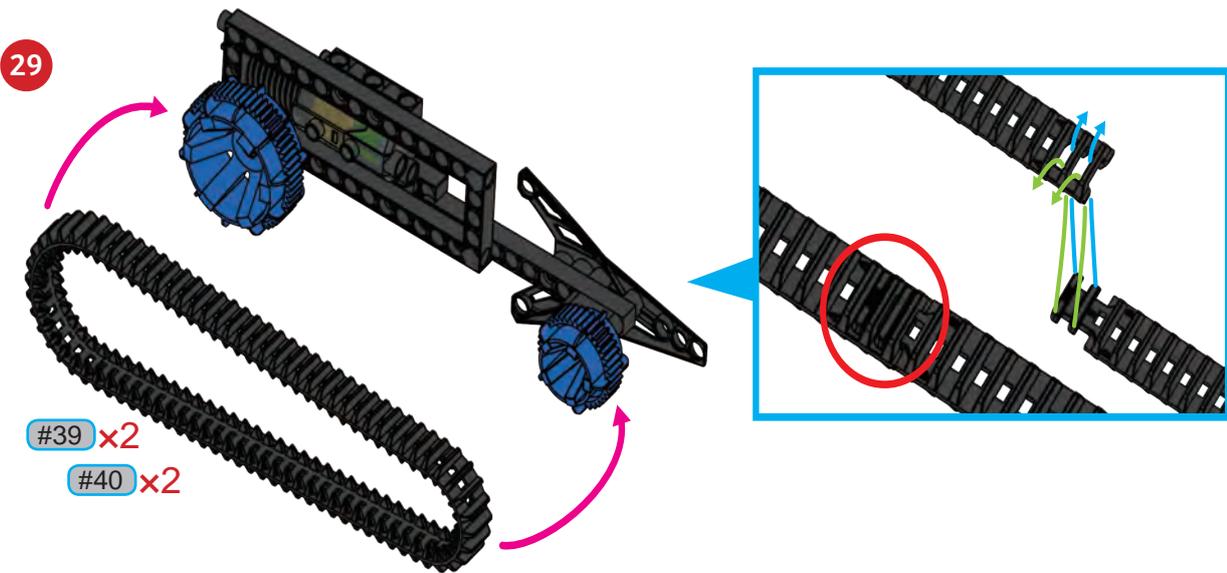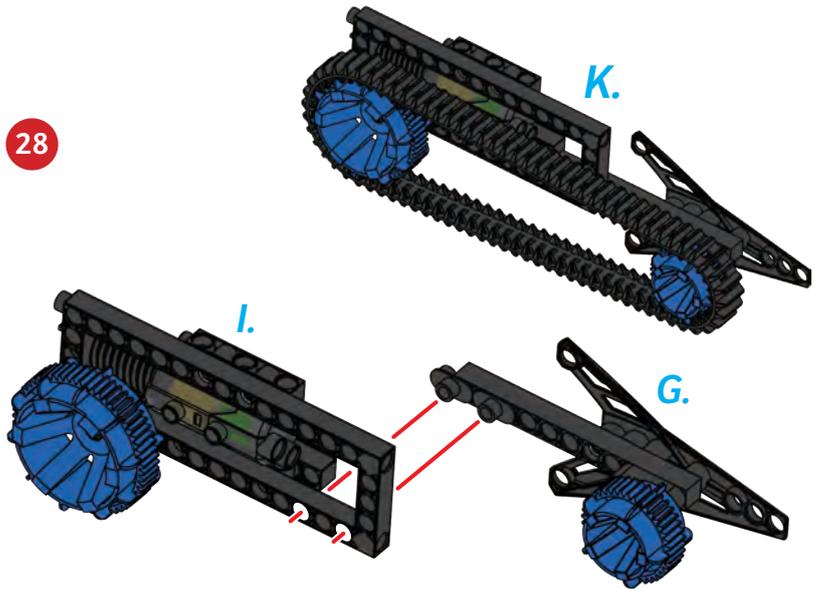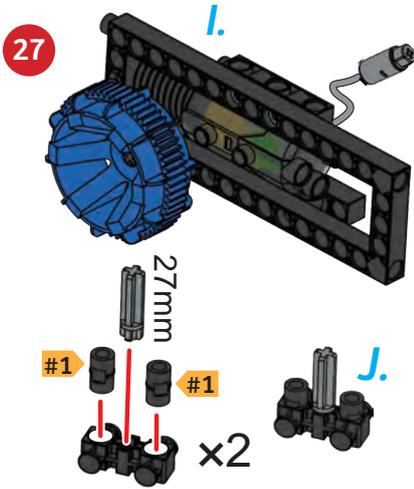




Model 7 Escalator

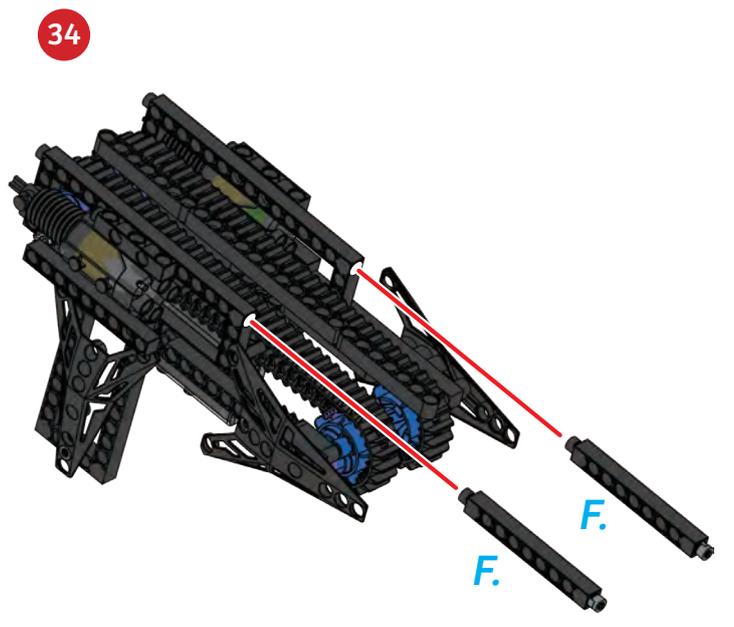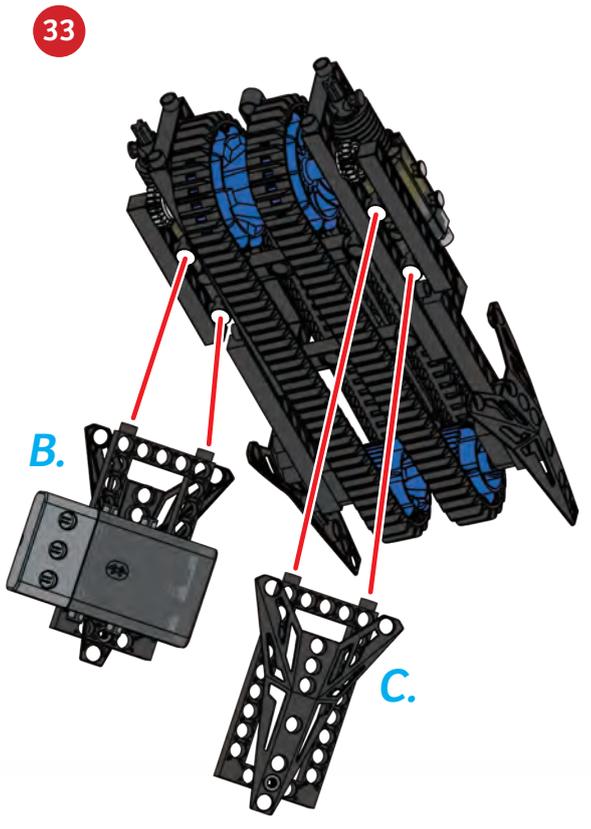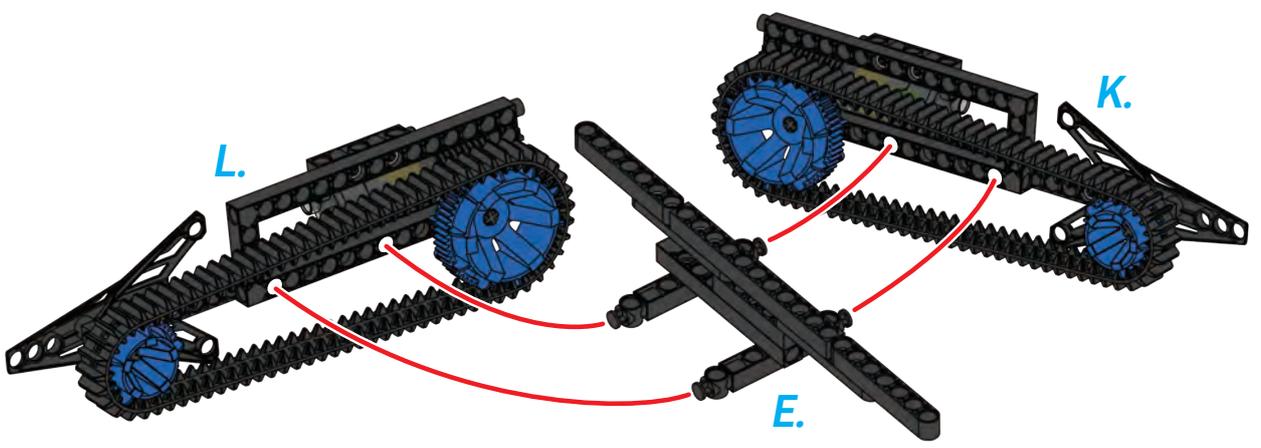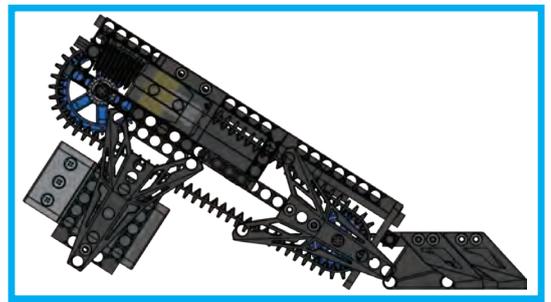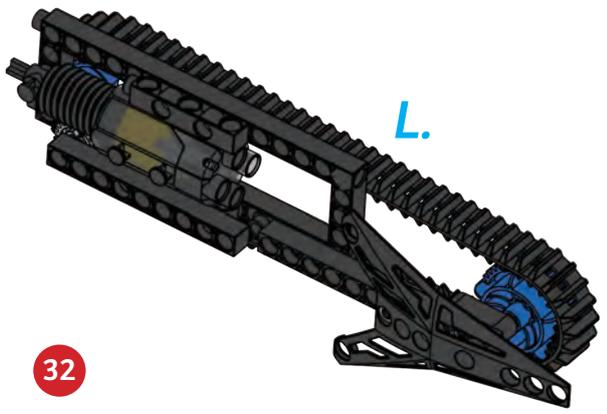




Escalator Model 7


35

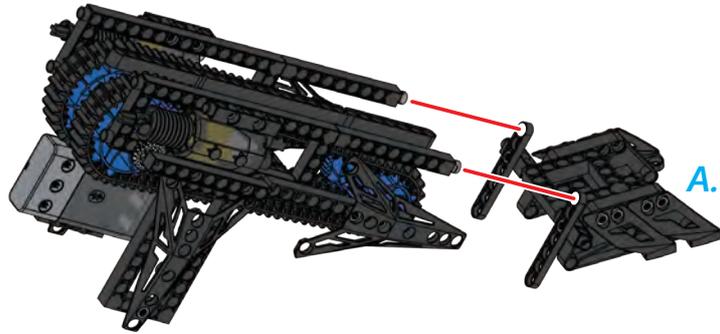

36

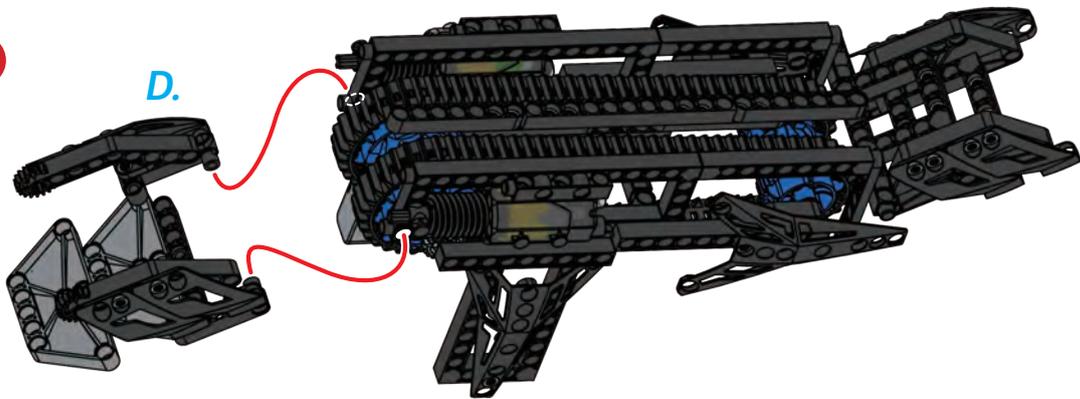


37

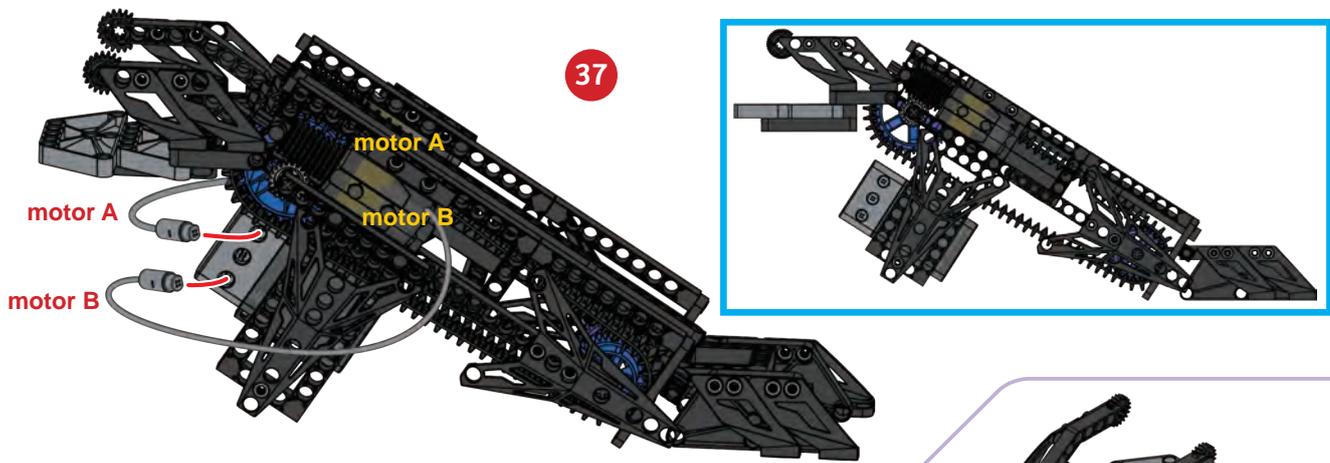

38

Done!

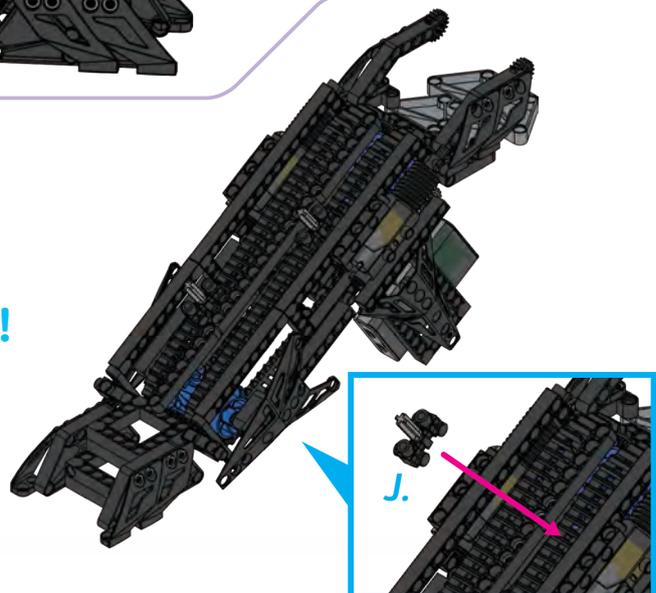




Programming

SAMPLE PROGRAM FOR THE ESCALATOR

The escalator is able to move objects up and down its tracks just like an escalator in a building. Before running the program, place one “Part J” on the bottom section of both tracks. When the program is run, the tracks will turn, moving the part with them.

This program is preloaded in the app under Program 23. Test it out and write down how the robot behaves for each program segment below.

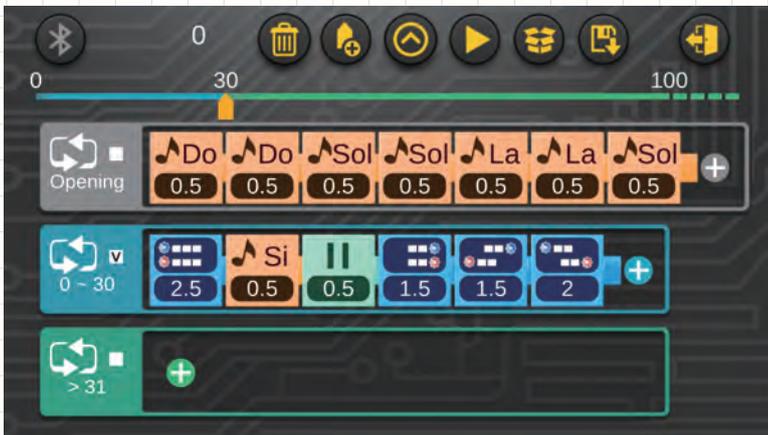

PROGRAMMING NOTES


DEMO PROGRAM:

Program 23

OPENING SEGMENT:

SEGMENT 0-30:









SEGMENT >31:

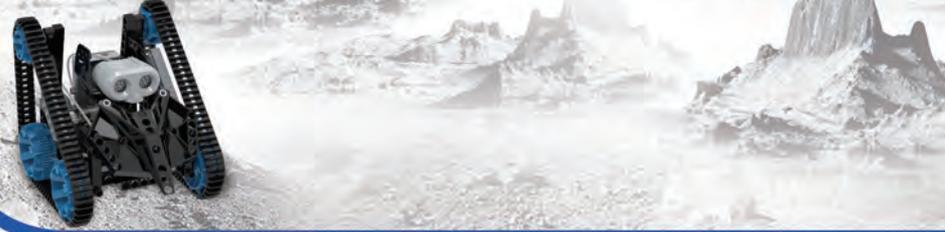

Tundra Explorer Model 8









Parts Needed


● ● ● Medium

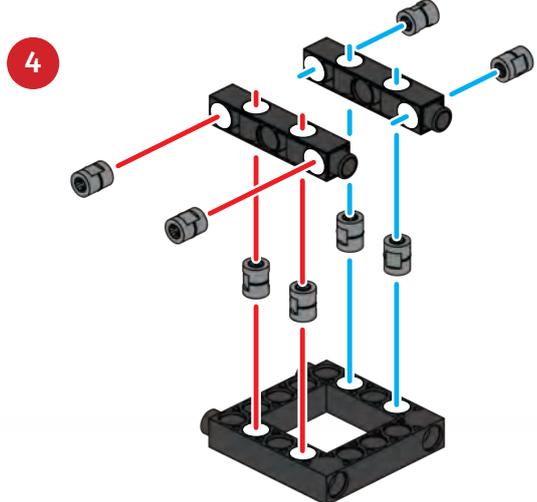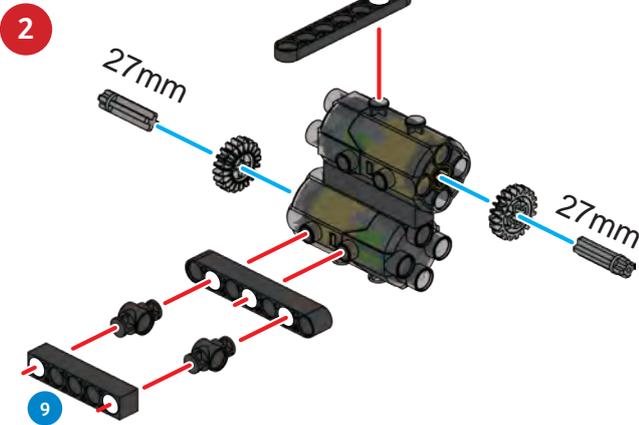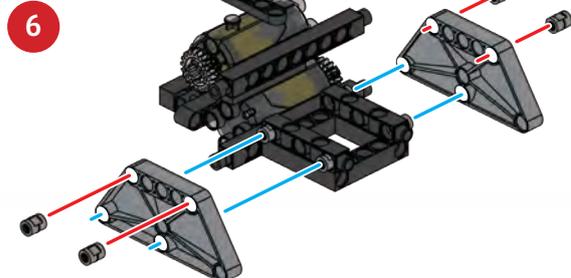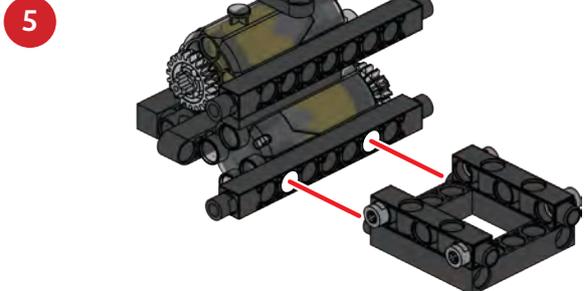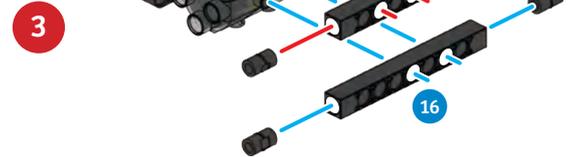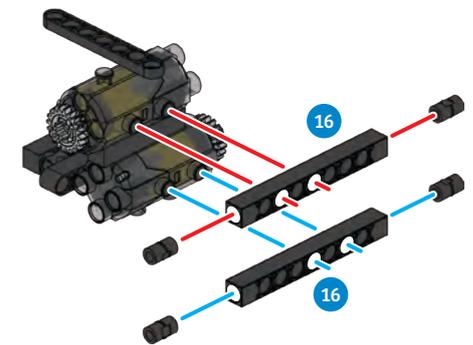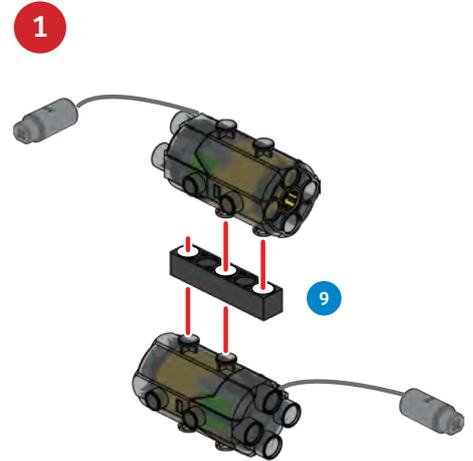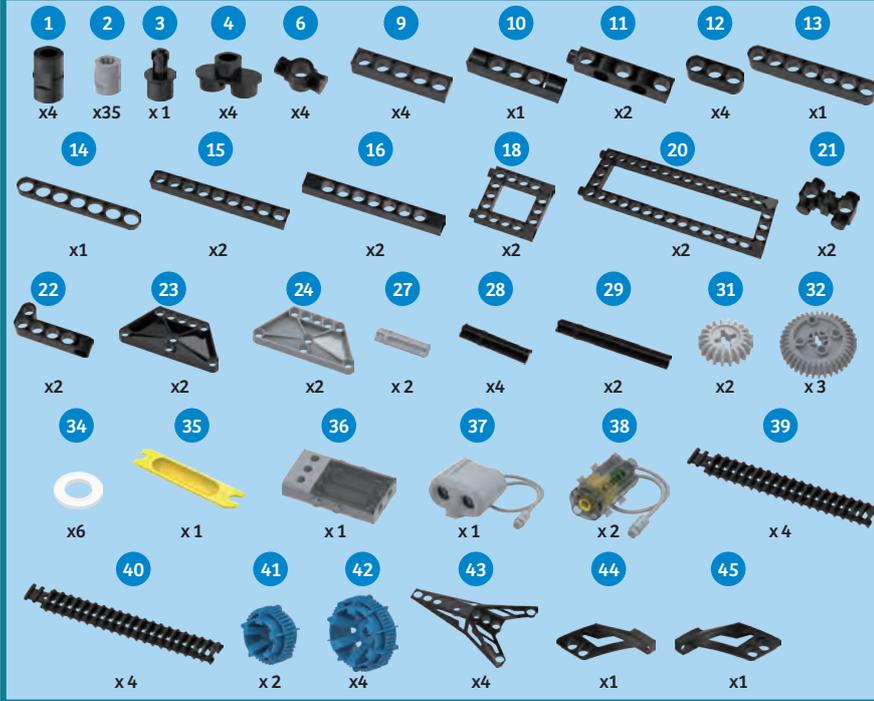




Model 8 Tundra Explorer

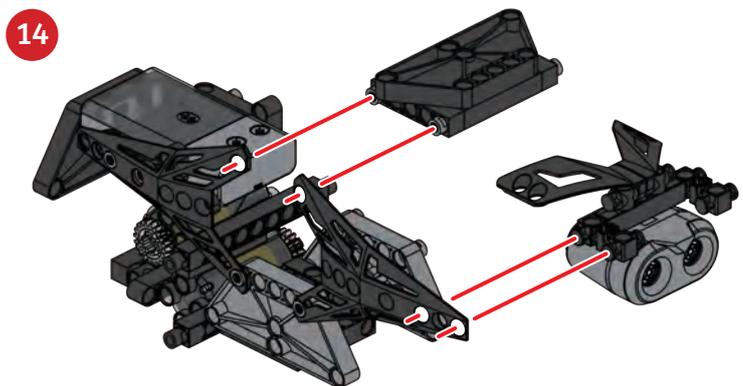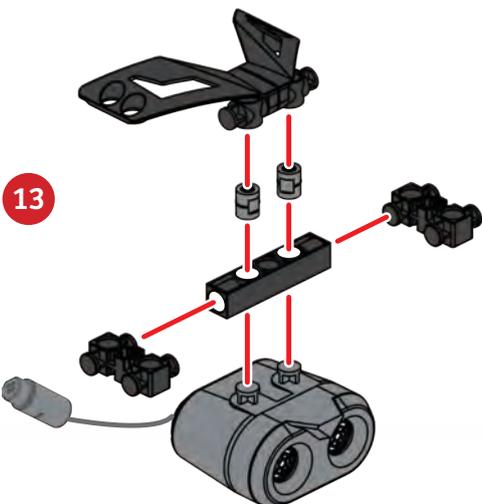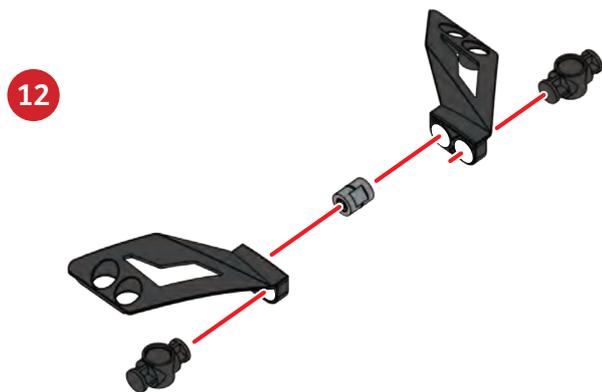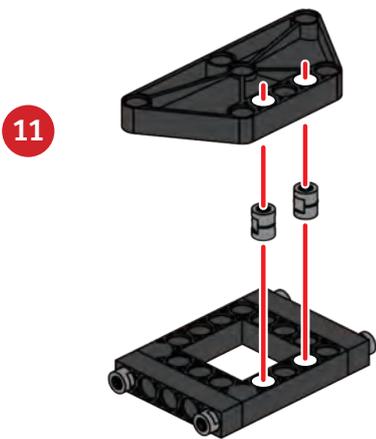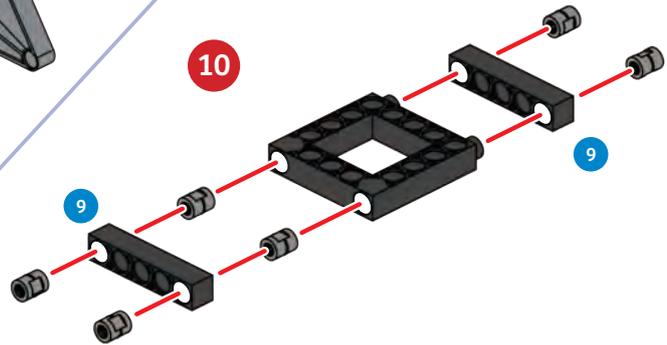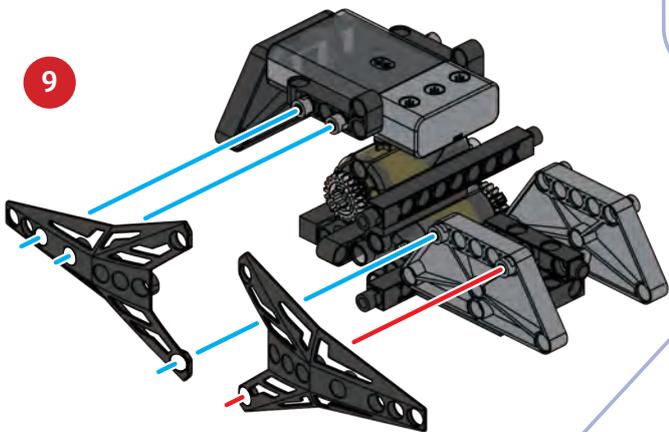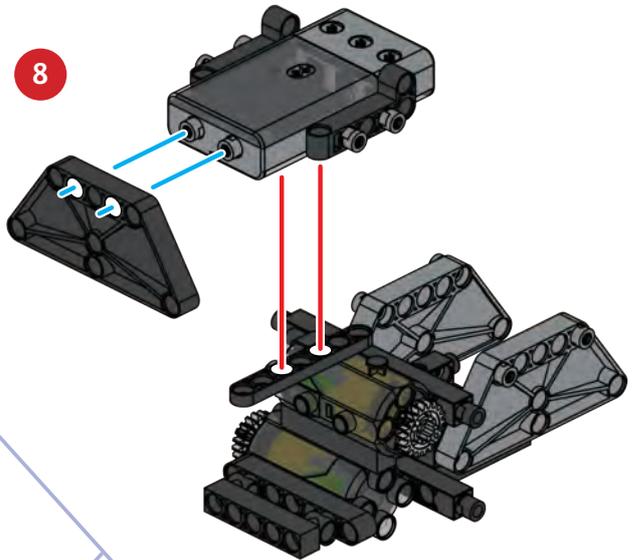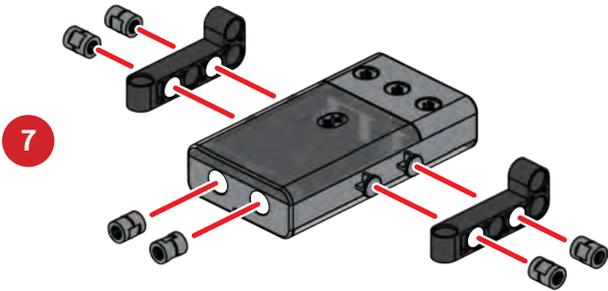

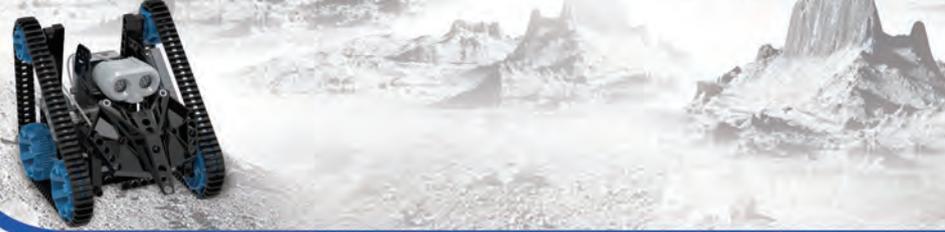


Tundra Explorer Model 8

15

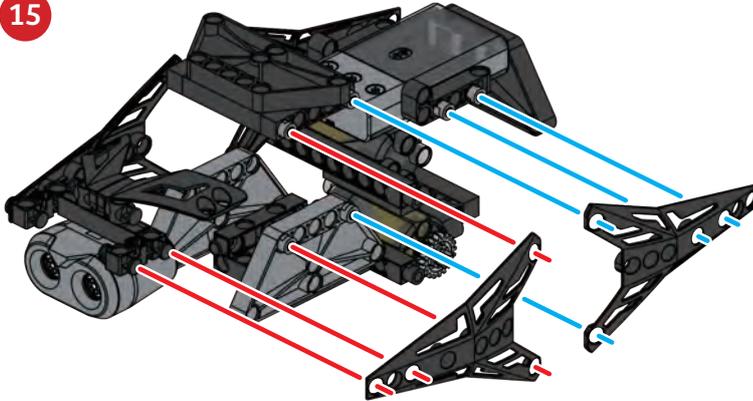


16 x2

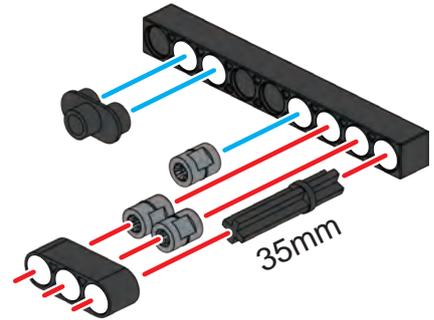

35mm

18

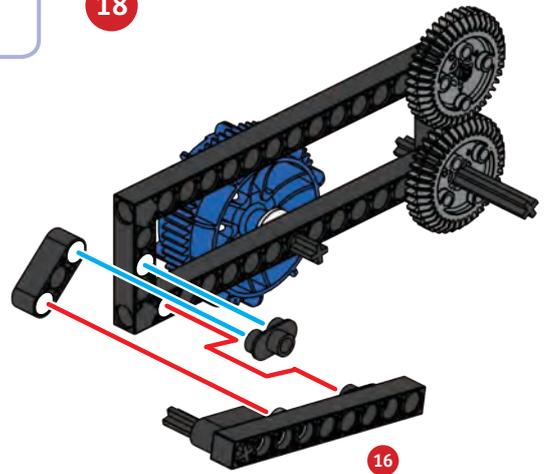


16

#42


60mm

17

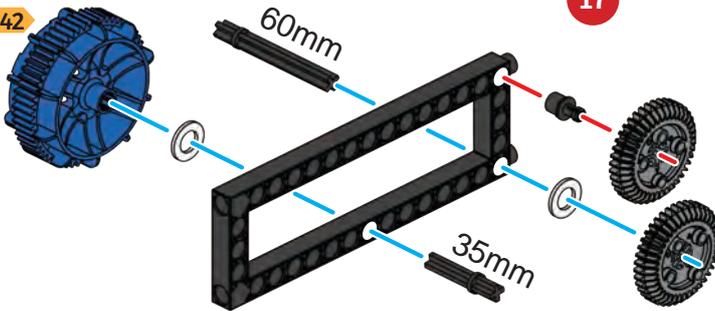

35mm


19

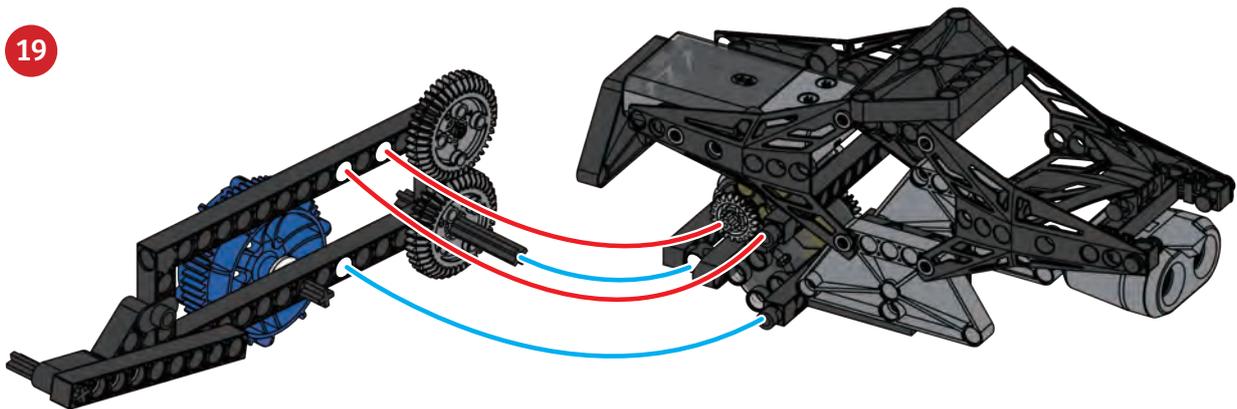

20


60mm

42

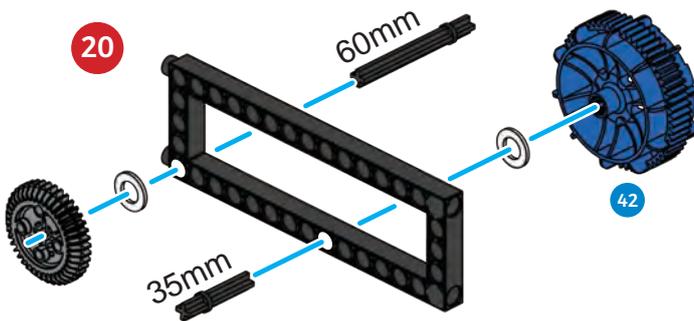

35mm

21


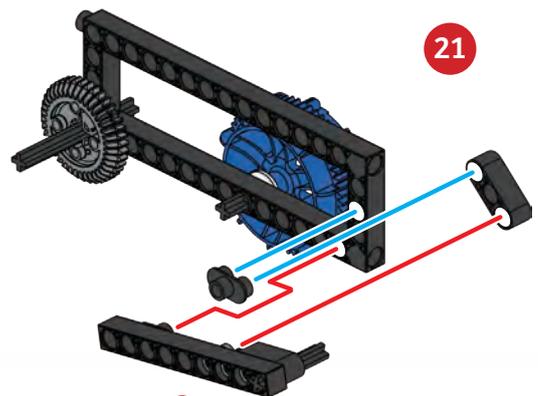


16




Model 8 Tundra Explorer


22

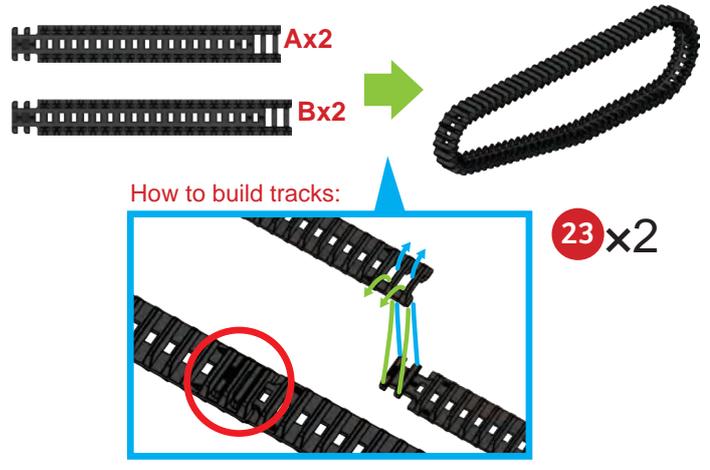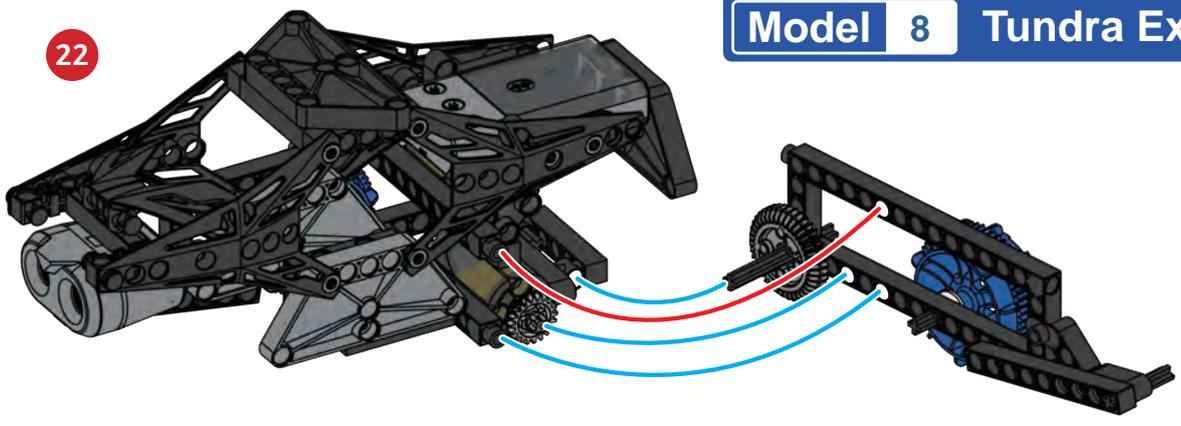


24

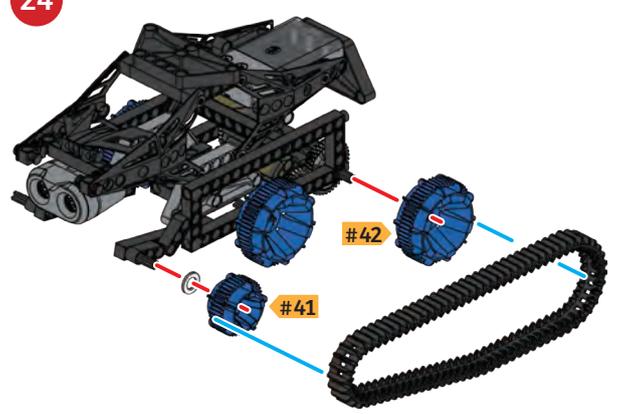


25

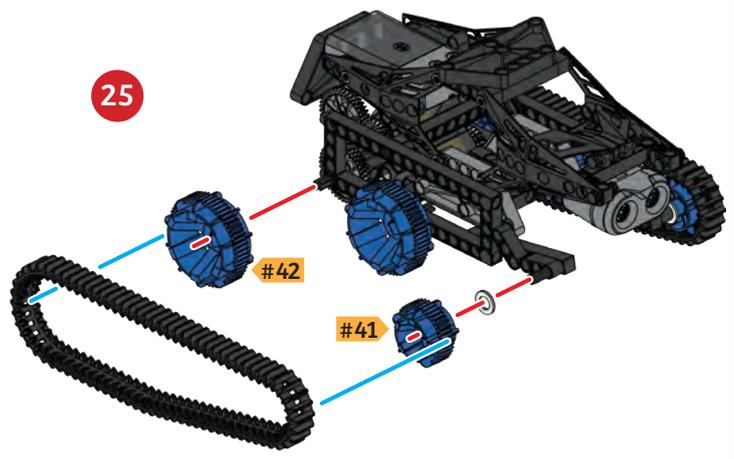

26

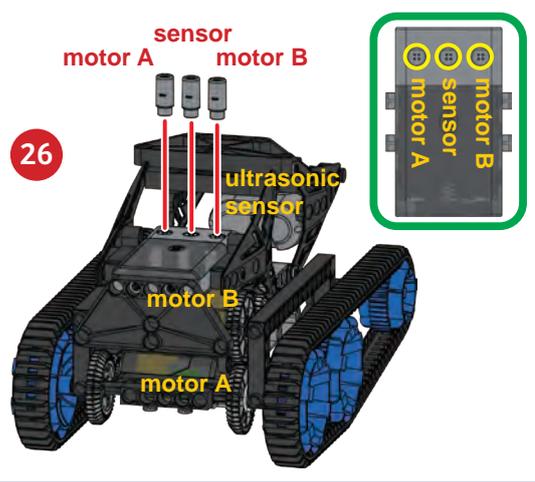

27

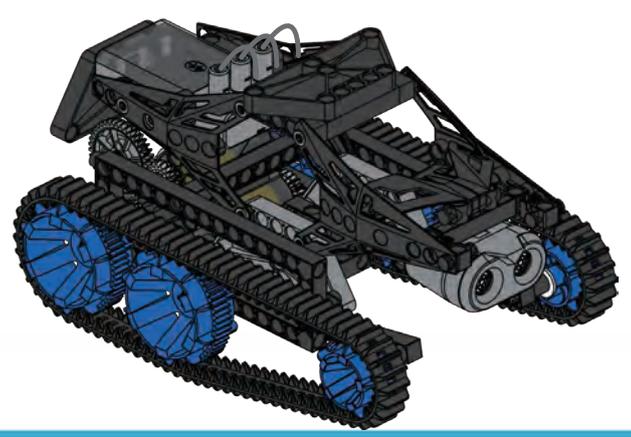

Done!



Tundra Explorer Model 8



SAMPLE PROGRAM FOR THE TUNDRA EXPLORER

The tundra explorer is able to use its ultrasonic sensor to navigate obstacles. Set up an obstacle course using objects like books and toys in a long hallway for the tundra explorer to navigate through. When the program is run, the tundra explorer will move forward until its ultrasonic sensor detects an object. In response, the program will stop the motors, and then run the motors again in the reverse direction, backing the tundra explorer away from the object. The program will then turn one motor off momentarily, turning the tundra explorer. The tundra explorer will then turn both motors on so that it moves forward in a new direction.

This program is preloaded in the app under Program 24. Test it out and write down how the robot behaves for each program segment below.



DEMO PROGRAM:
Program 24

OPENING SEGMENT:

PROGRAMMING NOTES

SEGMENT 0-25:

SEGMENT >26:





Welcome to our newly redesigned Gigo website!

- We now offer four language options (English, Traditional Chinese, Simplified Chinese, Russian).
- Many brilliant videos for product introduction.
- Online product brochures to facilitate timely browse.

 繁體中文

 简体中文

 Русский



Please browse website



Gigo website



 Gigo FB

Manual online browsing

Video Tutorial

GENIUS TOY TAIWAN CO., LTD.
www.gigotoys.com

© 2020 Genius Toy Taiwan Co., Ltd. ALL RIGHTS RESERVED

R21#7412R